

Direct Core Monitoring Optical Fiber Fusion Splicer

TYPE-Q101-CA

Guide to operation



IMPORTANT SAFETY PRECAUTIONS

This product has been designed and manufactured to assure personal safety. Improper use can result in fire, electric shock or injury to persons. Please read and observe all warnings instructions given in this operation manual.

Use your splicer only for its intended purpose.

◆ The meaning of these symbols

In the product and this operation manual, symbols are used to highlight warnings and cautions for you to read so that accidents can be prevented. The meanings of these symbols are as follows:

○Symbol used in the product

	This symbol, where it appears on the unit, indicates that hazardous voltage is present inside of the splicer.
---	---

○The meaning of these symbols

	This symbol indicates a warning, caution, or danger and alerts you important instructions have been included on the product or in the manual.
	This symbol indicates actions that are prohibited.
	This symbol indicates actions that must be taken.

○The meaning of Warning and Caution

 Warning	This symbol indicates explanations about extremely dangerous matters. If users ignore this symbol and handle the splicer the wrong way, serious injury such as fire or electric shock, or death could result.
 Caution	This symbol indicates explanations about dangerous matters. If users ignore this symbol and handle the splicer the wrong way, bodily injury and damage to the equipment could result.

Be sure to read all the following warnings and cautions before use.



<Setting up and using splicer>

	<ol style="list-style-type: none"> 1. This fusion splicer performs an arc discharge. Do not use the splicer in a hazardous location in which inflammable gas can generate or only electrical apparatus for explosive gas atmosphere can be used. 2. Never use spray cleaners such as Freon or Flammable gas on the splicer. Decomposition of arc by heat will cause toxic gas, or abnormal arc may result in damage or fire.
---	--



3. Do not use and store the splicer out of the locations defined in a brochure and this manual. Doing so can cause splicer malfunction or deterioration, resulting in fire or electric shock.
4. To reduce the risk of fire, electric shock or malfunction, do not allow the splicer to be exposed to rain and get liquid such as water or a metallic object inside the splicer. Doing so can cause fire, electric shock or malfunction by shorting out internal components.
5. Never use the battery pack, AC adapter and battery charger for the machines other than the specified splicer. Doing so can cause these items to damage, resulting in fire or heat generation.
6. Do not make mechanical or electrical modifications to the splicer since this may expose you to dangerous voltage or other hazards.
7. Do not touch the electrodes during and after arc discharge. Doing so can cause personal injury or electric shock.
8. The heating plate of the heat shrink oven may be hot during heating. Do not touch the protection sleeve directly after heating. Doing so can cause burn. A protection sleeve may also be hot after heating. Handle with care.
9. Do not operate the splicer in the rain. Doing so can cause AC adapter or battery pack to be short-circuited.
10. Do not expose the splicer to extremely high temperature and high humidity or to direct sunlight for prolonged periods.
11. Do not continuously use the heat shrink oven for long hours, keeping it high temperature. Doing so can cause heat shrink oven to malfunction.
The following case is the exception for repairing and replacing the product free of charge:
The Heating duration is set to a long time (e.g. 180 sec.) and the Finish temperature is set to a high temperature (e.g. 200 °C). The heat shrink oven is used for long hours by continuing to press the Heat key shortly after the heat cycle is completed.
12. Only use alcohol to clean the splicer. To prevent malfunction and damage, do not use any other kind of chemicals.
13. Never use spray cleaners such as Freon or flammable gas on the splicer. Heat by arc can cause chemical reactions to occur to gas component, which will deteriorate a microscope lens, resulting in a loss of splicing capability.
14. Parts that compose the heat shrink ovens might become high temperatures. When those parts are damaged, do not use it and contact our service center.
15. Because it is likely to injure by shards of glass when the monitor is damaged, do not use it and contact our service center.
16. When parts that compose this product and the accessory (battery pack, AC adaptor, and power cord, etc.) are damaged, do not use it and contact our service center.
17. Do not use this product near the electronic equipment that handles a highly accurate control and the faint signal such as the heart pacer. The influence of the miss-operation of electronic equipment might be given.

	<p>18. Avoid places with too much dust or dirt. Dirt or dust that can accumulate in the fusion splicer causes short circuit and insufficient cooling, which may lead to splicer malfunction or deterioration, resulting in fire or electric shock.</p> <p>19. Always use suitable power supply and cord for the splicer as defined in this manual. Failure to do so can cause fire or electric shock.</p> <p>20. Only use a voltage within the indicated power voltage. Failure to do so can cause fire or electric shock.</p> <p>21. Check for condensation before operation. If necessary, dry the splicer with a hair dryer. If water or other liquid, a metallic object or other foreign substance gets inside the splicer, immediately turn off the power and disconnect the power plug. Contact our qualified service personnel.</p> <p>22. In a high location, take safety measures to prevent fall of operators. Dropping the splicer could result in personal injury. Fix the splicer to a worktable or a tripod with the screw on the bottom of the splicer.</p> <p>23. If an abnormal condition such as unusual noise, smoke or unusual odor occurs, immediately turn off the power and disconnect the power plug. Next, contact our qualified service personnel.</p> <p>24. Be sure to turn off the splicer and unplug the power cord or remove the battery pack before replacing the electrodes.</p> <p>25. Only use Sumitomo genuine electrodes (ER-10). And use the splicer with electrodes installed in it. Failure to do so can cause the splicer to malfunction.</p>
---	--

<Handling of power cord and plug >

	<p>1. To reduce the risk of electric shock, do not plug/unplug the power cord or remove the battery pack with wet hands.</p>
	<p>2. Disconnect the power cord by grasping the plug, not the cord. Failure to do so can cause damage to the power cord, resulting in fire, electric shock or malfunction.</p> <p>3. Before charging the battery pack, make sure that the pins of the battery charge cord are not bent or broken. Using the battery charge cord with a bent or broken pin can cause internal short circuit, resulting in fire or electric shock.</p>

<Handling of battery pack>

	<ol style="list-style-type: none">1. Do not burn the battery pack or throw it into a fire. Doing so can cause heat generation, bursting and fire.2. Do not place the battery pack in microwave ovens and high-pressure containers.3. Do not let water or sea water wet or soak the battery pack. Safety and protective devices to prevent danger are built in the battery pack. If these devices are damaged, excessive current flow can cause abnormal chemical reaction in battery fluid, heat generation, bursting and fire.4. Do not throw or impact the battery pack. Safety and protective devices to prevent danger are built in the battery pack. If these devices are damaged, excessive current flow can cause abnormal chemical reaction in battery fluid, heat generation, bursting and fire.5. Do not pierce the battery pack with nails, strike the battery pack with a hammer, or step on the battery pack. Doing so can cause internal short circuit, heat generation, bursting and fire.6. Do not disassemble or modify the battery pack. Safety and protective devices to prevent danger are built in the battery pack. If these devices are damaged, excessive current flow can cause loss of control during charging or discharging of the battery pack, heat generation, bursting and fire.7. Make sure the polarities are correctly connected. Do not attempt to connect the battery pack or other equipment when you cannot do. Reversed connections can cause abnormal chemical reaction in battery fluid, heat generation, bursting and fire.8. Do not solder any lead wires directly to the battery pack. Do not directly connect the positive and negative terminals with a conductive material such as a wire. Do not carry or store the battery pack together with any personal jewelry, hairpins or other Metallic objects. Doing so can cause an electrical short circuit. Also excessive current flow can cause abnormal chemical reaction in battery, heat generation, bursting and fire.
	<ol style="list-style-type: none">9. Only use a specified battery charger. Failure to do so can cause the battery to be overcharged or excessive current flow can cause abnormal chemical reaction in battery fluid, heat generation, bursting and fire.10. Use the battery pack only for the application for which it was designed. Failure to do so will result in a loss of performance and a shortened life expectancy. Also excessive current flow can cause loss of control during charging or discharging of the battery pack heat generation, bursting and fire.



<Transportation and storage>

	<ol style="list-style-type: none">1. This product is a precision instrument. When transporting the splicer, use its specified carrying case to protect the splicer from excessive shock or impact.2. Do not use and store the splicer out of the locations defined in a brochure and this manual. Failure to do so can cause splicer malfunction or deterioration, resulting in fire or electric shock.3. Do not store any items other than the product, package contents and optional accessories in the carrying case. Overloading the case can cause damage to handle, strap and latch.4. Do not throw or fall the carrying case. Doing so can cause damage to the body of the carrying case, case handle, strap and latch.5. Do not store the hand strap in the windshield. It causes damage to the machine.6. Do not carry the machine grabbing the hood or the monitor.7. Do not brandish the machine with the hand strap, and brandish neither AC adaptor nor the power cord. There are fear of machine damage and the injury.8. Do not use the machine with the lid of the battery Pack slot opened.
	<ol style="list-style-type: none">9. Before picking up the case, ensure that the case handle and latch are not damaged. Carrying the case with the handle and/or latch damaged may result in personal injury or splicer malfunction due to heavy impact.10. Before picking up the case, ensure that the latch is completely locked. Carrying the case with the latch unlocked can cause the case to fall open and result in personal injury or splicer malfunction due to heavy impact.11. Be careful that your fingers not to be caught in the hinge part and the lid when you open and shut the case.12. Confirm the work table of the carrying case is surely fixed to the case when you carry it.13. Do not modify the handle, strap or strap attachment points. Only use the carrying strap supplied by us.14. Avoid places with too much dust or dirt. Dirt or dust that can accumulate in the fusion splicer causes short circuit and insufficient cooling, which may lead to splicer malfunction or deterioration, resulting in fire or electric shock.15. If you are not going to use the splicer for a prolonged period, remove the battery pack from the splicer. Failure to do so will shorten a battery life.16. Unplug the fusion splicer or remove the battery pack before attempting any maintenance or if not using the splicer for a prolonged period. Failure to do so can cause fire.17. The monitor, the hood, and the heater clamping, etc. do the opening and shutting operation. Be careful of your fingers not to be caught.

<Battery handling and charging>

	<ol style="list-style-type: none"> 1. Make sure the polarities are correctly connected. Do not attempt to connect the battery pack or other equipment when you cannot do. Reversed connections can cause abnormal chemical reaction in battery fluid, heat generation, bursting and fire. 2. Do not carry or store the battery pack together with any personal jewelry, hairpins or other Metallic objects. Doing so can cause an electrical short circuit. Also excessive current flow can cause abnormal chemical reaction in battery fluid, heat generation, bursting and fire. 3. Do not use a dry cell battery and the batteries differing in capacity, type, and manufacturer. Doing so can cause heat generation, bursting and fire.
	<ol style="list-style-type: none"> 4. The battery's optimum charging temperature range is 0 to 40°C. Under high temperature conditions such as in direct sunlight or near a fire, safety and protective devices to prevent danger which are built in the battery pack will be activated, resulting in failure of charging. Or if these devices are damaged, excessive current flow can cause loss of control during charging or discharging of the battery pack, heat generation, bursting and fire. Avoid charging the battery pack at extremely low temperature (below 0°C). Failure to do so may lead to deterioration in performance and battery leakage. 5. Always turn off the power to the splicer after use. Failure to do so can cause the battery to be over discharged and deteriorated in performance. 6. In the event the battery pack leaks and the fluid gets into one's eyes, do not rub the eyes. Immediately wash them thoroughly with clean water enough from the tap and consult a doctor urgently. 7. Unplug the fusion splicer or remove the battery pack before attempting any maintenance or if not using the splicer for a prolonged period. Failure to do so can cause fire. 8. Pay attention not to drop the battery pack when installing and removing it. Dropping the battery pack can cause personal injury.

<Handling of optical fiber >

	<ol style="list-style-type: none"> 1. Never look into optical fibers or the end of an optical cable attached to the optical output when the device is active. The laser radiation can seriously damage your eyesight.
	<ol style="list-style-type: none"> 2. Wear safety glasses at all times for protection from glass fibers.

< Others >

	<ol style="list-style-type: none"> 1. Do not press the keys on the keypad with a sharp object (e.g. a ballpoint pen, screwdriver, or nail) Doing so will damage the keypad. 2. Do not press strongly the touch screen with a sharp object. 3. Do not use or store the battery pack at high temperature, such as in strong direct sunlight, and in cars during hot weather. This can cause deterioration of the battery. 4. Even if you are not going to use the battery pack for a prolonged period, charge it once a year. 5. Do not press the liquid crystal display with force or the display may fail. 6. Take care to keep spliced fiber straight. Do not flex it back and forth. Doing so can cause the spliced fiber to be broken, resulting in loss of the long term reliability of the fiber. 7. Do not use a canned air for cleaning. Chemical reaction may deteriorate the lens, resulting in a loss of splicing capability.
---	--



8. Check the voltage of AC power before use. The AC adapter should be grounded to earth. If voltage or frequency beyond the range stated flows in the AC adapter, a safety and protective device to prevent danger is activated and the AC adapter will stop. In that case, a new AC adapter should be purchased. Please contact our qualified service personnel.
9. Charge the battery pack within the following temperature range. Failure to do so may lead to deterioration in performance.
*Battery pack's required temperature range: 0°C ~ +40°C
10. Before using the battery pack for the first time, charge it.
11. The battery pack is consumables. Repeated charging and discharging decreases battery life.
12. Store the battery pack within the following temperature range. Failure to do so may lead to deterioration in performance.
*Battery pack storage temperature range: -20°C ~ +50°C (if stored for less than 1 months) -20°C ~ +40°C (if stored for less than 3 months) -20°C ~ +20°C (if stored for less than 1 year)
13. Charge the battery pack fully before storing it for a prolonged period.
14. Even if you are not going to use the battery pack for a prolonged period, charge it once a year.
15. If you are getting fewer than splice cycles per fully charged battery, consider replacing the battery pack by a new one.
16. When disposing of the battery pack, contact our qualified service personnel or follow the local regulations.
17. Although bright spots or dark spots may appear on the screen, this is a unique characteristic of liquid crystal displays, and such do not constitute or imply a machine defect.
18. We recommend your splicer to be annually over-hauled to keep it in good condition.
19. Glass fiber fragments are extremely sharp. Handle with care.
20. Turn off the splicer before maintenance work. Failure to do so can cause electric shock.
21. Be sure to remove moisture, alcohol or dust on the heater element with a dry cotton swab.
22. Only use Sumitomo genuine electrodes (ER-10). Failure to do so can cause the splicer to malfunction.
23. Do not clean the electrode. Doing so can cause unstable arcing performance.
24. Storing and transporting the splicer with the battery pack installed can cause the battery pack to be damaged or deteriorated, resulting in fire. Remove the battery pack from the splicer before storage.
25. Transporting the splicer with fiber holders loaded can cause the V-grooves or clamps to be damaged, resulting in the failure of splice. Remove the fiber holders from the splicer before storage.
26. Ensure that the strap should be completely secured.
27. Whenever you use the strap rings, be sure to hold the splicer with your hand. Failure to do so can cause the splicer to turn over and accessories such as fiber holder will drop.

RoHS Directive (2002/95/EC)

The TYPE-Q101-CA optical fusion splicer is RoHS-compliant.

WEEE Directive (Waste Electrical and Electronic Equipment; 2002/96/EC)

The European Union has enacted a Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE Directive). This directive is applicable in the European Union member states. The crossed out wheelie bin symbol found on our products indicates that it should not be disposed of together with household waste.

To prevent possible harm to human health and the environment, waste electrical equipment must be disposed of in an approved and environmentally safe recycling process.

For further information on how to dispose of the product correctly, please contact the product supplier, or the local authority responsible for waste disposal in your area.



IMPORTANT : TYPE-Q101-CA SOFTWARE USER LICENSE

Copyright © 2011 SUMITOMO ELECTRIC INDUSTRIES, LTD. All rights reserved.

ATTENTION : The software installed in the TYPE-Q101-CA SPLICER (“this software”) is the property of SUMITOMO ELECTRIC INDUSTRIES, LTD. The usage of this software is granted by a license. CAREFULLY READ AND THIS LICENSE BEFORE USING THIS PRODUCT.

The copyright and all other rights to this software, its documentation and the writings concerning this software (“the writings”), which contain CD-ROM, operation manual, guiding document, data tables, command lists, writing information (photos, images, drawing, text) on appended other printed materials, shall remain with SUMITOMO ELECTRIC INDUSTRIES, LTD. By commencing the use of this software, you acknowledge that you have read the following license and indicate that you agree to its terms. In case of disagreement, contact SUMITOMO ELECTRIC INDUSTRIES, LTD. or our product supplier.

LICENSE AGREEMENT

This license is the entire agreement between SUMITOMO ELECTRIC INDUSTRIES, LTD. and you.

1. LICENSE

The following restricted rights are granted. YOU MAY :

- a) use on a splicer in which this software is installed.
- b) create or distribute a construction manual based on the writings on condition that you clarify their source.
- c) create an execution report of construction based on displayed information, and the writings.
- d) create a document (manual or execution report) concerning the maintenance of the splicer in which this software is installed or control its splice-quality upon displayed information and the writings.
- e) make one copy of the writings for archival or backup purpose.

2. RESTRICTIONS

The following act is forbidden on this license, except our prior written consent. YOU MAY NOT :

- 1) sell, distribute, rent, lease, transfer, or disclose the whole or part of the writings to the public or unidentified parties and transfer, disclose or display the electrical format of the writings through online media.
- 2) make copy of the writings except as permitted in this license.
- 3) reverse engineer, decompile, disassemble this software and analyze, modify or merge the program.

3. CONTRACTING PARTIES

If you rent, lease, transfer, or resell the splicer, in which this software is installed, to a corporation or other entity, then this agreement is formed by and between SUMITOMO ELECTRIC INDUSTRIES, LTD. and such entity. You shall be liable for such entity to agree to the same all conditions of this license.

4. TERM AND TERMINATION

This agreement shall continue in effect until terminated. You may terminate the agreement at anytime by stopping the use of the splicer in which this software is installed. If you fail to comply with any of the provision of this license, your license will be automatically terminated. Upon termination, you shall transfer the writings to the owner of splicer (In the case that you transfer the splicer to other corporation or entity) or return them to us, otherwise erase or destroy them by appropriate means. You shall forever hold in confidence all trade secrets brought by this license. Further you agree not to disclose to any third party.

5. LIMITATION OF LIABILITY

SUMITOMO ELECTRIC INDUSTRIES, LTD. and our supplier shall not be liable for consequential, incidental or accidental damages in connection with this software or this agreement and whether this software shall meet your special requirements, special efforts or special method beyond the range described in the operation manual concerning this software.

6. GENERAL

If any provision of this agreement is declared by the court of competent jurisdiction to be invalid, illegal, or unenforceable, such provision shall be severed from the agreement and the other provisions shall remain in full force and effect.

The followings are a registered trademark or trademark of Corning Incorporated.
Corning®, LEAF®, MetroCor®, ClearCurve™

TrueWave® is a registered trademark of Furukawa Electric North America, Inc.

BendBright® and TeraLight™ are a registered trademark or trademark of Draka holding.

CasaLight™ is a trademark of Prysmian Cables and Systems.

The followings are a registered trademark or trademark of Sumitomo Electric Industries, Ltd.
MicroCore™, Sumitomo Z™, PureGuide®, PureMetor®, PureAccess®, UltraAccess®

SD and SDHC logos are trademarks of the SD-3C LLC.



FlashFX® Pro™ is a trademark of Datalight, Inc.

Notification of North American patents on the TYPE-Q101-CA

U.S. Patents

5,777,867

6,966,708

7,140,786

7,412,146

CANADA Patent

2,183,840

Table of contents

IMPORTANT SAFETY PRECAUTIONS

IMPORTANT: TYPE-Q101-CA SOFTWARE USER LICENSE

1. General	1-1
Product overview	1-1
Optical fiber requirement	1-1
Features overview	1-1
Standard package	1-2
Optional accessories	1-3
Consumables	1-3
Structure	1-5
Fusion splicer	1-5
Keypad	1-6
V-grooves, electrodes, other components	1-7
Heat shrink oven	1-8
Input/output panel	1-8
Caution label	1-9
2. Splice / protection	2-1
Preparing power supply	2-2
AC operation	2-2
Battery operation	2-3
Battery level check	2-4
Battery charging	2-5
DC operation (car battery)	2-6
Precautions for battery pack	2-6
Operating procedures	2-7
Turning on the TYPE-Q101-CA	2-7
Initial screen	2-8
Stripping the fiber coating / Cleaning the bare fiber	2-9
Cleaving the fiber	2-10
Inserting fibers into the splicer	2-12
Arc environment compensation	2-13
Arc test procedure	2-13
Fiber preparation	2-15
Starting the automatic splice	2-16
Splice protection	2-20
3. Daily cleaning and checking up	3-1
Cleaning	3-1
Names of components	3-1
Cleaning V-grooves	3-2
Cleaning LEDs	3-2
Cleaning bare fiber pads	3-3
Cleaning lens protection glass	3-3

Cleaning heat shrink oven	3-4
Replacing electrodes	3-5
Electrode replacement procedures	3-6
Packing and storage instructions	3-8
4. Functions	4-1
Splice and heater conditions settings	4-1
Function settings	4-2
Maintenance settings	4-11
Splice data storage function.....	4-12
USB connection function.....	4-13
Software download via internet	4-13
Login function.....	4-14
Help function.....	4-14
5. Other convenient functions.....	5-1
Back monitor type	5-1
Universal clamp.....	5-2
Dual heat shrink oven	5-2
Fiber holder operation	5-3
Detachable/attachable bare fiber pads.....	5-4
Heater clamp operation.....	5-5
Auto start	5-6
Tripod fixing screws	5-6
Splice data storage function	5-6
Hand strap	5-7
6. Troubleshooting	6-1
Arc problems	6-1
Fiber breaking	6-1
Splicer does not power up	6-1
Warranty and repair service	6-2
Error message list	6-3
TYPE-Q101-CA specifications	6-4

Sumitomo Electric Industries, Ltd. reserves the right to change the specification or design without notice and may therefore not coincide with the contents of this manual. E&OE

1. General

Thank you very much for purchasing the TYPE-Q101-CA MicroCore™ Fusion Splicer (hereinafter called “the TYPE-Q101-CA).

The TYPE-Q101-CA automatically pre-inspects and aligns a pair of optical single fibers with equipped microscopes, and then fuses them together with heat from an electric arc to form a low-loss splice. A protection sleeve is applied over the bare glass and cured in the built-in heat shrink oven.

Before using the TYPE-Q101-CA, read all instructions completely.



Read this manual carefully in its entirety to fully understand machine capabilities. Save this manual in a location in which you can easily get to see.

Product overview

Optical fiber requirement

The TYPE-Q101-CA can splice the following optical fiber types.

Material	Silica glass
Profile type	SMF (ITU-T G.652), MMF (ITU-T G.651) DSF (ITU-T G.653), NZDSF (ITU-T G.655) BIF (ITU-T G.657), EDF
Fiber diameter	80 - 150µm *1
Fiber coating diameter	100 - 1,000µm
Fiber count	Single fiber
Cleave length *2	5 - 16mm (Over 250µm coating diameter with the length less than 8mm requires fiber holder operation.)

*1 Fiber diameter except 125µm are only applied in the factory temperature and 0m altitude.

*2 The applicable fiber protection sleeves vary depending on the cleave length.

Features overview

The TYPE-Q101-CA key features are:

- **Touch screen monitor** (For more information, refer to page 2-8.)
4.1 inch LCD monitor with touch screen operation enables to confirm fiber images easily. The splicer can be operated by touching the icons on the screen. The working efficiency has improved dramatically.
- **Dual heat shrink oven** (For more information, refer to page 2-20, 5-2.)
Following the conventional model TYPE-39, 2 heat shrink ovens are equipped with the fusion splicer. The ovens run individually and splicing operation can be improved more effectively.

- **Auto start** (For more information, refer to page 5-6.)

In addition to the function that automatically starts the splicing process when the hood is closed, the function that automatically starts the heating cycle when fiber is placed into the heat shrink oven is provided.

- **Fully automatic splice mode** (For more information, refer to page 4-3.)

Using Auto fiber profiling check and Detection System (APDS), the TYPE-Q101-CA recognizes fiber core profile and automatically chooses a correct splice program, and proceeds to splicing.

- **Arc environment compensation** (For more information, refer to page 2-13.)

The TYPE-Q101-CA automatically compensates arc power with temperature and pressure sensors.

Standard package


Here is an example of TYPE-Q101-CA standard package.

Package contents (example)

No.	Description	Part number	Quantity
1	Fusion splicer TYPE-Q101-CA	TYPE-Q101-CA	1 pc
2	AC adaptor	ADC-1430	1 pc
3	Power cord	PC-AC<X>	1 pc
4	Battery pack	BU-11	1 pc
5	Cooling tray	-	1 pc
6	Spare electrodes	ER-10	1 pair (2 pcs)
7	Operation manual (CD-ROM)	OME1124015-2*	1 pc
8	Quick reference guide	OME1124030-2*	1 pc
9	Carrying case (with strap)	CC-71	1 pc

*The latest version is provided.

The above package is an example. The package contents vary depending on the customers' requests.

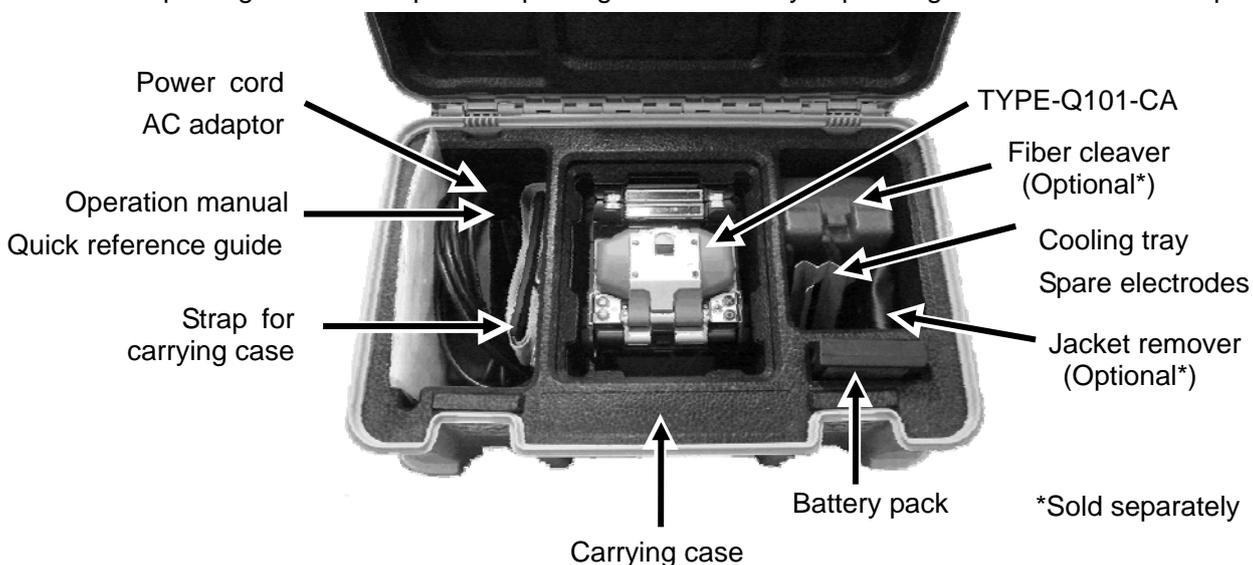

Optional accessories

The following optional accessories are provided for the TYPE-Q101-CA. For further details, please contact our sales personnel.

Options

Description	Part No.	Remarks
Battery pack	BU-11	Special Li-ion battery for TYPE-Q101-CA.
Car battery cable	PCV-11	Plugged into a car's cigarette lighter jack to supply electric power to splicer
Battery charger	BC-11	Use only for the battery pack BU-11.

Tools (Jacket remover, Fiber cleaver, and etc)

Description	Part No.	Remarks
Precision fiber cleaver	FC-7R-S	Applicable coating diameter: 250 - 900 μ m
	FC-7S	Applicable fiber diameter: 125 μ m
	FC-6S(-C)	Replacement blade for FC-7R: FCP-20BL(7R)
	FC-6S-5C	Replacement blade for FC-7 and FC-6: FCP-20BL
Jacket remover	JR-M03	Applicable coating diameter: 250 μ m, 900 μ m Applicable fiber diameter: 125 μ m
Dispenser	HR-3	Dispenser for alcohol



[FC-7R-S]



[FC-6S-C]



[JR-M03]

Consumables


Fiber protection sleeves	
FPS-1	60mm (50 pcs per package) •••• Cleave length 8-16mm
FPS-40*	40mm (50 pcs per package) •••• Cleave length 8-10mm
FPS-S-40*	40mm (50 pcs per package) thin sleeve •••• Cleave length 8-10mm
	*The 40mm protection sleeves can be used only if the cleave length is less than 10mm. Do not use the 40mm protection sleeves for non-250 μ m coated fibers.

Battery pack (BU-11) Electrodes (ER-10)	Battery pack and electrodes are considered consumables that degrade with time and usage and are replaceable by a customer. Therefore they will not be covered under warranty.
--	---

- Regarding standard equipment, consumables, or optional accessories, please order the new item you need with the item description and part number to our sales personnel.
- For repair, please read “Warranty and repair service” at page 6-2 and contact our maintenance service center.

Structure

Fusion splicer

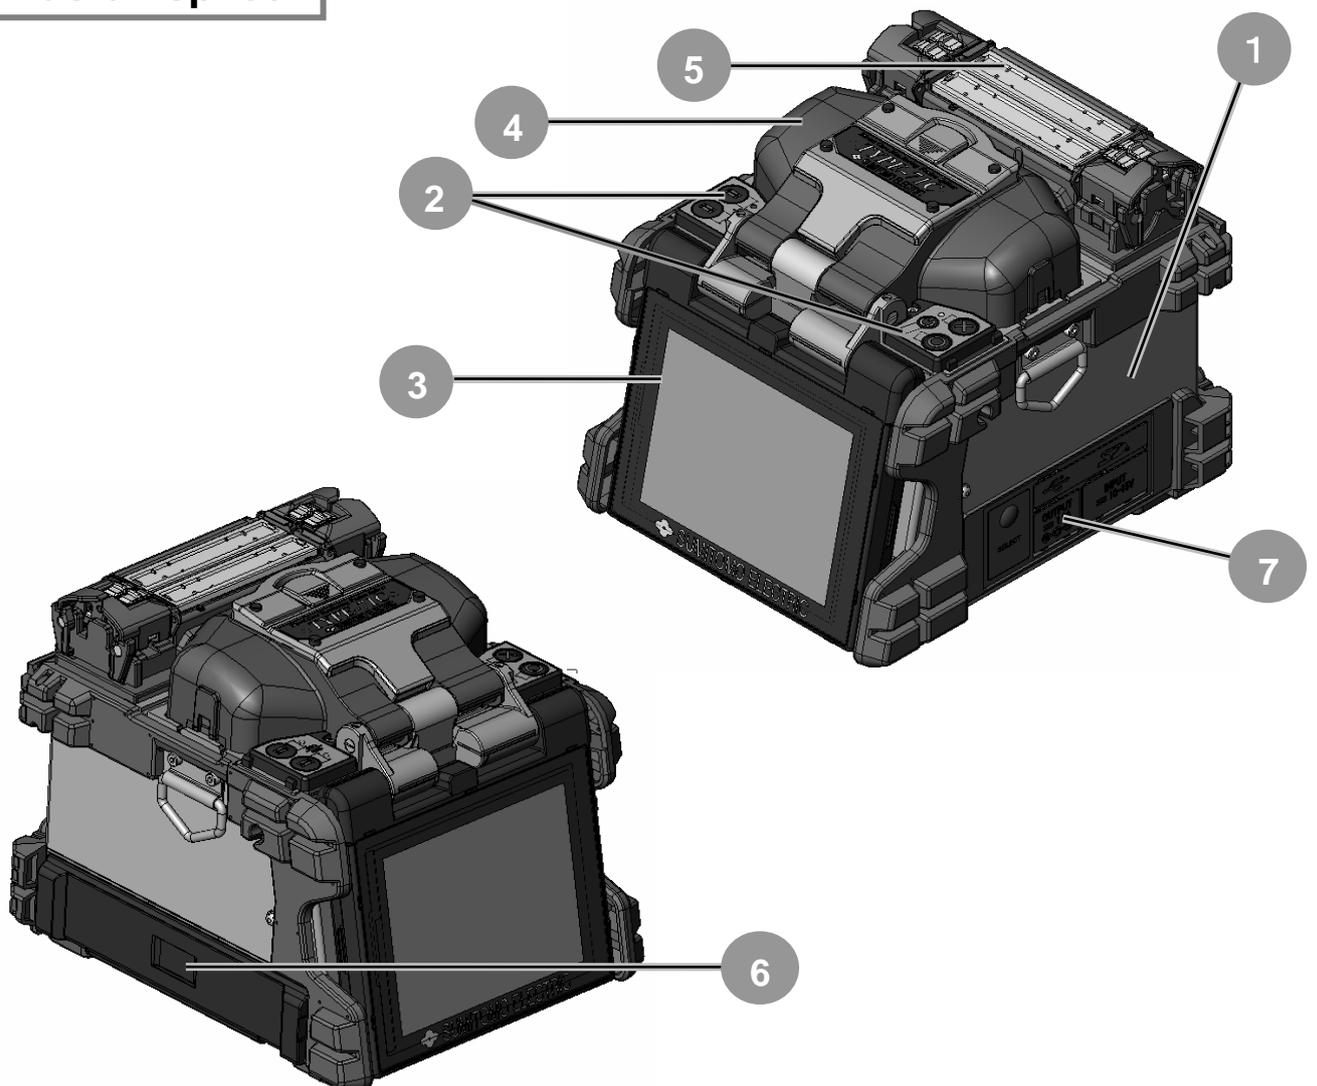

1 Main body

TYPE-Q101-CA fusion splicer

2 Keypad

Keys are used to turn on/off the power, perform a splice and heat shrink protection, and setup functions.

3 Touch screen monitor

Displays fiber image, splice data and menu. Touch screen operation enables to start splicing, heating and feature setting.

4 Hood

Provides protection from the environment.

5 Heat shrink oven

Used to heat and shrink fiber protection sleeves. 2 heat shrink ovens (front and rear) are equipped.



6 Battery pack slot

Battery is installed in this slot with protection lid.

7 Input/output panel

DC output terminal for hot jacket remover and USB port

Keypad

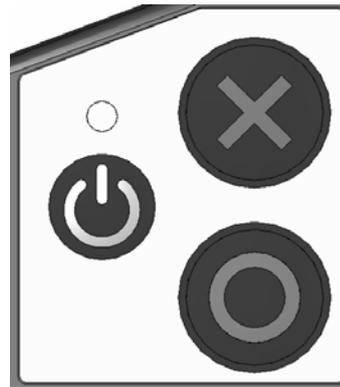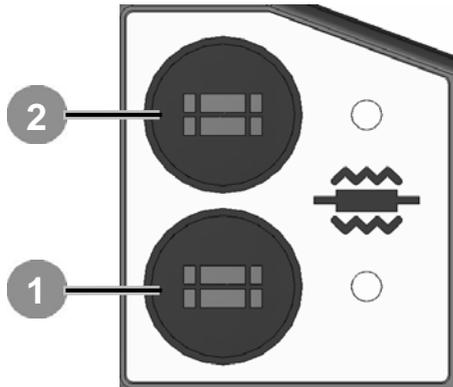

HEAT key 1 / LED

Starts/cancels the heating cycle of the front heat shrink oven. LED illuminates during the heat cycle.



Power key / LED

Used to turn on and off the splicer. LED illuminates while the splicer is on.



HEAT key 2 / LED

Starts/cancels the heating cycle of the rear heat shrink oven. LED illuminates during the heat cycle.



RESET key

Used to cancel a splicing operation. Initialization


LED illuminates during heating and blinks during cooling.



SET key

Starts a splicing operation.

The keys above are mounted on the upper surface of the splicer. The features of SET, RESET and HEAT keys are also operated by the touch screen on the monitor.

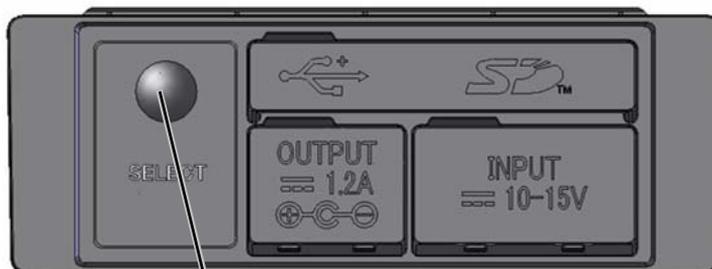


Select switch (on the Input/output panel)

Used to jump to splice and heater program select screen.



Do not press the keys on the keypad with a sharp object (e.g. a ballpoint pen, screwdriver, or nail) Doing so will damage the keypad.

V-grooves, electrodes, other components

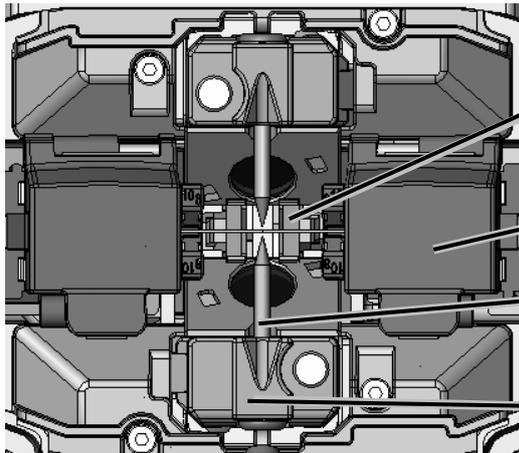


1 V-grooves
Keep bare fibers aligned.

2 Fiber coating clamp
Holds fiber coating.

3 Electrodes
Arc is generated between the electrodes.


4 Electrode cover plate
Holds the electrode seated into the retaining groove.

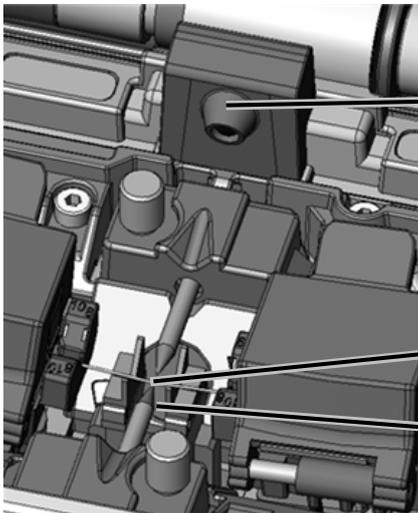

5 V-groove illumination
Illuminates the V-groove. Lit when the hood is opened.

6 Lens protection glass
Protects the lens surface.


7 Microscope objective lens
Fiber is observed with the lens.

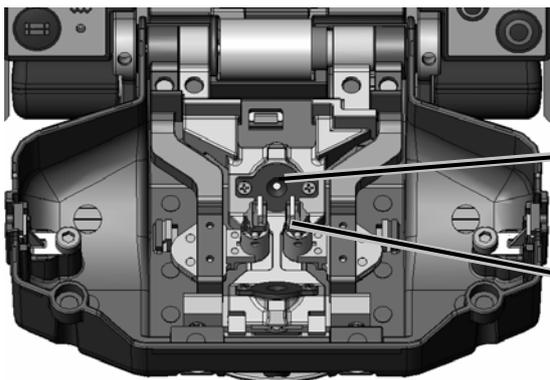

8 LED for fiber observation
Illuminates the fiber and make an image on the microscope.

9 Bare fiber pads
Hold fibers seated into the V-grooves. Normally they are attached to the hood.


Heat shrink oven

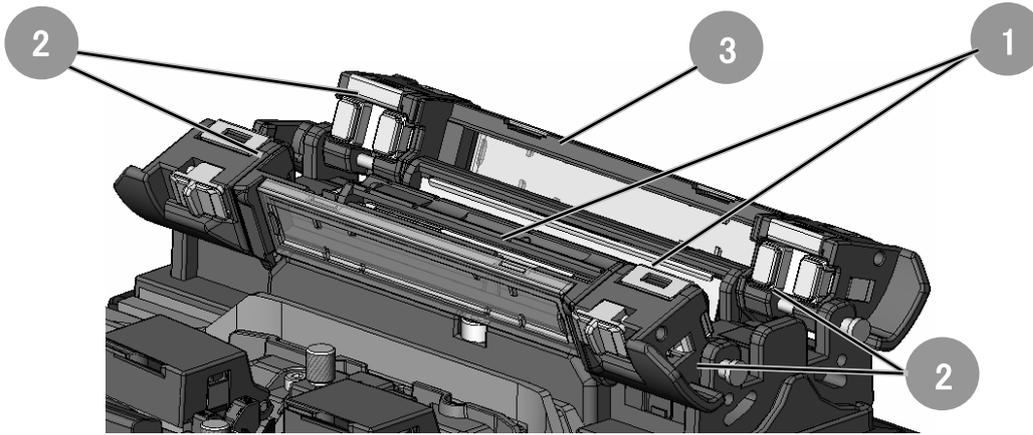

- 1 Heating plate**
Heats fiber protection sleeve.
- 2 Heat shrink oven clamps**
Hold fibers straight.

- 3 Heat shrink oven lid**


Input/output panel

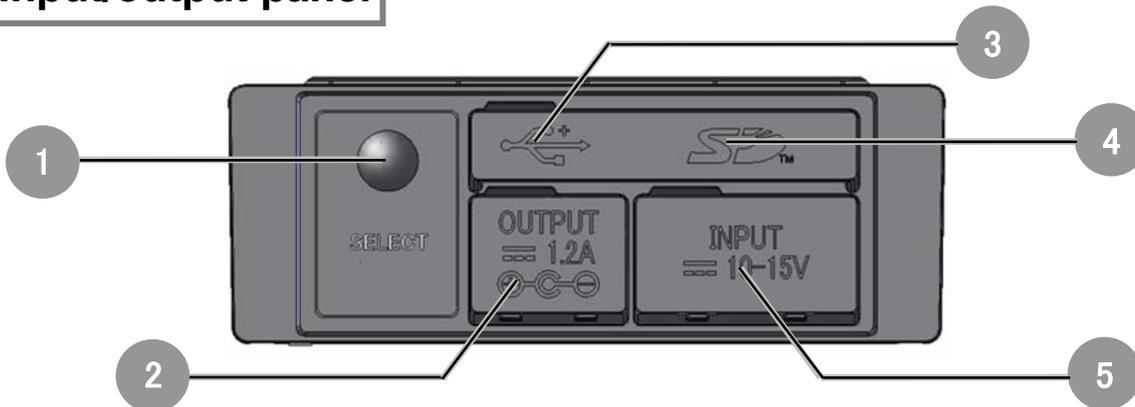

- 1 Select switch**
Refer to page 1-6.
- 2 DC output terminal**
Used to supply DC power to a hot jacket remover.

- 3 USB port**
Used to download stored splice loss data when connected to a PC.
- 4 SD card slot**
for splice data output.
- 5 DC input terminal**
input power via AC adaptor.

Caution label

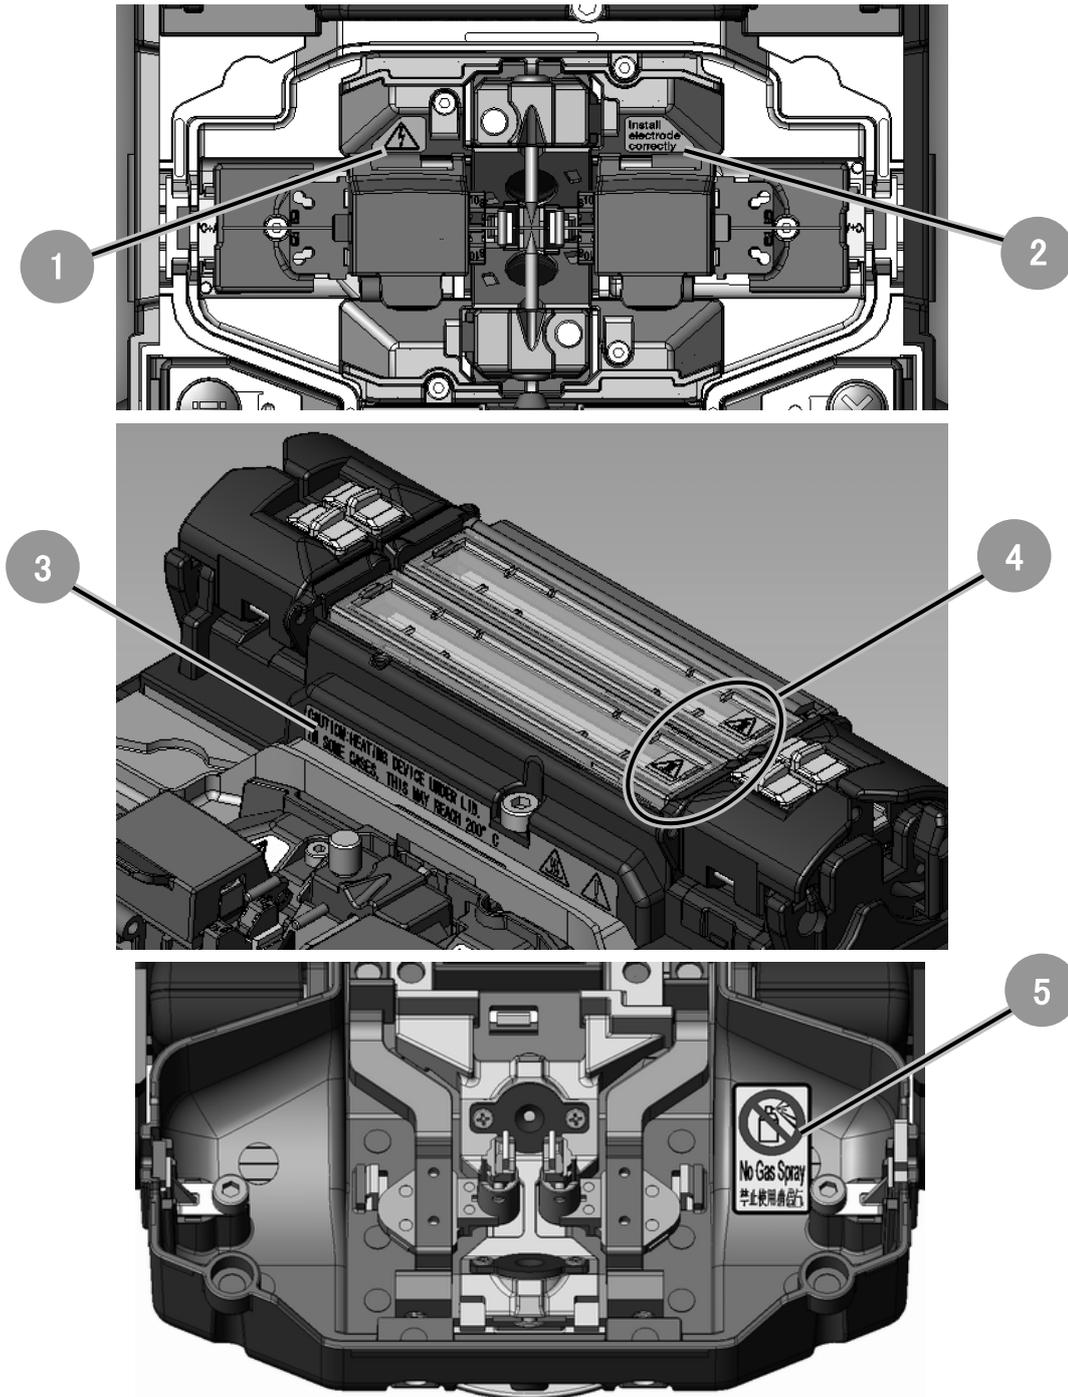

1

High voltage

When the arc is discharged, a high voltage is generated in the electrode. Please pull out the power cord, and detach the battery pack when you touch the electrode.

2

Installing electrode

Please confirm whether the electrode is installed without fail before splicing.

3

High temperature heater

Heaters may reach 200°C. Please take care when you use heaters.

4

5

Prohibition of using spray

Do not use any gas spray such as gas duster or canned air.

2. Splice / Protection

[Preparation for splicing]

Before splicing, collect all of the necessary equipment.


- TYPE-Q101-CA
- Optical fiber being spliced
- Jacket remover
- Fiber cleaver

- Pure (more than 99%) alcohol
- Lint-free gauze wipes
- Fiber protection sleeves*

*Note that the applicable fiber protection sleeves vary depending on the cleave length.

[Operating procedures]

The following is a summary of the steps required to make a splice with the fusion splicer. For further information on each step, please see the page described below.

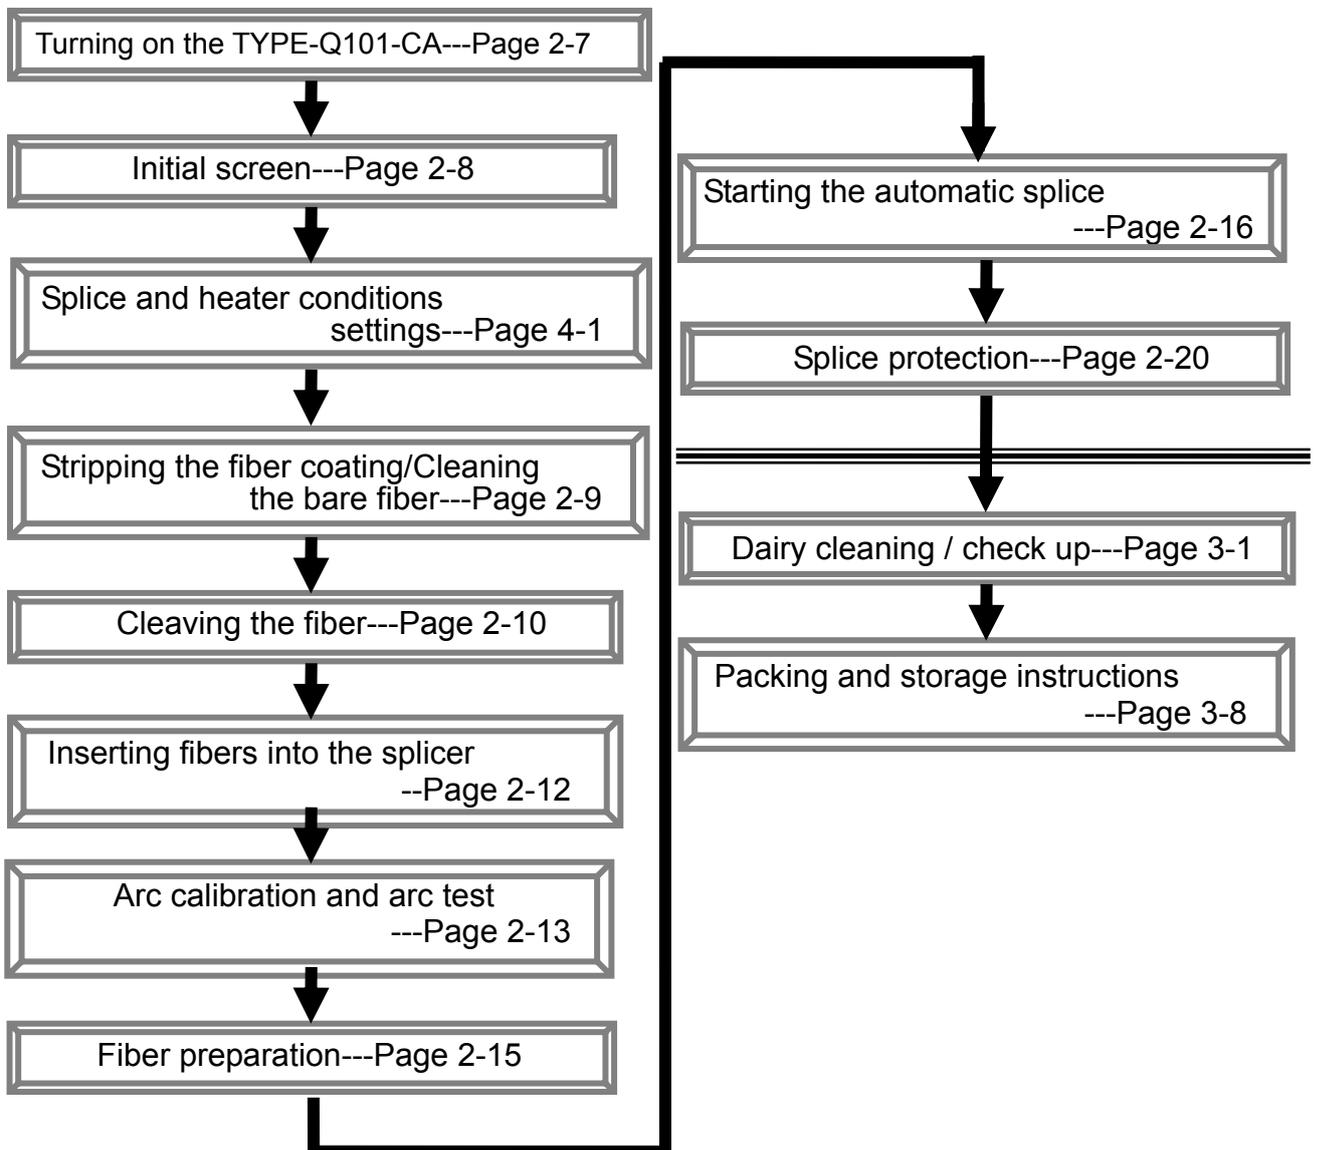


Preparing power supply

The power for TYPE-Q101-CA is supplied by AC adaptor or battery.

AC operation

Please connect AC adaptor (ADC-1430) with TYPE-Q101-CA when you operate with the AC adaptor.

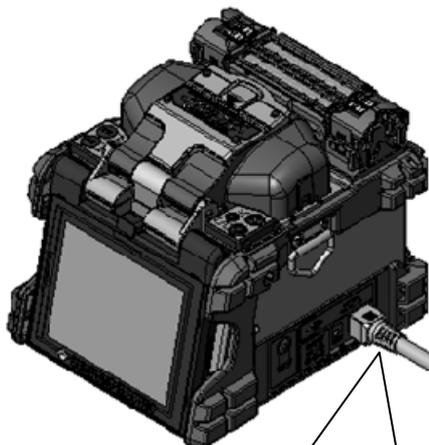

Connect the output cord of AC adaptor with DC input terminal of TYPE-Q101-CA.

Plugging

Insert the power cord into the AC adaptor completely. POWER LED lights up green when the power is supplied.



Please confirm the voltage of the AC power supply before using. Moreover, please earth the AC adaptor by using the power cord with the earthing terminal.

The security function might work for safety when the voltage and the frequency outside the specification range are input to the AC adaptor and the AC adaptor stop operating.

In this case, it is necessary to exchange AC adaptor for a fee. Please contact our maintenance service center.

Please arrange the AC adaptor to pull out the power cord immediately in the emergency. (Do not arrange the AC adaptor out of reach.)


Battery operation

Please install battery pack (BU-11) in the battery pack slot of TYPE-Q101-CA. Please refer to the following for the installation and the removal.

*Please confirm the charge before the battery pack is installed.
(Please refer to the page 2-4 “battery level check”)


Battery pack installation

Please insert the battery pack up to foundation of battery pack slot surely and vertically.

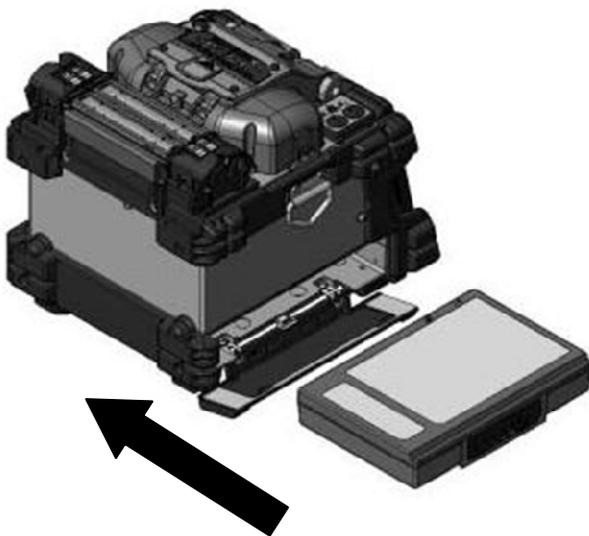


Battery pack removal

Open the lid of the battery pack slot, then hang the finger on the projection of the battery pack, and draw out the battery pack in the direction of the arrow.

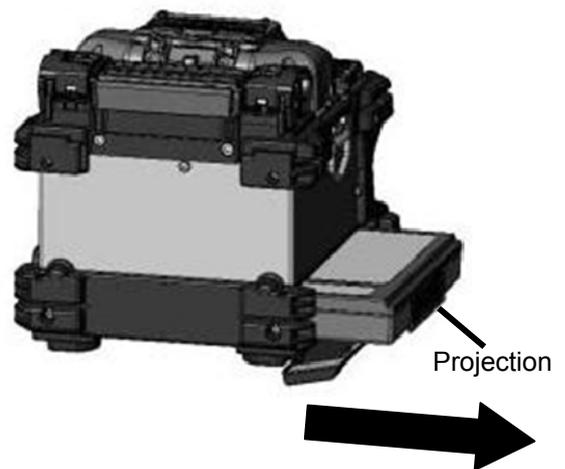


How to open and close the lid of battery pack slot

<Open> Release the lock by moving the lock in the direction of the arrow, then open the lid.

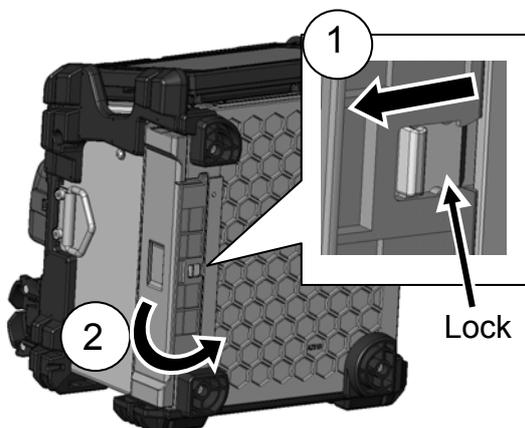


<Close> Insert tabs of the lid into the battery pack slot, close the lid and move the lock in the direction of the arrow.

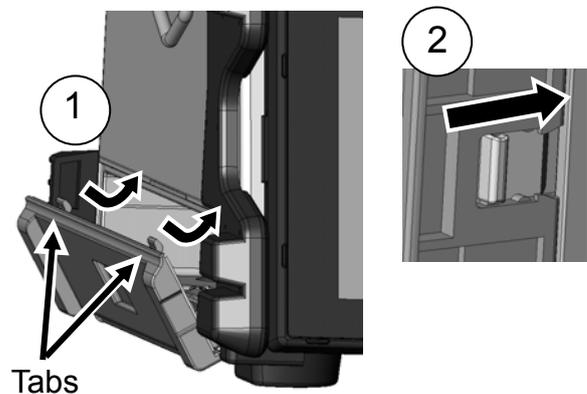

Battery level check

Press the battery check button. The LED will light up for a few seconds to indicate the battery status in one of four levels.

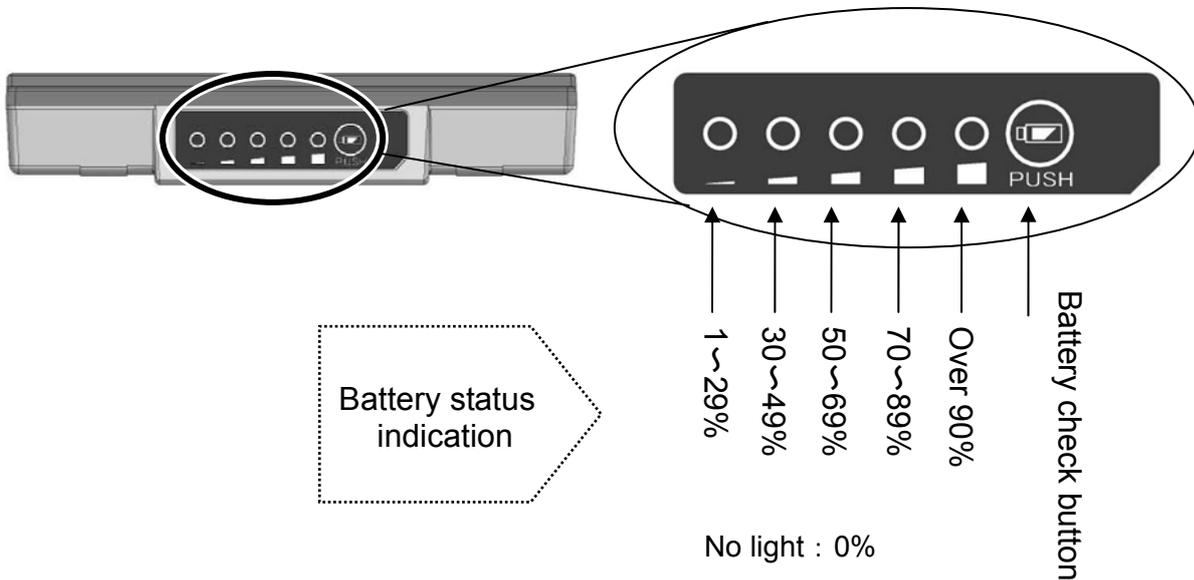

Indicator	Meaning
	Battery remains enough. Over 90%
	70 to 89%
	50 to 69%
	30 to 49%
	Battery remains little. 1 to 29%
	No battery. Please charge the battery immediately.
	Charging. Icon changes depending on the battery level.

The battery level is also displayed by the battery level indicator on the monitor.

The estimated remainder splice frequency is indicated when you touch the indicator.

(example)




*The frequency is estimated by the battery level. It changes according to the using environment and the condition.
(No guaranteed value)

*Be sure to charge the battery before use when the battery level is low.

*There is no battery indicator when using AC adaptor only.

Battery charging

1. Insert the battery pack into the TYPE-Q101-CA.
2. Connect the AC adaptor with the TYPE-Q101-CA.
3. LED (green) on the side of the DC input terminal blinks, and the charge begins.
4. It takes 2 - 3 hour to finish charging though it changes according to the residual quantity of the battery. LED (green) lights when the charge ends.

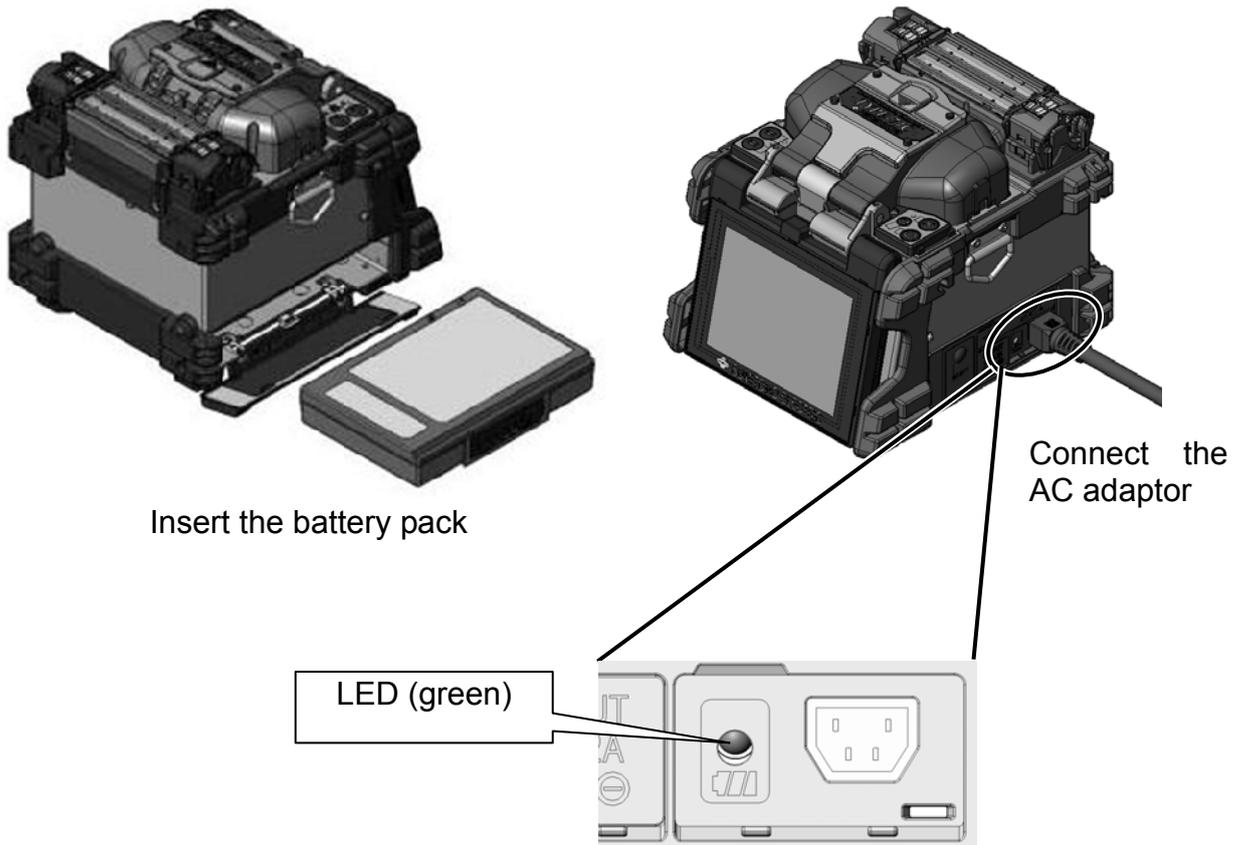

• The battery pack can be charged while the splicer is operating. However, it takes a long time compared with the time when the splicer is stopping operating. (It takes about 14 hours.)

• Please charge the battery in the following temperature span. The battery pack might be deteriorated (decrease in capacity) at the temperature that exceeds this range.

***Temperature span for charging : 0°C~+40°C**

DC operation (car battery)

The car battery cable PCV-11 (option) is required to operate the splicer on DC power (car battery). Contact a sales representative.

Precautions for battery pack

- **Before using the battery pack for the first time, charge the battery pack. (The battery is not fully charged before shipping.)**
- The battery pack is a consumable. Repeated charging and discharging decreases battery life.
- Store the battery pack within the following temperature range. Failure to do so may lead to deterioration in performance.
 - *Battery pack storage temperature range:
 - 20°C ~ +50°C (if stored for less than 1 month)
 - 20°C ~ +40°C (if stored for less than 3 months)
 - 20°C ~ +20°C (if stored for less than 1 year)
- Do not use or store the battery pack at high temperature, such as in strong direct sunlight, in cars during hot weather. This may cause leakage of battery fluid.
- If you are not going to use the battery pack for a long period, charge the battery pack once every 6 months.


When should the battery be replaced?

When the splice frequency decreased extremely with fully charged battery, please purchase a new battery pack.

When disposing of the battery pack, contact our maintenance service center or follow the local regulations.

Operating procedures


Turning on the TYPE-Q101-CA

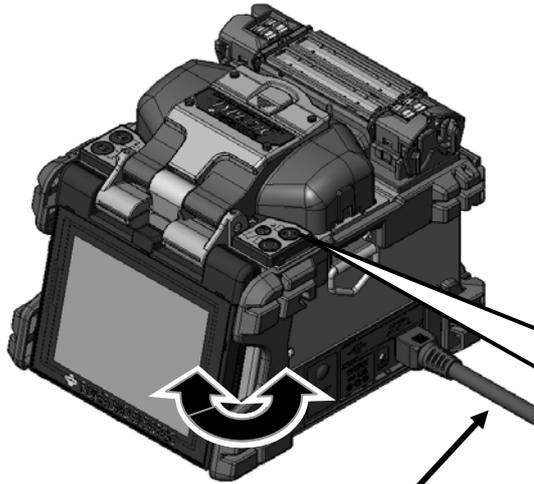

Output cord of the AC adaptor

The monitor viewing angle can be adjusted.

- 1: Ensure that the electrodes are fully inserted in the splicer.
- 2: Insert the output cord of the AC adaptor into the DC input terminal.
- 3: Adjust the monitor for optimum viewing angles.
- 4: Press the power () key for more than 1 second to turn on the power.

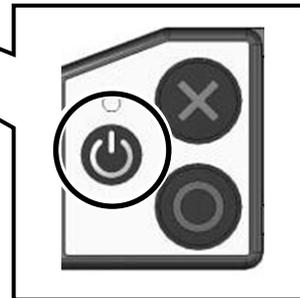

If you press the power key right after connecting the power cord to the power supply module, it may take a few seconds until the splicer is powered on.

Special note on monitors

Although bright spots or dark spots may appear on the screen, this is a unique characteristic of liquid crystal displays, and such do not constitute or imply a machine defect.


Initial screen



Startup screen



Initialize screen

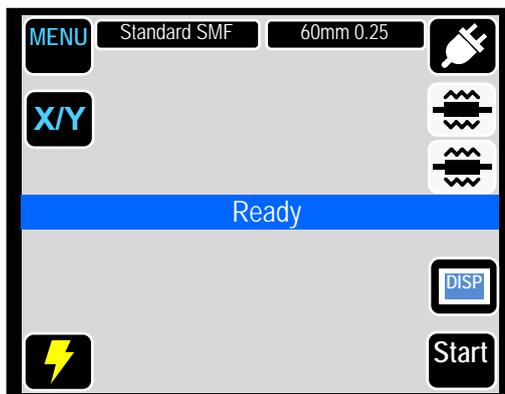

Initialization is complete.
→ Ready screen

Each motor of the splicer is initialized after turning on the power supply, and the ready screen is displayed after a few seconds.

TYPE-Q101-CA has the touch screen function that enables to operate by the icons on the screen.

The function of each icon in the ready screen is as follows.

MENU : Display the main menu screen where various functions are selected.

Standard SMF : Showing splice program that is selected. You can go to splice program selection screen by touching it. Please refer to page 4-1 for the setting method of the splice program.

60mm 0.25 : Showing heater program that is selected. You can go to heater program selection screen by touching it. Please refer to page 4-2 for the setting method of the heater program.

Y : Showing the observation screen that is displayed. The screen changes by every touch as Y ⇒ X/Y ⇒ X.

Start : Start splice



: The kind of the power supply (AC power supply) is shown. When the battery works, the battery indicator is displayed. (→ page 2-4)

DISP : Display/Non-display icons


Heating cycle icon : Start and cancel heating cycle



: Arc test


Stripping the fiber coating / Cleaning the bare fiber

- 0: Clean the fiber coating thoroughly to remove cable gel or other stains.
- 1: Strip the fiber coating. (An example shows use of Sumitomo JR-M03 tool, strip length shown apply to any stripping tool. If you use another jacket remover, please refer to its operation manual.)
- Use the correct groove of the remover suitable for the fiber coating diameter.
- See figure <1>.

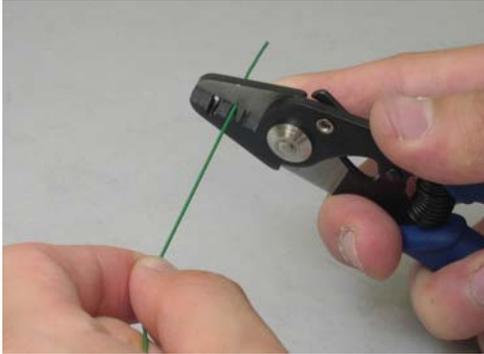


- 2: Strip Approx. 30~40mm of the fiber coating with the JR-M03 (ex). (If you use another remover, please refer to its operation manual.)

 *If the stripping length is too long, the fiber cleaver may not store the off-cut in the off-cut collector.



Stripping length= Approx. 30~40mm

<1> Check the fiber coating diameter.

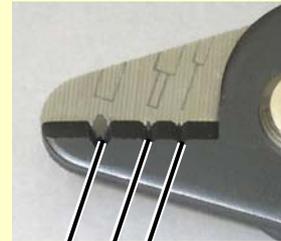


(1) (2) (3)


- (1) Fiber coating diameter : 1.6-3mm
(2) Fiber coating diameter : 600-900 μ m
(3) Fiber coating diameter : 250 μ m

The JR-M03 strips approx. 25mm of fiber coating at a time. To strip 30~40mm of the fiber coating, repeat the operation.

- 3: Repeat the stripping process for the other fiber.
- 4: Clean the bare fiber from the end of the fiber coating with a lint-free gauze pad moistened with pure alcohol. Pull the bare fiber through the gauze pad. Rotate the fiber by 90 degrees to remove any coating residue. Do not reuse the gauze pad that was used.

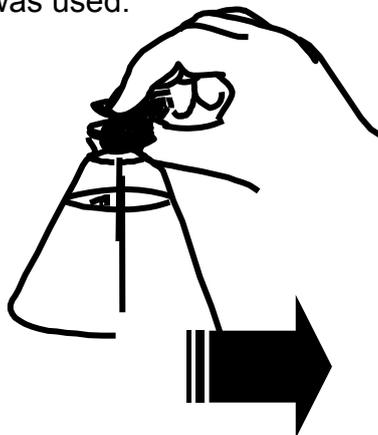

Keep the fiber squeaky clean.

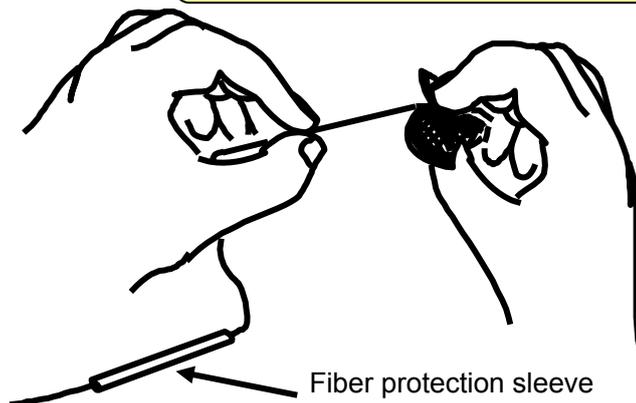


Fiber protection sleeve

Cleaving the fiber

Cleave the fiber. (An example shows use of Sumitomo FC-6S cleaver, cleave length shown apply to any cleaving tool. If you use other models of cleavers, please refer to the operation manual.)


Standard cleave length: 16mm

Applicable cleave length: 8mm-16mm for 250 μ m coated fiber

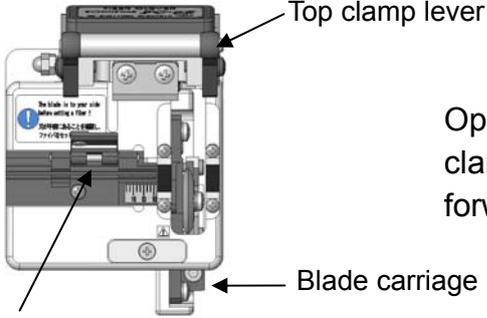
1:  Top clamp lever

Open the top clamp lever and the coating clamp lid. The blade carriage should be in the forward position.


Coating clamp lid

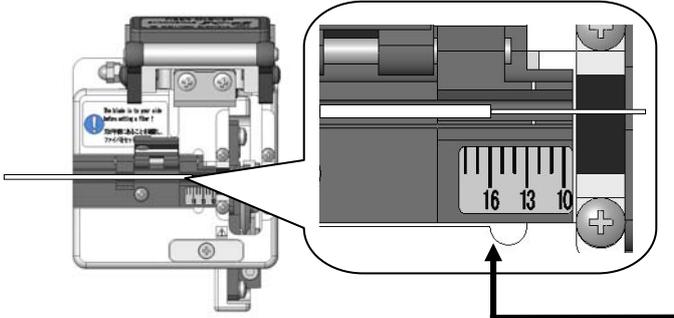2: 

Lower the fiber into the correct V-groove with the end of the fiber coating (e.g. if the cleave length is 16mm) **at the 16mm mark on the ruler.**

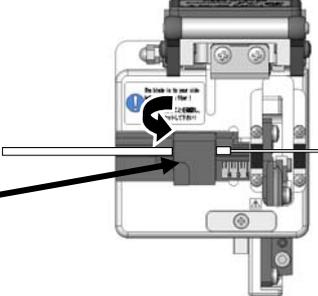
3: 

Close the coating clamp lid.

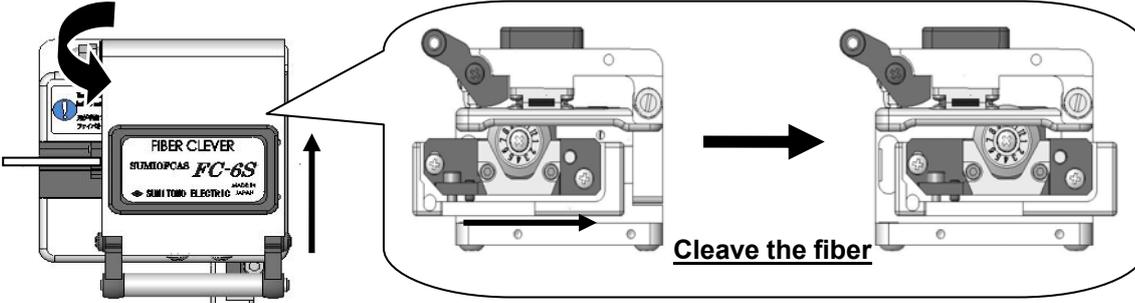4: 

Lower the top clamp lever. Slide the blade carriage to the rear of the cleaver as indicated by the arrow.


5:

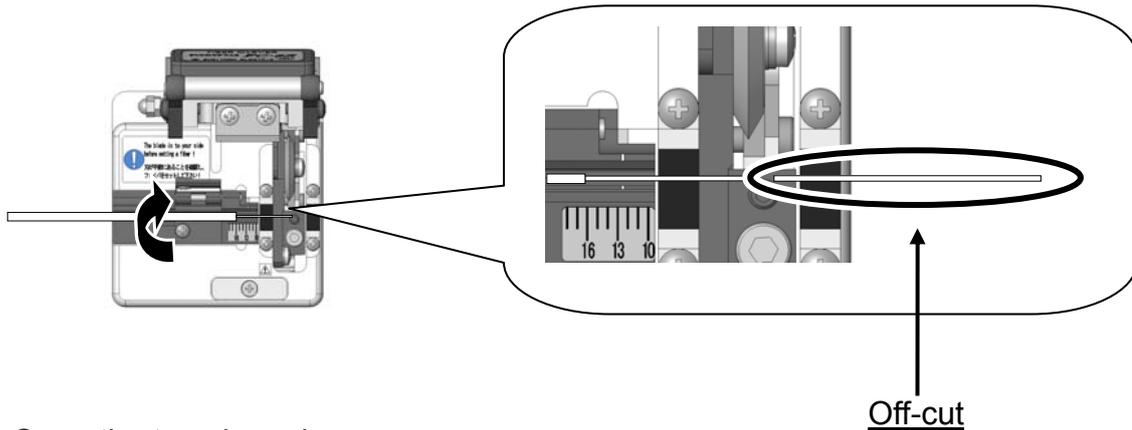

Open the top clamp lever.

Then open the coating clamp lid and lift the newly cleaved fiber.

Lift the off-cut and dispose of it properly.

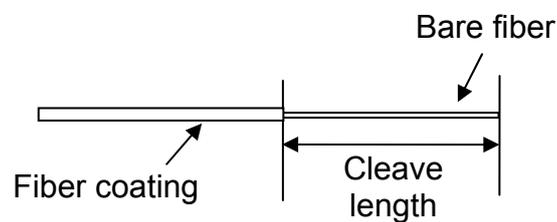

6: Insert the fiber into the splicer.





Caution

1. Do not re-clean the fiber after cleaving.
2. To avoid damaging or contaminating the delicate fiber ends, insert each fiber immediately after preparation.
3. Glass-fiber fragments are extremely sharp. Handle with care.

•By using fiber cleaver (FC-6S-5C), cleaving length of 5 - 16mm is available. Please confirm the manual of fiber cleaver (FC-6S-5C) about detail procedure.


Inserting fibers into the splicer

0: Open the hood.

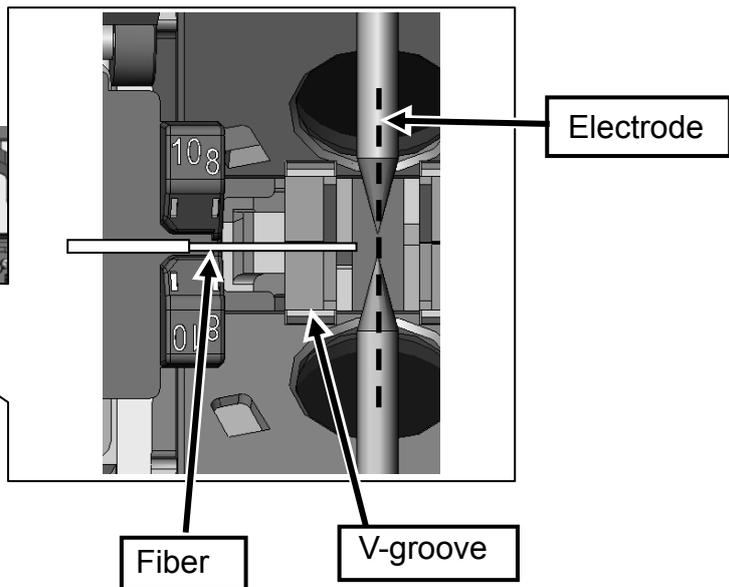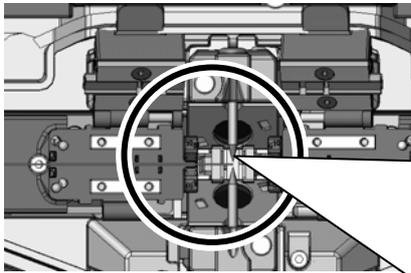


1: Set the fiber end between the edge of v-groove and the electrode.

2: Close the fiber coating clamp lid.

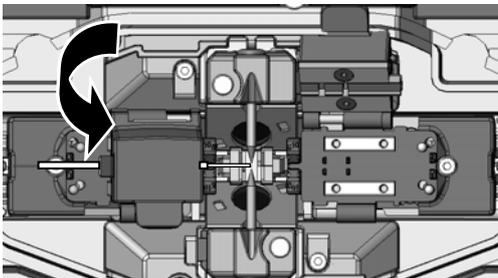

Do not touch the fiber end face against any surface.

3: Repeat step 1 to 2 for the other fiber.

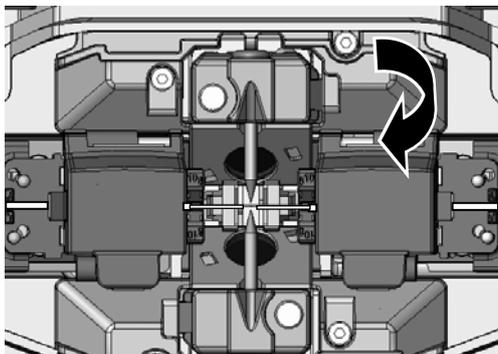

4: Close the hood.

5: Start an arc test or the splicing process.

Arc environment compensation


The fusion splicing is a method of melting and connecting the point of the optical fiber by the heat of the electrical discharge. Because the optimum conditions of discharge are different depending on the state of environment (atmospheric pressure and temperature) and the electrode (wear-out and adhesion of the glass) and kinds of the optical fiber (manufacturer and SMF/MMF, etc.), appropriate discharge power is necessary to splice with a low loss.

TYPE-Q101-CA analyzes the luminescence brightness during discharging and the ambient environment, and has the function to correct the discharge power automatically. Since the discharge power is corrected at each connection, the arc test need not be executed usually.

Perform an arc test in the following situations to calibrate the arc power and position.

- Poor splice performance
(high or inconsistent splice losses, poor splice strength)
- After electrode replacement
- Extreme changes in temperatures, humidity or air pressure


Arc test procedure

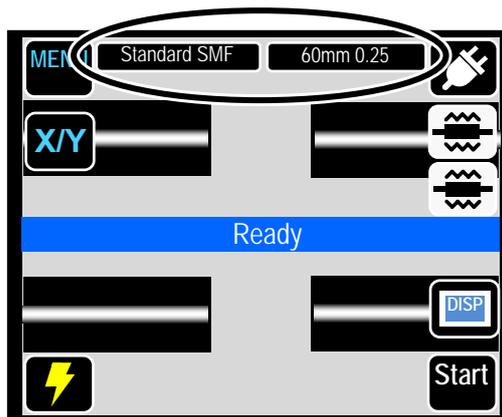

1: Set each fiber that has been prepared. (The coating is removed and fiber is cleaved.)


2: Confirm whether the splice program and heater program is correct on the ready screen.

About setting and changing the programs, please refer to the page 4-1 and 4-2 “Splice and heater programs setting”.

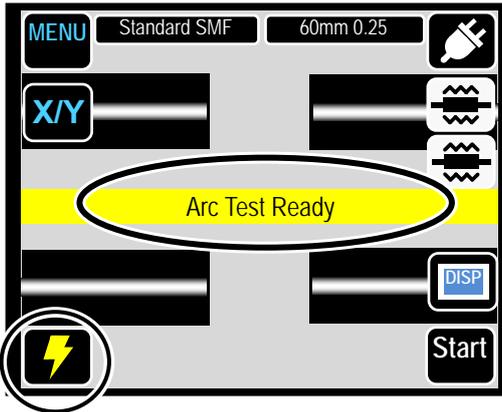


3: Touch the “Arc test” (⚡)

4: “Arc Test Ready” screen will be displayed.

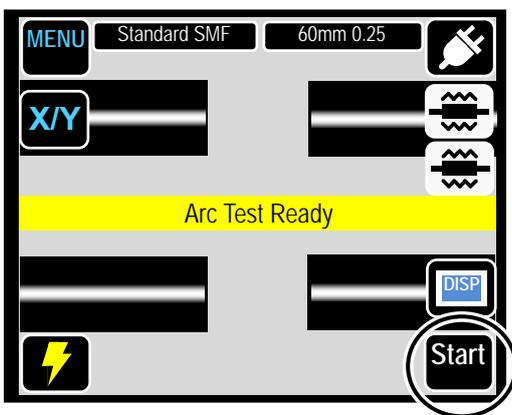


5: Touch the “Start” (Start) or push (⏻).

6: An arc test is started. Fibers are not spliced because it is not moved on the arc test.

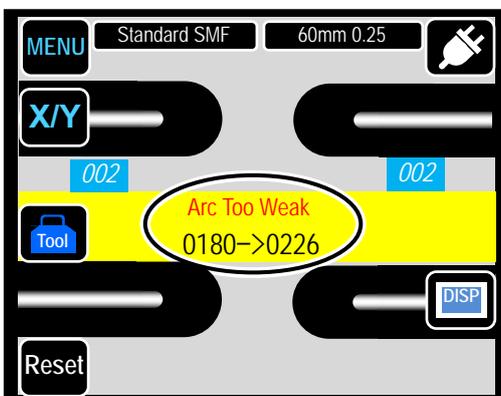


7: If “Arc Too Weak”, “Arc Too Strong” or “Arc Center” is displayed, prepare the fiber again and repeat the test until “ARC OK” is displayed.

The meltback distance of the left and right fibers and the arc center position which are measured via image processing are displayed on the monitor screen. (The arc center position is displayed only if the position is shifted.)

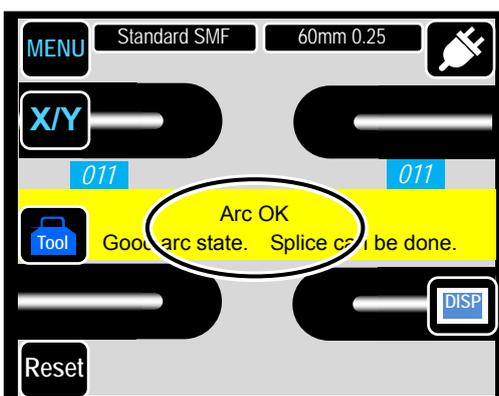


8: If “Arc OK” is displayed, begin the fiber preparation procedure to perform a splice. The splicer automatically initializes when the hood is opened.

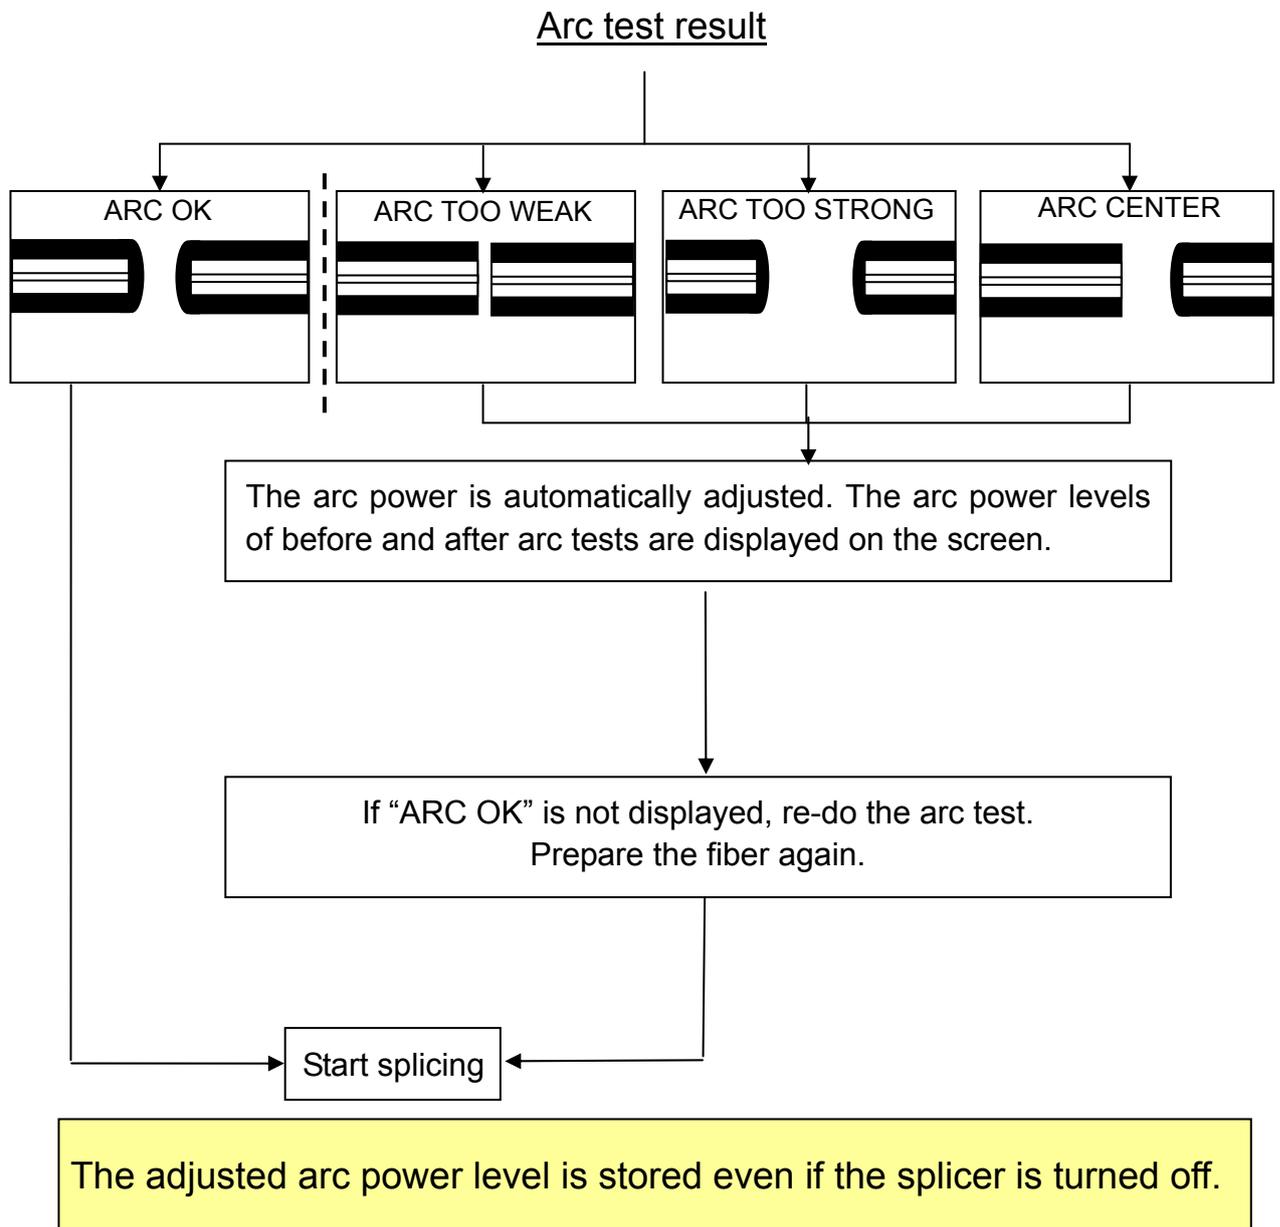


Fiber preparation


- 1: Be sure to slip the fiber protection sleeve over one of the fibers to be spliced before stripping and cleaving the fibers. The fiber protection sleeve cannot be installed after splicing.
- 2: Strip the fiber coating and clean the bare fiber.
Refer to page 2-9.
- 3: Cleave the bare fiber to proper cleave length.
Refer to page 2-10.
- 4: After setting the prepared fibers on TYPE-Q101-CA, splicing starts by touching "Start" () or pushing (). (Please refer to the next page.)

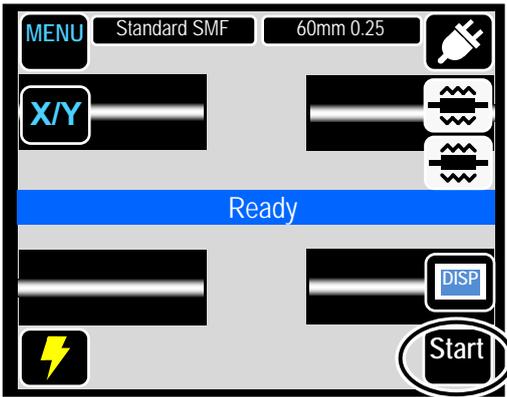


Touch the "Start".

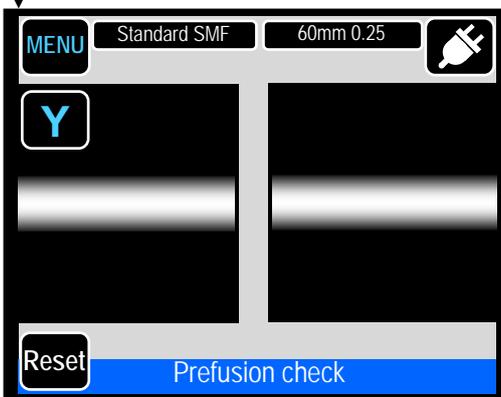

Inspection of fiber end face & dust

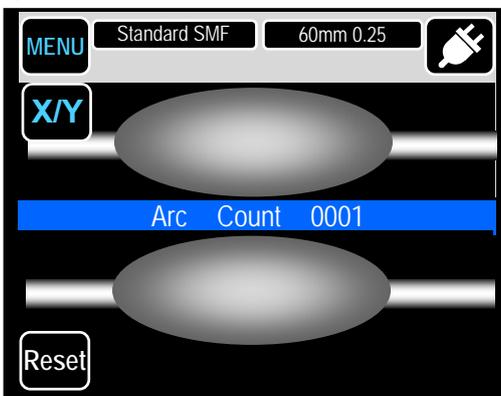

Arc is generated.

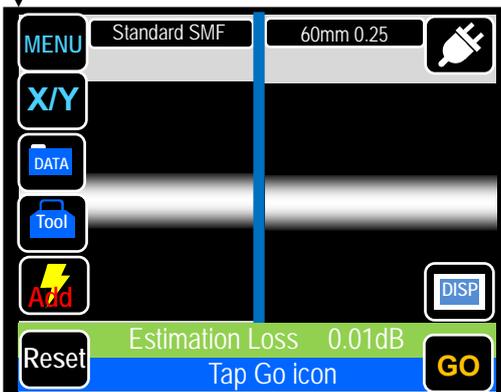


Estimated loss is displayed.


See the next page if you skip the checking of splice data and go on to the next step.

Checking splice data


- After a splice, touch the "Data" ().

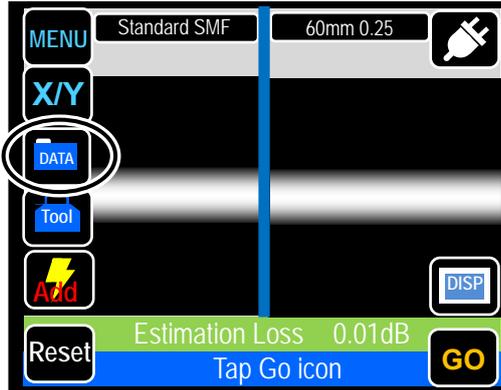

Confirm splice data.

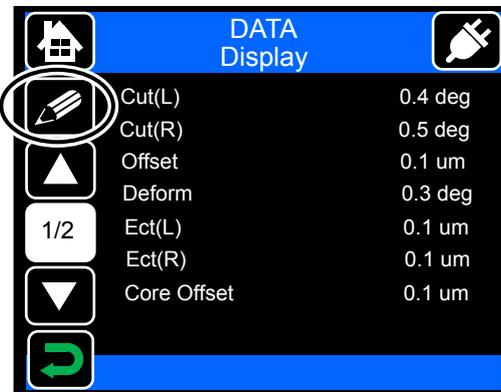


- Add the memo by touching "MEMO" ().

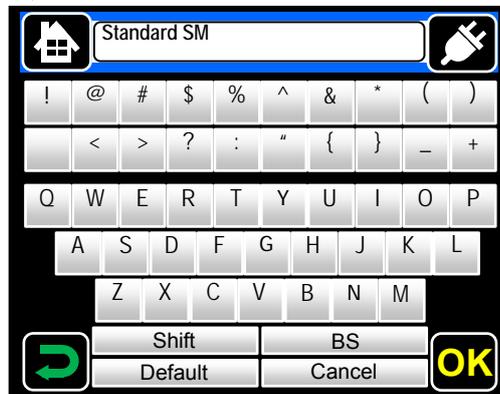

See the next page if you skip the checking of splice image and go on to the next step.

Checking splice image

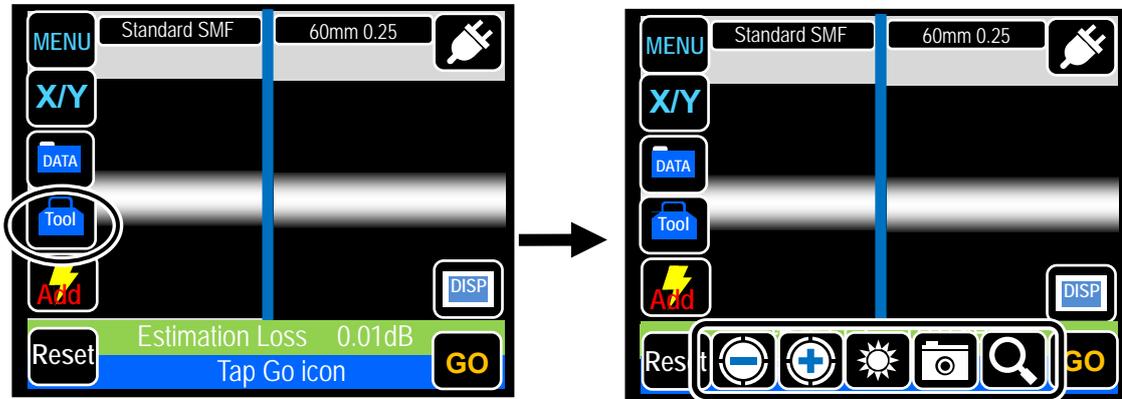

Touch the “Tool” () after splice process completed.

Icons of checking tools are displayed.

Checking Tools



:By touching an arbitrary place of the image, the part is expanding displayed.



: Save the image to SD card.



: Change the brightness of the image.




: Change the focus of the image.




Proof test


(if automatic proof test is selected)

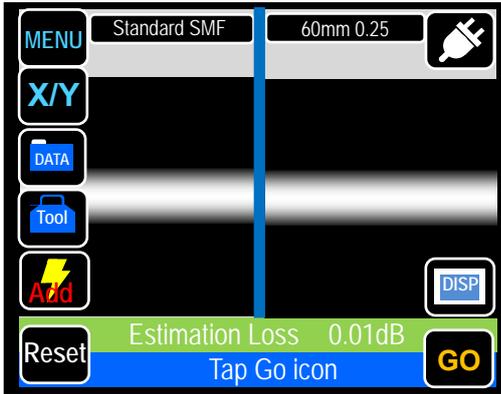

↓ Open the hood.

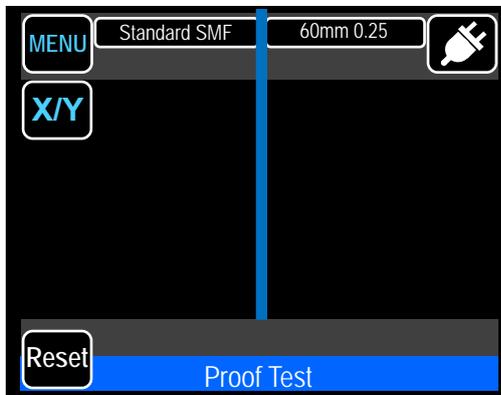


The proof test is automatically started.
(The test cannot be canceled once started.)

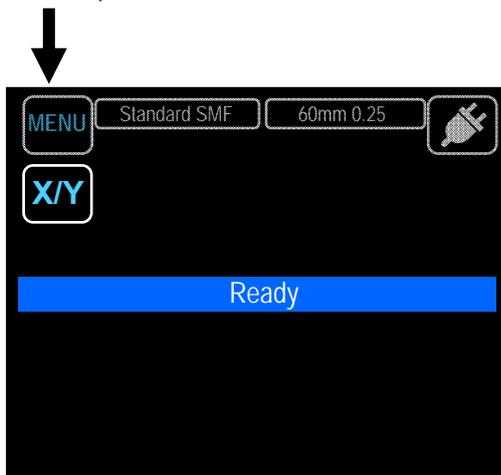


Remove the spliced fiber when the screen above is displayed.


(if manual proof test is selected)

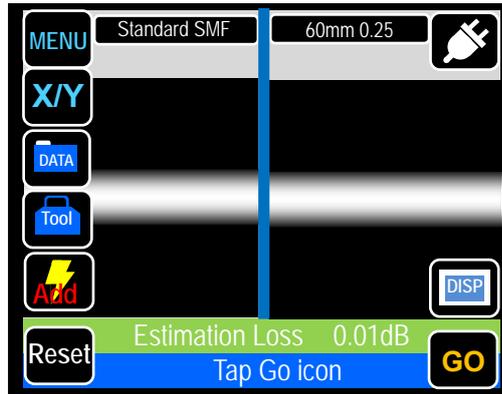

↓ Touch "GO".

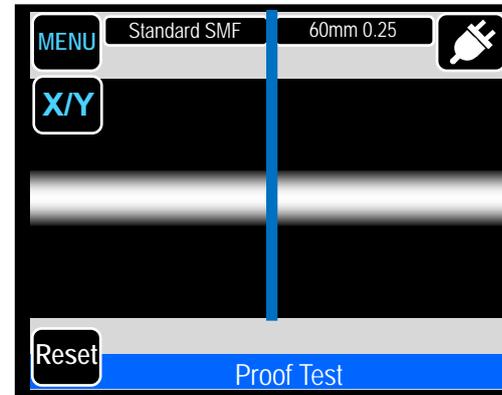

The proof test is started.
(The test cannot be canceled once started.)



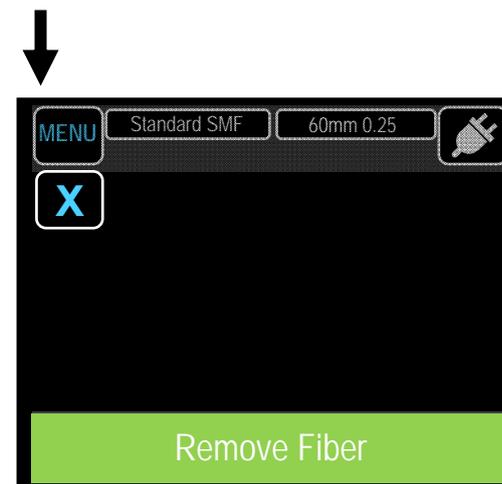


Open the hood and remove the spliced fiber when the screen above is displayed.

Take care to keep the spliced fiber straight. Do not flex it back and forth. Doing so will cause the spliced fiber to be broken, resulting in loss of the long term reliability of the fiber.

Evaluating splice quality

If the spliced fiber is as follows or estimated losses are high, re-do the entire splice.

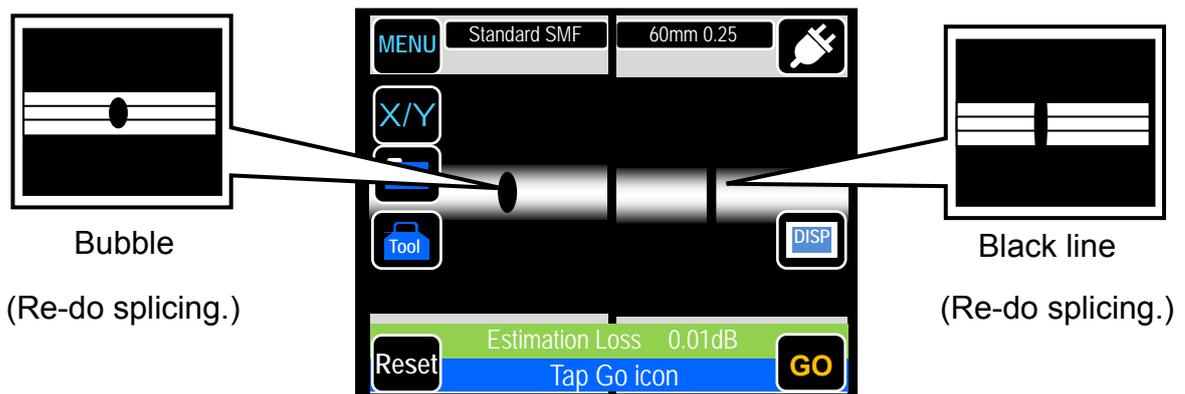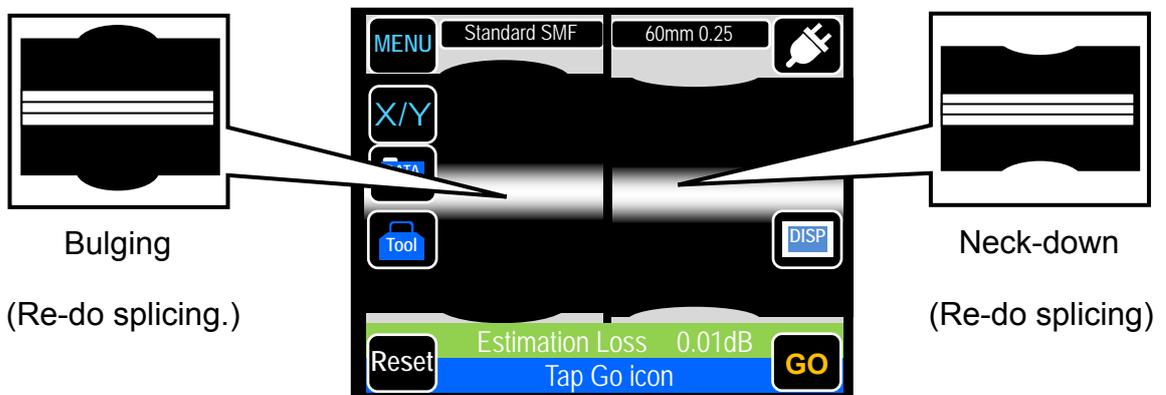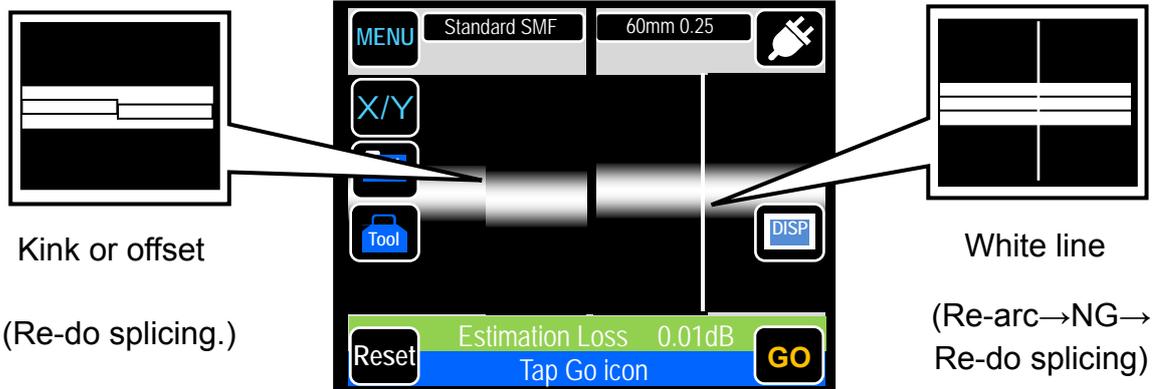


After MMF or dissimilar fiber splicing, a line sometimes appears at the splice point. But it does not affect splice quality, such as splice loss, tensile strength, and etc.

Splice protection

0: Open the heat shrink oven lid and the heat shrink oven clamps.

Open the hood and the fiber coating clamps to release the spliced fiber.

1: Make sure that the fiber protection sleeve is centered over the spliced portion of the fiber.

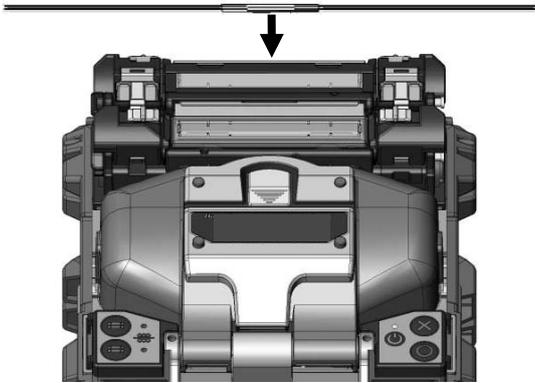


The applicable fiber protection sleeves vary depending on the cleave length. For more information, refer to page 1-4.

2: While maintaining a slight tension on the fiber end, lower the fiber onto the heat shrink oven and push down.

- Do not twist the fiber.
- Do not flex the fiber.

3: The 2 heat shrink oven clamps and the heat shrink oven lid are closed. When lowering the fiber onto the heat shrink oven, use the markings on the heat shrink oven as a reference.

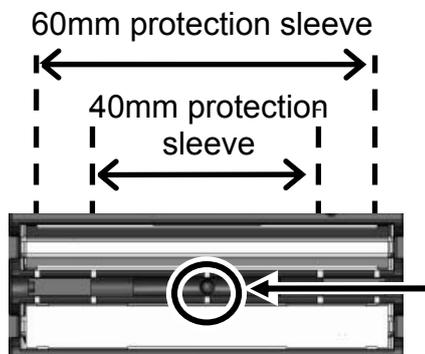


Marking for the center of the heat shrink oven



4: Touch "heat" icon () on the screen or press heat key ().

The heat cycle is started.

If Auto start heating is set to ON, the heating operation is automatically started when the fiber is placed into the heat shrink oven.

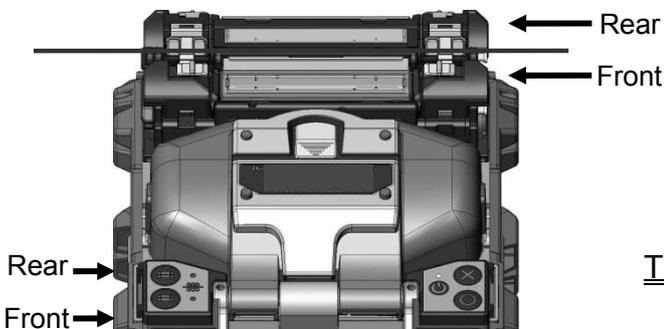

The heat icon changes as follows.

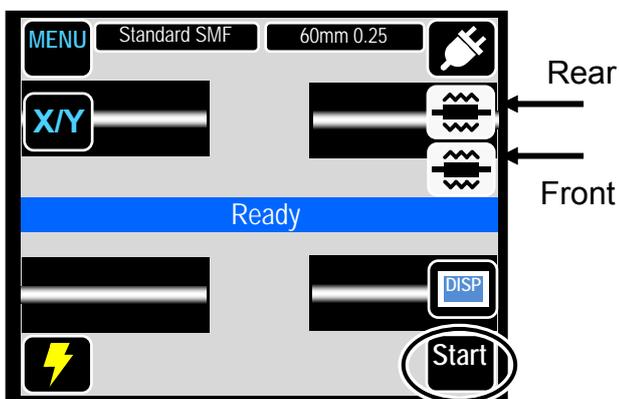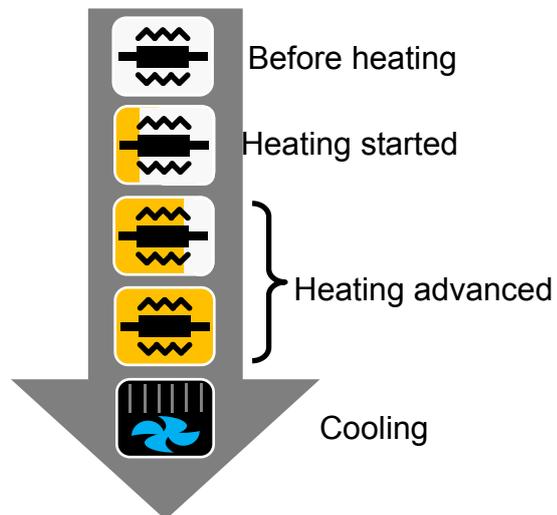


If you would like to cancel the heating process, press the  (HEAT) key or touch "heat" () again.

- 5: The splicer gives a beep sound indicating completion of the heating cycle. Take out the sleeve from the heat shrink oven after a beep sound is heard.
- 6: Place the protection sleeve onto the cooling tray.

 Caution

The protection sleeve can be taken out from the heat shrink oven after a beep sound is heard. Also finish of heating cycle can be confirmed by the heat icon's change. If the sleeve is taken out from the oven before heat cycle completed, the splice loss might increase because the less cooling cause fiber bending or twisting. Please wait for the finish of heating cycle.

<Cooling tray installation>

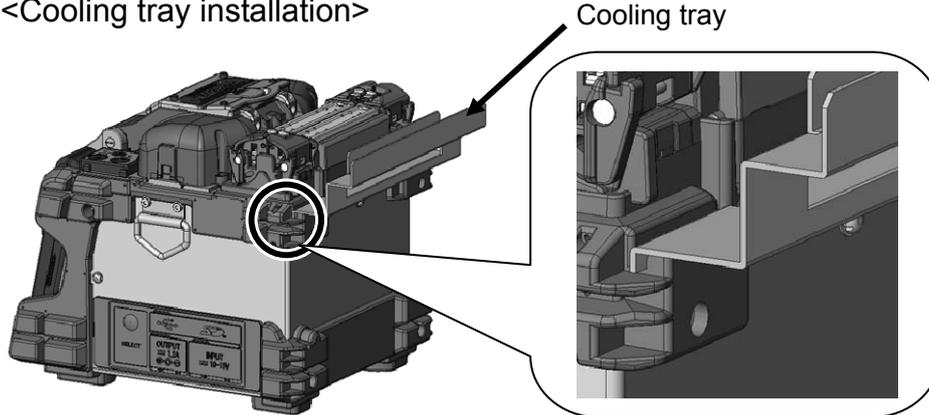

Install the cooling tray into the splicer as shown above.

 Caution

After the heat cycle is complete, the fiber protection sleeve may be hot. Handle with care.

Never touch the surface of the heating plate during the heating operation. Doing so may cause personal injury and damage to the heat shrink oven.

Evaluating protection sleeve

OK

Completely shrunk, no bubbles, the splice is centered in a sleeve



NG

1: The shrinking sleeve is not centered over the splice.



2: Bend in bare fiber



3: Bubbles on bare fiber



3. Daily cleaning and checking up

To keep excellent splice quality, regular cleaning and inspection are required. Especially cleaning should be performed before and after each use. We recommend your splicer to be checked through our maintenance service once a year.




Turn off the TYPE-Q101-CA before maintenance work. Failure to do so may cause electric shock.

Cleaning

Clean each part with a cotton swab. Please bear in mind that daily cleaning can maintain splicer performance. Clean components before and after use.


Names of components

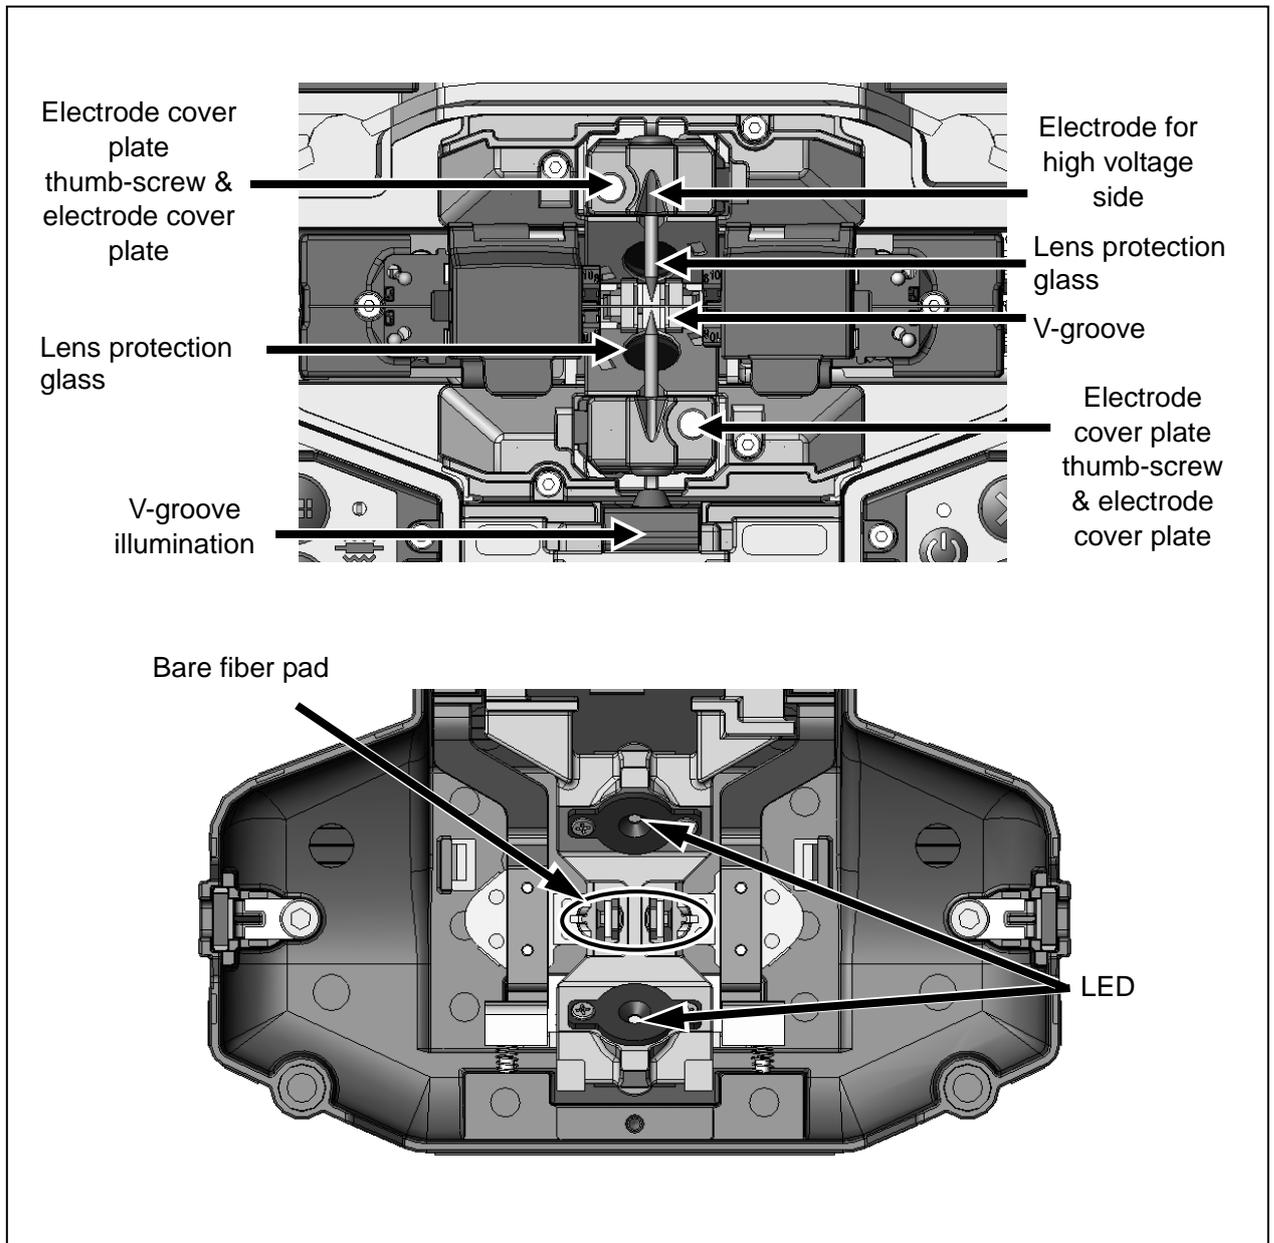

Cleaning V-grooves


Even tiny bits of dust or dirt in the V-grooves might cause the fiber to be offset. To avoid offset, carefully clean the V-grooves with a cotton swab moistened with alcohol.

- 1: Prepare a cotton swab moistened with alcohol.
- 2: Brush the surface of the V-grooves in the direction of the arrow.

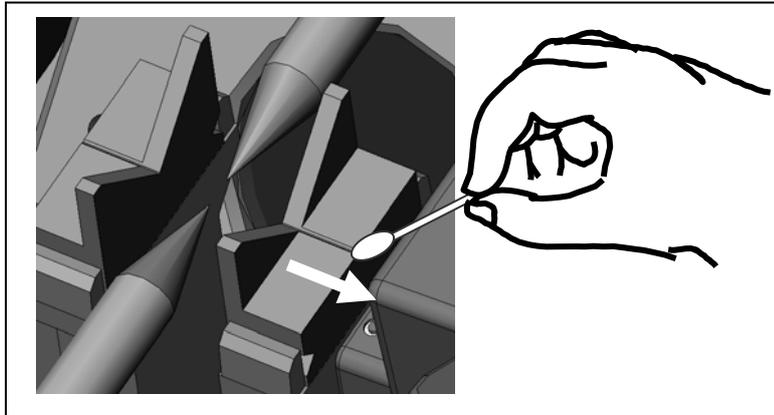


Cleaning LEDs

When a LED surface is dirty, a fiber image is unclear, resulting in imperfect image processing. If the display is uneven or LED error occurs, clean them with a cotton swab moistened with alcohol.

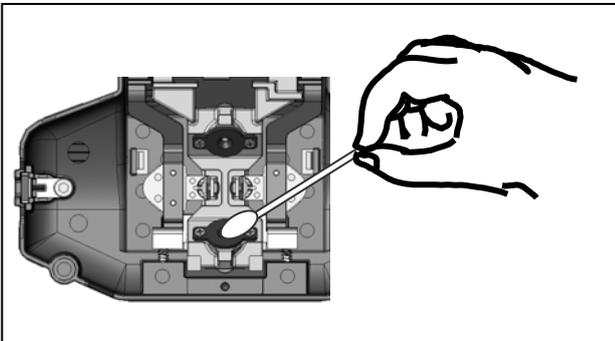

- 1: Prepare a cotton swab moistened with alcohol and wipe the surface of LED lightly.
- 2: Use a dry cotton swab to wipe off any excess alcohol.

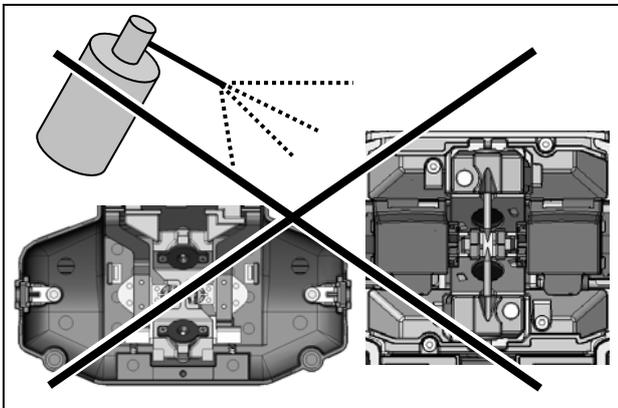


Prohibition

Do not use a canned air for cleaning. Chemical reaction may deteriorate the LED, resulting in a loss of splicing capability.

Cleaning bare fiber pads

Dirt on a bare fiber pad will also cause the fiber to be offset. When fiber offset occurs, clean the bare fiber pad.

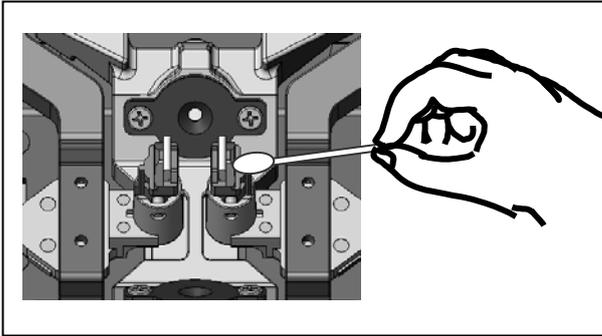


Do not apply too much force when cleaning.


- 1: Prepare a cotton swab moistened with alcohol and wipe the surface of bare fiber pads.
- 2: Use a dry cotton swab to wipe off any excess alcohol.

Cleaning lens protection glass


If an unclear fiber image is still displayed or LED error occurs again after cleaning LEDs, clean the lens protection glass.

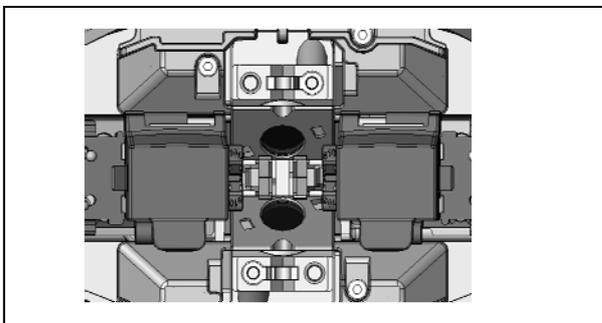


- 1: Remove the electrodes, referring to the "Replacing electrodes".

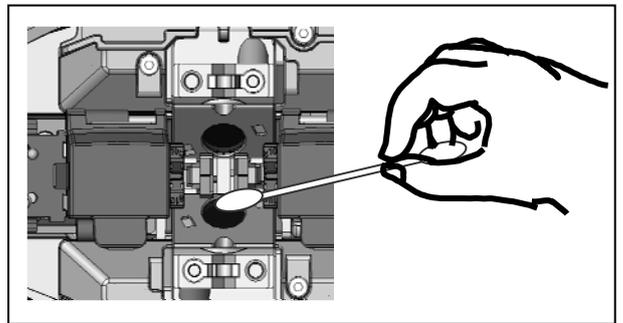


- 2: Prepare a cotton swab moistened with alcohol.
- 3: Gently wipe the lens protection glass in a circular motion.
- 4: Use a dry cotton swab to wipe off any excess alcohol.
- 5: Re-fit the electrodes.
- 6: Perform an arc test.

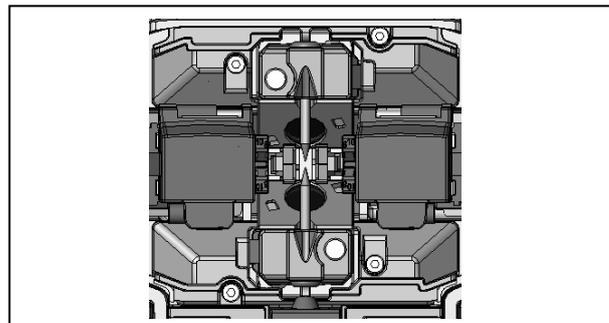

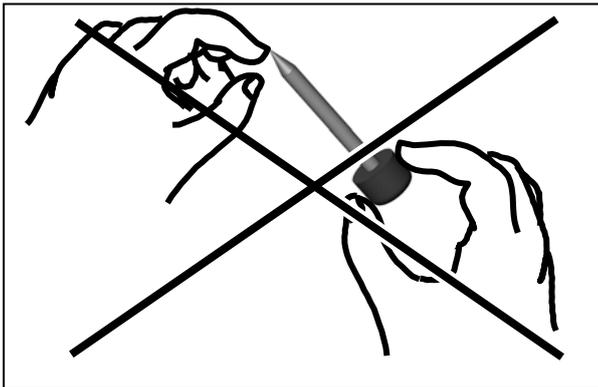

An electrode tip is extremely sharp.
Handle with care.

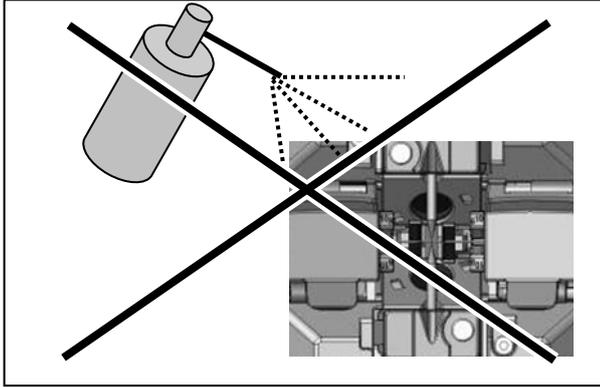


Prohibition


Do not use a canned air for cleaning.
Chemical reaction may deteriorate the
lens protection glass, resulting in a loss
of splicing

Cleaning heat shrink oven

Dirt and dust can accumulate in the heat shrink oven easily. Clean the heating plate regularly with a dry cotton swab.

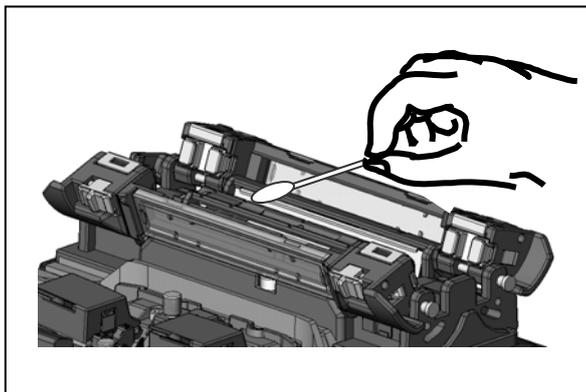

Clean the heating plate with a dry cotton swab.

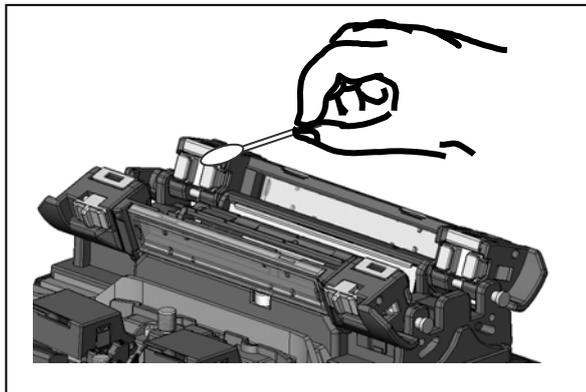

Clean the clamps of the heat shrink oven with
a cotton swab moistened with alcohol.



Caution

Remove moisture or alcohol on the heat shrink oven with a dry
cotton swab.

Replacing electrodes

Electrodes are worn out or contaminated due to silica glass evaporated during arc, and the electrode condition changes day by day. To achieve a repetitive and stable arc for excellent quality splicing, electrodes should be replaced periodically. Continuing to use the same electrodes may result in high splice losses and poor splice strength. On the TYPE-Q101-CA, electrodes typically need replacing after approximately 3,000 arc discharges.

< Electrode replacement alarm message >

If the number of arc discharge exceeds 1,000 times, will be highlighted in yellow for caution. If the number exceeds 2,000 times, Arc Count on the screen will be highlighted in red for warning, with a message “Time for new electrodes”.

<Electrode replacement warning message>


If the number exceeds 3,000 times, a warning message appears every time the splicer is powered on and until you replace electrodes according to the replacement procedures described in the next page.

Electrode replacement procedures


Please exchange the electrode to maintain the performance of TYPE-Q101-CA at about 3000 discharges. The point of the electrode is very sharp shape. Please take care enough when handling it.



1: Turn off the splicer and unplug the power cord.

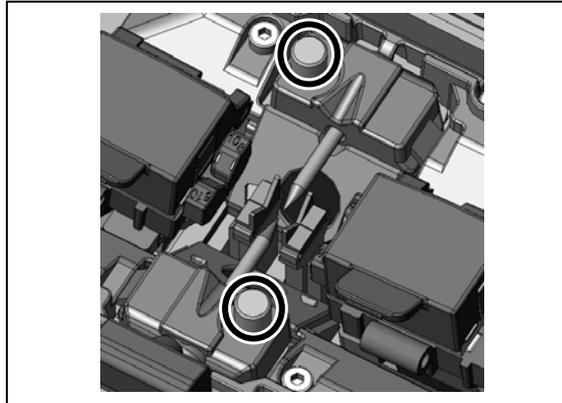


2: Using your fingers, loosen the thumbscrews.

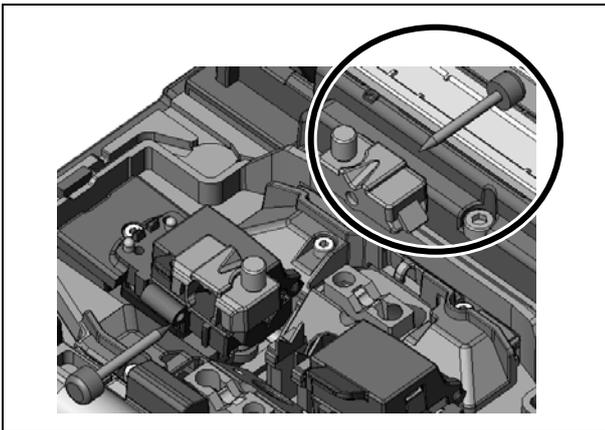

3: Lift the electrode cover plate as shown in the left figure.

4: Remove the old electrode.


5: Install a new electrode.

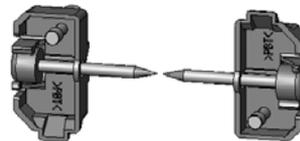

[Back view of electrode and cover plate]



When handling the electrodes, avoid touching the electrode tips with anything.

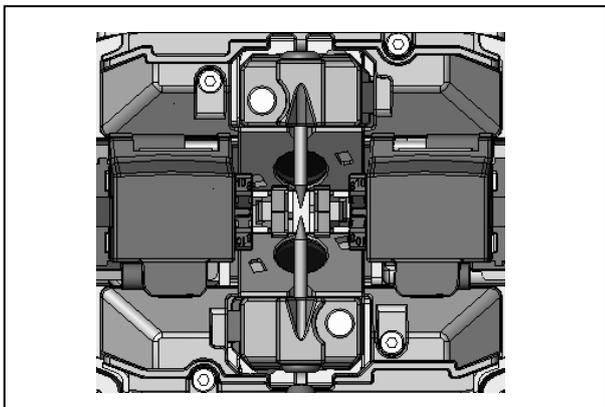


6: Tighten the thumbscrew while pressing the electrode below at each electrode cover plate.

7: Repeat step 2 to 5 for the other electrode. Always replace both electrodes at a time.

8: Plug the power cord into the power module and turn on the power to condition the electrodes. (Refer to page 4-11.) After conditioning the electrodes, the Arc count is automatically reset.

Use only Sumitomo genuine electrodes.

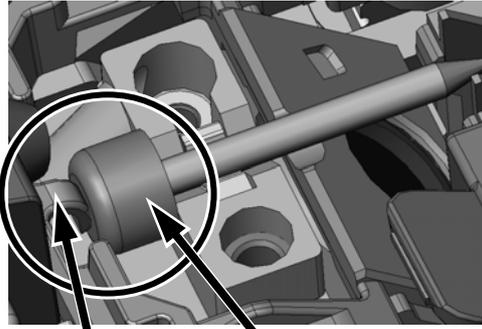

Protrusion


Plastic button




Caution

Please confirm the plastic button of the electrode is certainly pushed by the protrusion.

<Correct example>

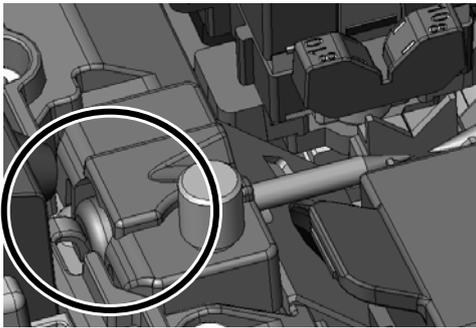


<Wrong example>

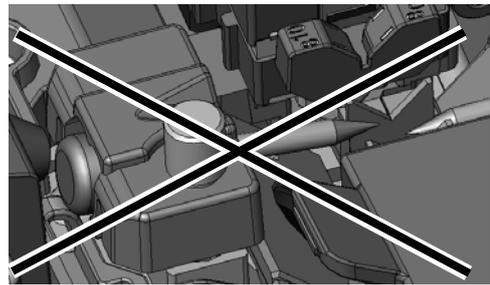

Caution

Splice performance is not steady or the part of splicer is damaged when installing the electrode at a wrong position.

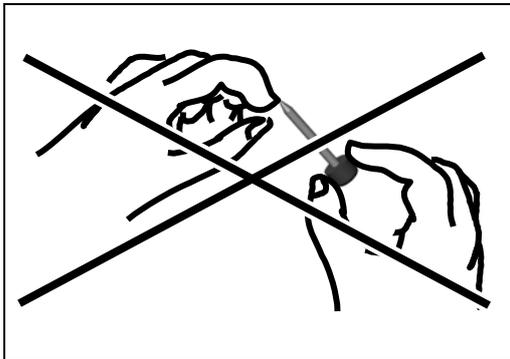

Caution

An electrode tip is extremely sharp. Handle with care.



Caution

- Be sure to turn off the splicer and unplug the power cord or remove the battery pack before replacing the electrodes.
- Discard the old electrodes properly.




Caution

- Do not clean the electrode. Doing so may cause unstable arcing performance.

Packing and storage instructions

- Store the TYPE-Q101-CA and its accessories in a designated place in the case referring to the photo below.
- Store the TYPE-Q101-CA in the direction shown in the photo below.
- The TYPE-Q101-CA with a cooling tray cannot be stored in the case. Remove the cooling tray from the splicer and store it in the pocket.

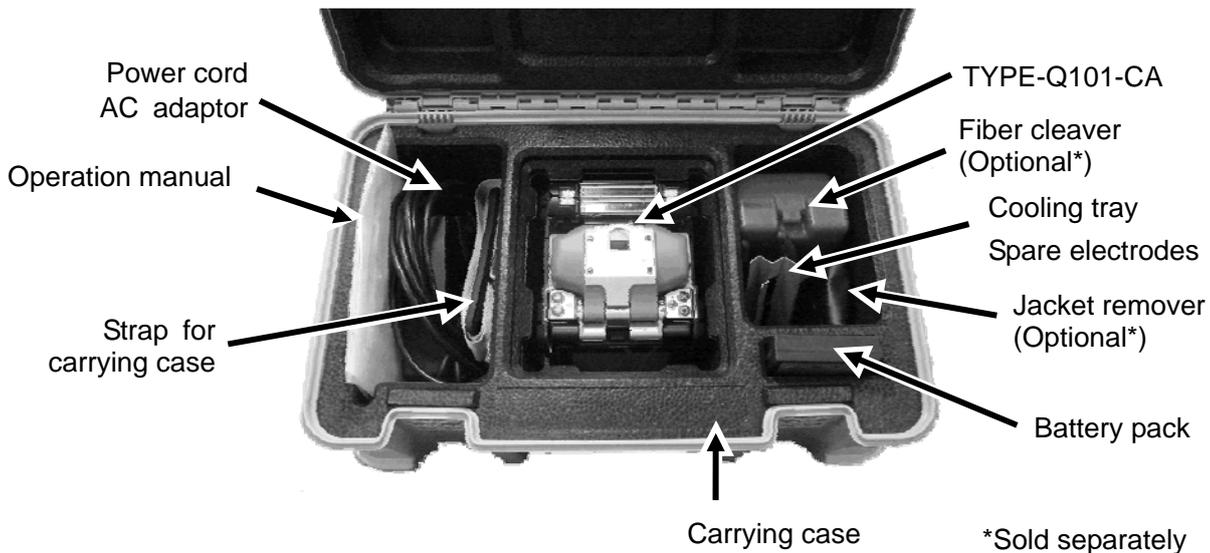

The TYPE-Q101-CA fusion splicer is a precision instrument. Its rugged shipping case is custom designed to protect it from impact, dust, dirt, and moisture. Always store and transport the machine in its case. Observe the following instructions.

- Clean the TYPE-Q101-CA and all accessories before storing them.
- Be sure to remove the battery pack from the TYPE-Q101-CA and store it in a given place.



Keeping the battery in the TYPE-Q101-CA may cause the battery terminal to be damaged or deteriorated, resulting in fire.

- Reposition the monitor before storing.
- Discard the liquid solvent properly, or lock the dispenser completely and put it in a plastic bag before packing the dispenser in the case.



Take extreme care of the handling of alcohol.

- Before storing the fiber cleaver, dispose of the fiber fragments collected in the off-cut collector in a proper way.




Glass fiber fragments are extremely sharp. Handle with care.

- Close the carrying case completely and latch it before transportation.
- Pay attention to storage temperature and dew condensation when storing the splicer. The battery is self-discharged during storage. Perform temperature control and charge and discharge the battery once every 6 months.
 - Storage temperature -20°C ~ +50°C (if stored for less than 1 month)**
 - 20°C ~ +40°C (if stored for less than 3 months)**
 - 20°C ~ +20°C (if stored for less than 1 year)**


4. Functions

Splice and heater programs setting

<Splice program setting>

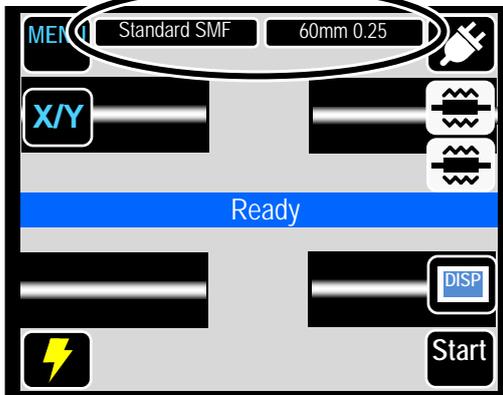


Touch splice program icon once. The icon will expand. Then touch it again.

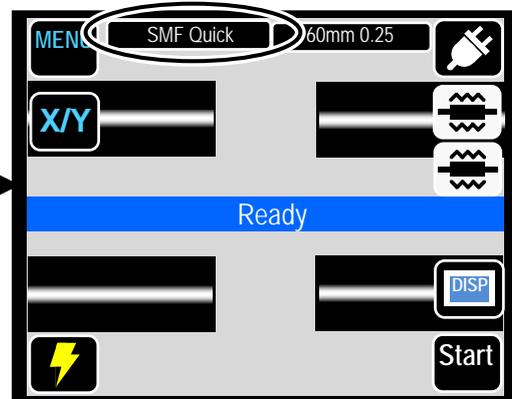


Splice program is changed.

For the details of splice programs, refer to page 4-3.


If you would like to change splicer program parameters, refer to page 4-5.

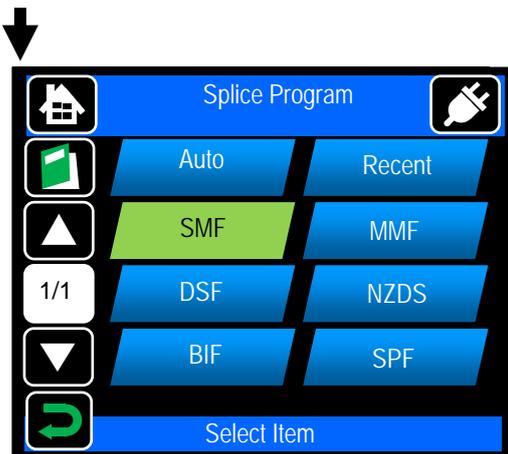

Select the category of the fiber.

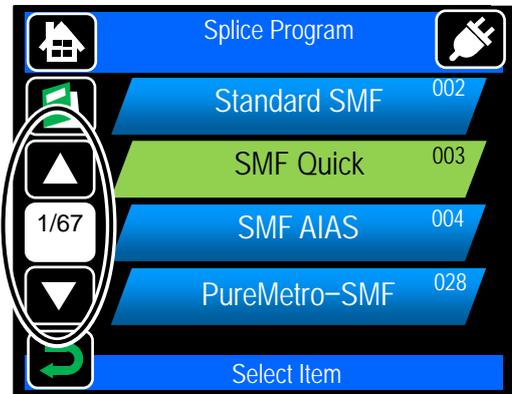


If the page icon ($\frac{x}{x}$) displays the number except "1/1", that means there are other pages. Touch the "move" (\blacktriangle , \blacktriangledown) to go next page or touch the page icon to order the page directly.

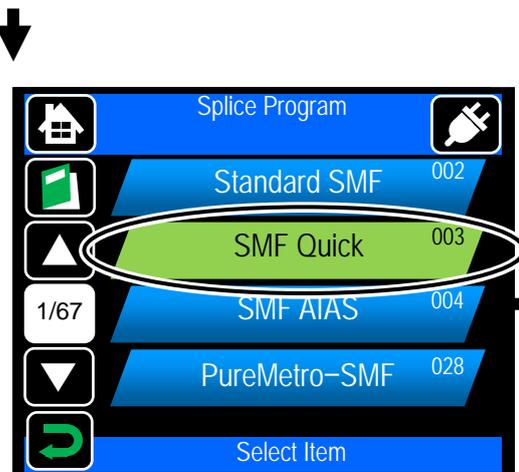


Touch splice program once. The icon will change its color. Then touch it again to determine selection.


<Heater program setting>

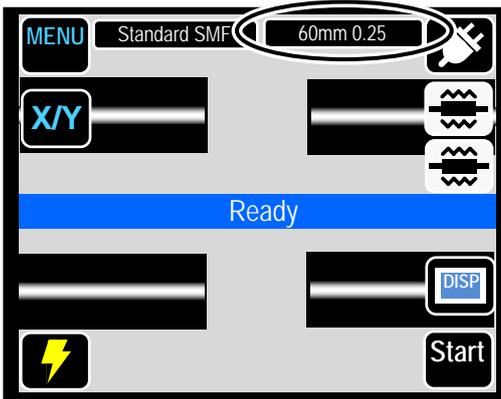

Touch heater program icon once. The icon will expand. Then touch it again.

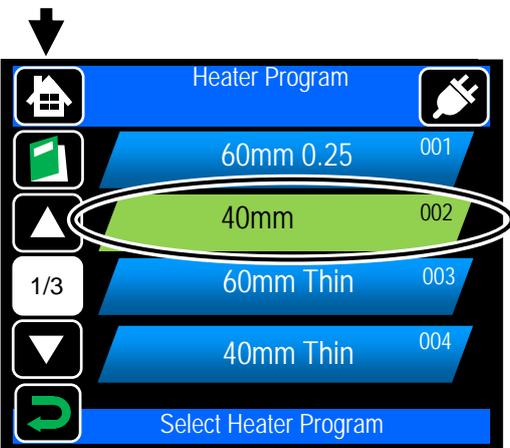

Touch heater program once. The icon will change its color. Then touch it again to determine selection.

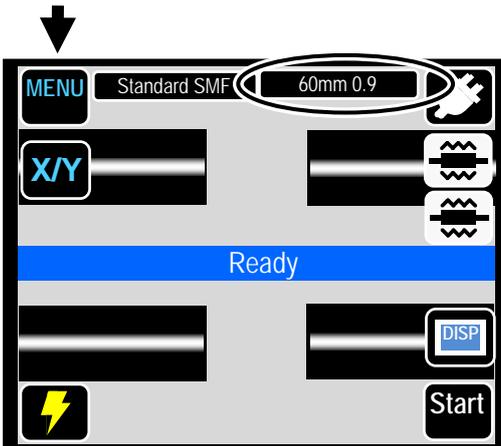

Heater program is changed.

For the details of heater programs, refer to page 4-4.
If you would like to change heater program parameters, refer to page 4-5.

Splice programs

Category	Splice program	Details
Auto	—	<p>Using Auto fiber profiling check and Detection System (APDS*1), the TYPE-71C recognizes the type of fiber loaded, automatically chooses the correct splice program, and proceeds to splicing. This mode enables to splice standard SMF (ITU-T G.652), MMF (ITU-T G.651), DSF (ITU-T G.653), NZDSF (ITU-T G.655) and BIF (Bend Insensitive fiber, ITU-T G.657). The recognized fiber type is displayed below a fiber image on the monitor screen.</p> <ul style="list-style-type: none"> • The recognizable fiber types are Standard SMF, MMF, DSF, NZDSF and BIF. • DSF is recognized as NZDSF. • The fiber detection is conducted on left and right fibers individually. Even if left and right fibers are recognized as different fiber types in the result of the fiber detection, the splicer automatically proceeds to splicing. To double check the results of the fiber detection, set “Arc Pause” to ON beforehand. • The data on representative core profiles of standard fiber types are stored in the TYPE-Q101-CA. However, other manufacturers’ and new design fibers may sometimes be recognized incorrectly.
Recently	—	The splice program selected recently is listed.
SMF	Standard SMF	Can be used for splicing identical standard SMF (ITU-T G.652).
	SMF Quick	Can be used for splicing identical standard SMF (ITU-T G.652) and making a faster splice. In this mode APDS is disabled.
	SMF AIAS	Automatic Intentional Axis Shift function (AIAS*2) enables to splice identical standard SMF (ITU-T G.652) with high core-cladding eccentricities.
	Other SMF	The splice programs that include standard SMF are listed. ex)SMF-DSF
	SMF ATTN-STD	<p>This mode can be used for splicing fibers by shifting the centers of the left and right fiber cores and achieving intentional high splice losses.</p> <p>Recommended target attenuation range: 0.1~5.0dB</p> <p>An estimated splice loss displayed in the splicer may not match an actual splice loss depending on the fiber type being spliced. It is recommended that actual splice losses be measured and checked with a power meter.</p> <ul style="list-style-type: none"> • ATTN: Enter a target splice loss in “Function” settings (6/6 page). User settable attenuation range is 0.1~15dB (in increments of 0.1dB). • ATTN factor: If the target splice loss does not match an actual loss, modify this value in “Function” settings .
	SMF ATTN-WIDE	<p>Recommended target attenuation range: 5.0~15.0dB</p> <p>Refer to “SMF ATTN-STD” regarding how to use this mode.</p>
MMF	MMF 50 & 62.5	Can be used for splicing identical standard MMF (ITU-T G.651).
DSF	Standard DSF	Can be used for splicing identical standard DSF (ITU-T G.653).
NZDS	Typical NZDS	Can be used for splicing identical standard NZDS (ITU-T G.655).
	Other NZDS	The splice programs of each manufacturer’s NZDS are listed.

category	Splice program	Details
BIF	PureAccessR5	Can be used for splicing PureAccess-R5 (Bend Insensitive fiber, ITU-T G.657).
	G657 adaptive	Can be used for splicing BIF (Bend Insensitive fiber, ITU-T G.657). This mode helps to splice optical fiber with complicated core profile.
	Other BIF	The splice programs of each manufacturer's BIF are listed.
SPF	—	The splice programs of special fibers, such as EDF and photonic fiber, which do not belong to other categories are listed.

*1: The splicer automatically recognizes optical fiber type loaded via image processing, verifies the selected splice condition matches the fiber, and also displays the results if a mismatch is detected. This system prevents an operator from splicing with the incorrect program.


*2: High core-cladding eccentricities have an effect on surface tension during arc, yielding high splice loss. This method is used to intentionally offset the left and right fiber centers in order to minimize this effect.

Heater programs

The heating programs are optimized for Sumitomo protection sleeves. Select an appropriate heater program for the protection sleeve you are using.

Page	Heater program	Details
1/3	60mm 0.25 FPS-1	Can be used for heat shrinking 60mm protection sleeves for single fiber with 0.25mm coating, for example, Sumitomo FPS-1.
	40mm FPS-40	Can be used for heat shrinking 40mm protection sleeves for single fiber, for example, Sumitomo FPS-40.
	60mm Thin SPS-60	Can be used for heat shrinking 60mm semi-shrunk protection sleeves for single fiber, for example, SPS-60.
	40mm Thin SPS-40	Can be used for heat shrinking 40mm semi-shrunk protection sleeves for single fiber, for example, SPS-40.
2/3	60Thin +5s SPS-60+5s	The program which heating duration is 5 seconds longer than "60mm Thin".
	60Thin -5s SPS-60-5s	The program which heating duration is 5 seconds shorter than "60mm Thin".
	40Thin +5s SPS-40+5s	The program which heating duration is 5 seconds longer than "40mm Thin".
	40Thin -5s SPS-40-5s	The program which heating duration is 5 seconds shorter than "40mm Thin".
3/3	60mm 0.9 FPS-1	Can be used for heat shrinking 60mm protection sleeves for single fiber with 0.9mm coating, for example, Sumitomo FPS-1.
	LYNX	Can be used for heat shrinking protection sleeves of Sumitomo's splice-on-connector "Lynx-CustomFit".
	Drop FPS-D60	Can be used for heat shrinking 60mm protection sleeves for drop cable splice, for example, Sumitomo FPS-D60.


<Change splice program parameter>

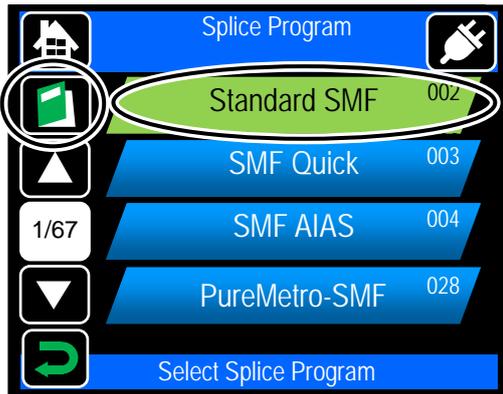

In the splice program setting screen (page 4-1), select the program (change the color), then touch "Setting" icon (). Item select screen is displayed.




Touch the item once. The icon will change its color. Then touch it again to determine selection.

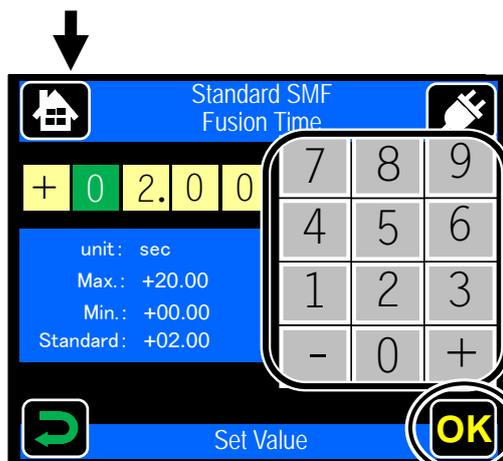

Input the value by touching number keys, then touch "OK" ().


<Change heater program parameter>

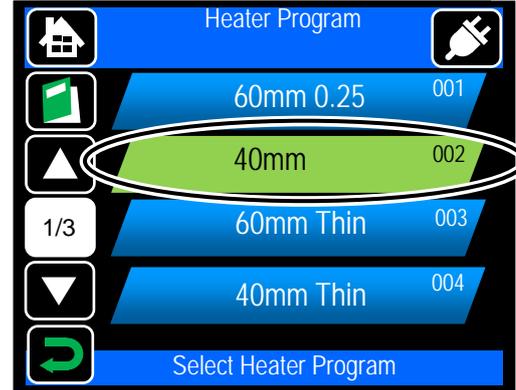

In the heater program setting screen (page 4-2), select the program (change the color), then touch "Setting" icon (). Item select screen is displayed.




Touch the item once. The icon will change its color. Then touch it again to determine selection.

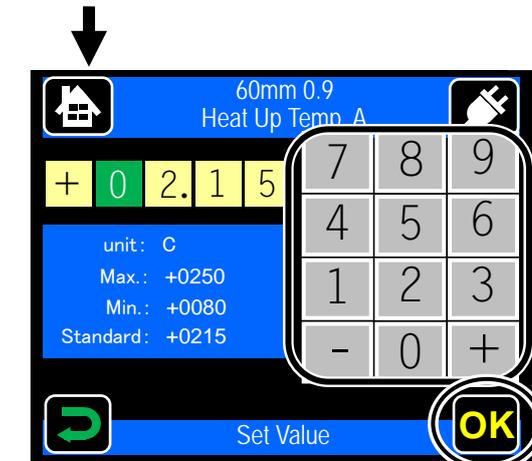


Input the value by touching number keys, then touch "OK" ().

Page	Splice program items
1/2	<Fusion Time>
	Fusion time is the duration of arc discharge. (Numerical input)
	<Prefusion Time>
	Pre-fusion time is the time in seconds the fiber ends wait after the arc discharge begins before beginning the overlap (feed). (Numerical input)
	<Arc Gap>
	Arc gap is the distance between the left and right fibers before fusion takes place. (Numerical input)
2/2	<Over Lap>
	Overlap is the amount of overlap between the left and right fibers that occurs when the right fiber is fed forward during the arc fusion. (Numerical input)
	<Arc Power>
	Expressed in a unit-less step value as [Standard +XX]. Arc power controls the amount of heat the fibers are exposed to during the fusion arc. As the power is automatically set after an arc test and compensated at every splices, normally an operator does not need to change it manually. "Standard" means compensated arc power of the splice program, and added value can be manually set by operator. (Numerical input)
	<Arc Center>
	Arc center is the position of the arc center. Usually it is set automatically by the splicer. (Numerical input)


Page	Heater program items
1/2	<Heat Up Temp A>
	Heating element rise up to the set temperature in the first term of heating cycle. (Numerical input)
	<Heating Duration A>
	Duration of the first term of heating cycle. (Numerical input)
	<Heat Up Temp B>
	Heating element rise up to the set temperature in the middle term of heating cycle. (Numerical input)
2/2	<Heating Duration B>
	Duration of the middle term of heating cycle. (Numerical input)
	<Heat Up Temp C>
	Heating element rise up to the set temperature in the latter of heating cycle. (Numerical input)
	<Heating Duration C>
	Duration of the latter term of heating cycle. (Numerical input)
2/2	<Heat Finish Temp>
	The temperature of finishing heating cycle after cooling by the fan. (Numerical input)

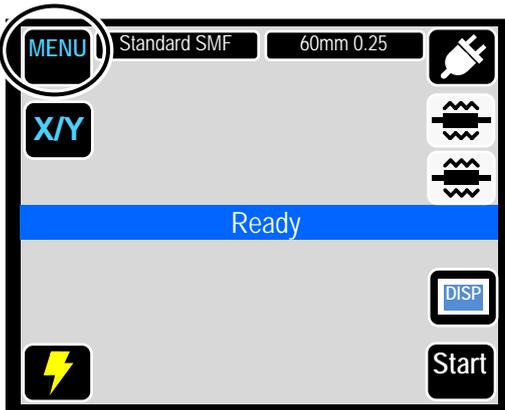

Touch "Menu" () to go to menu screen.

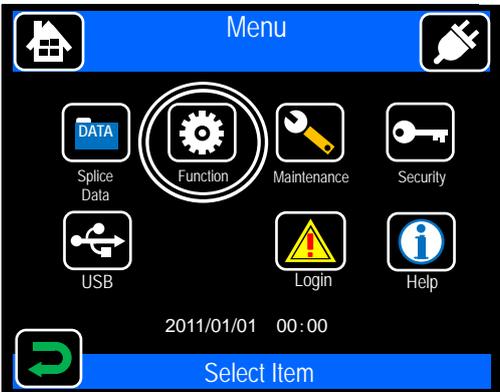

Touch "Function" () to go to function screen.

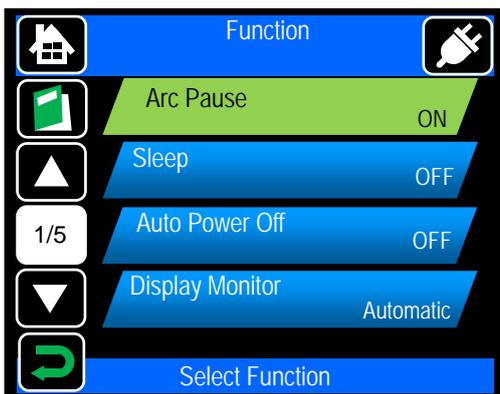



Touch the item once. The icon will change its color. Then touch it again to go to setting screen.

For more details of the items of function, please refer to the page 4-10.


If the page icon () displays the number except "1/1", that means there are other pages. Touch the "move" ( , ) to go next page or touch the page icon to order the page directly.

Screen indication

In the function setting item of following * sign, the displaying method of the screen can be selected.

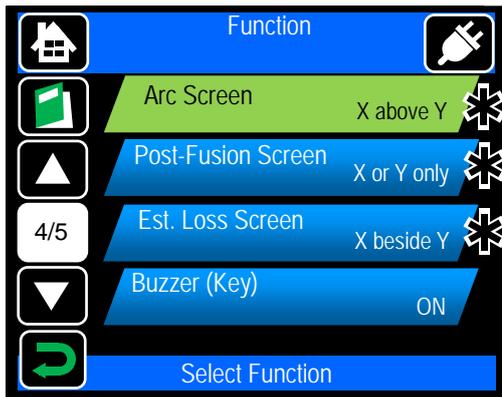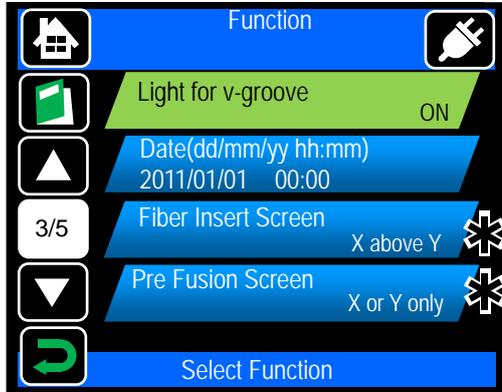


X or Y only

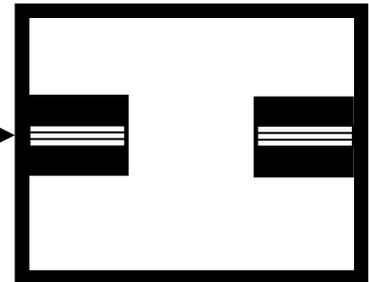


If "X or Y only" is selected, X or Y screen is displayed on the screen.

X above Y

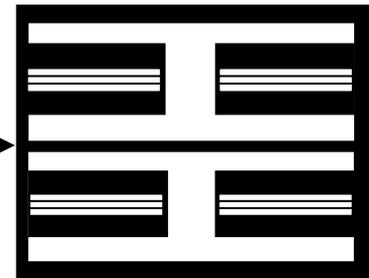

If "X above Y" is selected, X and Y screens are vertically displayed on the screen.


X beside Y

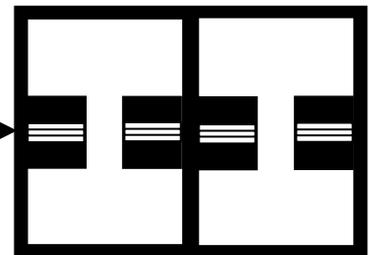


If "X beside Y" is selected, X and Y screens are horizontally displayed on the screen.

Page	Functions
1/5	<Arc Pause>
	This function stops the splicing process before arcing occurs. If you would like to check offset and fiber end faces, set this function to ON.
	<Sleep>
	If the splicer is not interrupted for a certain span of time, to minimize power consumption on standby, the monitor and 12VDC will be turned off. (The Power LED will be lit in orange.) To return to normal operation, press any key, except the Power key.
	<Auto Power Off>
	If the splicer is in Sleep mode and is not interrupted for another certain span of time, the splicer is automatically powered off. You need to switch on the splicer again.
	<Display Monitor>
	Front monitor type or Back monitor type can be selected.
2/5	<Auto Start>
	This function starts the splicing process when the fiber is inserted in the splicer and the hood is closed.
	<Language>
	The language being displayed can be selected. (Some languages cannot be selected.)
	<Temperature Unit>
	This function switches the temperature units.
	<Heater Auto Start>
	This function starts the heating process when the fiber is placed into the heat shrink oven.
3/5	<Light for V-groove>
	This function sets the V-groove illumination to ON or OFF.
	<Date>
	This function sets the built-in clock of the splicer to local time.
	<Fiber Insert Screen>
	<Pre-Fusion Screen>
Single (X or Y) screen type or dual (X and Y) screen type can be selected in each step of the splicing process. For further details, please refer to page 4-9.	
4/5	<Arc Screen>
	<Post-Fusion Screen>
	<Est. Loss Screen>
	Single (X or Y) screen type or dual (X and Y) screen type can be selected in each step of the splicing process. For further details, please refer to page 4-9.
	<Buzzer (Key)>
Buzzer sound of touching icons or pressing keys can be selected. "Mute" can be selected too.	
5/5	<Buzzer (Stop)>
	Buzzer sound of arc pause can be selected. "Mute" can be selected too.
	<Buzzer (Error)>
	Buzzer sound of detecting errors during splice. "Mute" can be selected too.
	<Bright>
	The brightness of the monitor can be adjusted by four stages.
	<Audio Volume>
The volume of the speaker can be adjusted by four stages.	


Maintenance settings

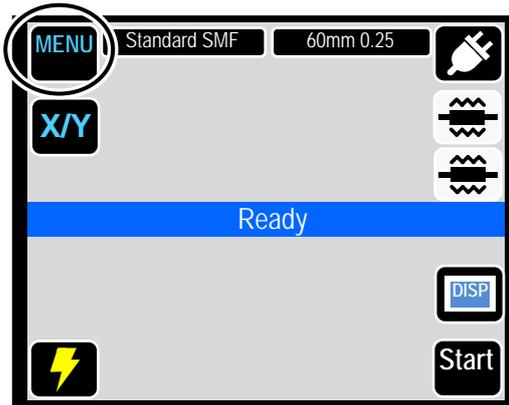


Touch "MENU" () to go to Menu screen.

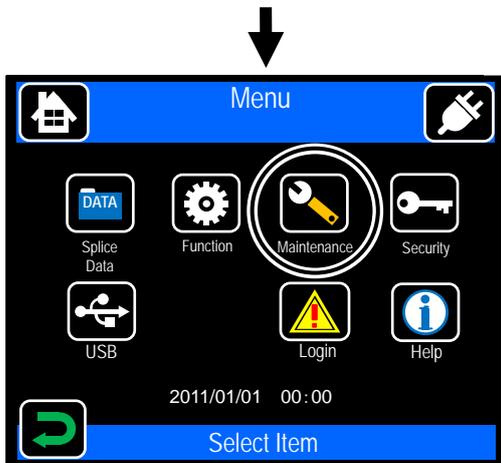

In the menu screen, touch "Maintenance" icon () to go to Maintenance screen.

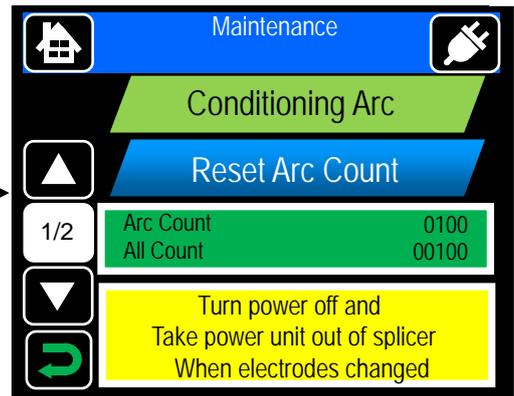


Touch the item once. The icon will change its color. Then touch it again to determine selection. Touch the "move" ( , ) to go next page.

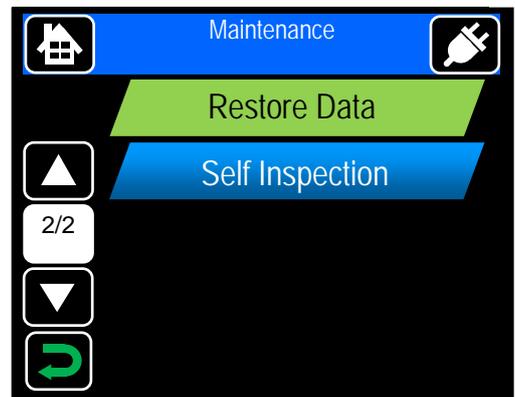


Page	Maintenance
1/2	<Conditioning Arc>
	After the electrodes are replaced, this function is used to condition a new electrode. The number of conditioning arc is preset. Arc Count is automatically reset after conditioning arc is performed.
	<Reset Arc Count>
	Arc Count can be reset, while All Count cannot.
2/2	<Restore Data>
	All parameters except Arc Count and All Count are returned to the factory setting.
	<Self Inspection>
	The circuit board, optical unit, motors and heat shrink ovens are automatically inspected.

Splice data storage function

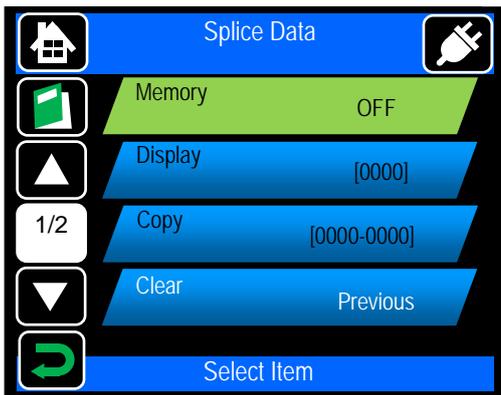

Touch the "Splice Data" icon () on the menu screen to go to DATA screen. Please set "Memory" item ON before splicing if you want to save the splice data.

To display stored splice data, select "Display". Enter the memory location you would like to view.

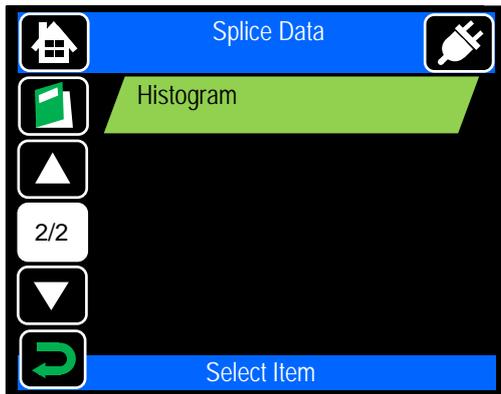


When "Copy" item is selected, the saved data is copied onto the SD card in CSV format.

In "Histogram" item, the histogram of estimated loss and angle can be displayed based on the data that has been recorded.



Description of data

- ◆ Cut (L/R): Inspected cleave angle of the (L/R) fiber.
- ◆ Offset: Inspected offset of the core axis (or diameter axis).
- ◆ Deform: Inspected tilt angle of the core axis caused by deformation.
- ◆ Ect (L/R): Inspected core eccentricity of the (L/R) fiber.
- ◆ Core Offset: Inspected core step status of the offset caused by deformation.
- ◆ Arc Count: Arc count since the replacement of the electrodes.

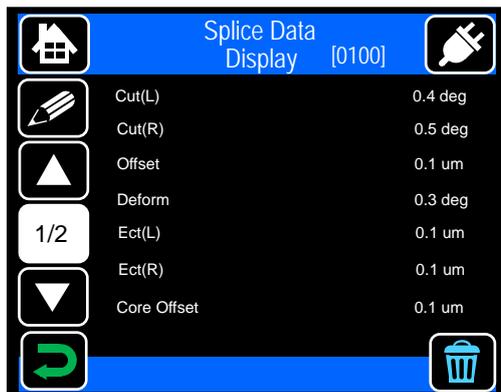


When the dust box icon () is touched, the referred data is deleted.

Add the memo by touching "MEMO" ().

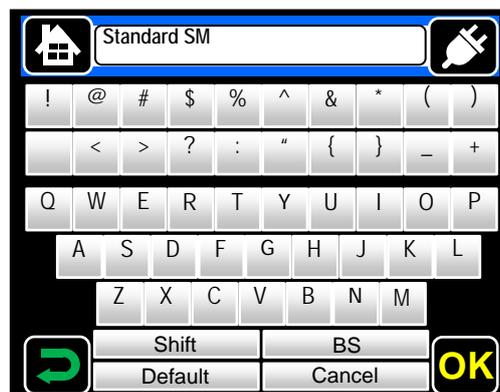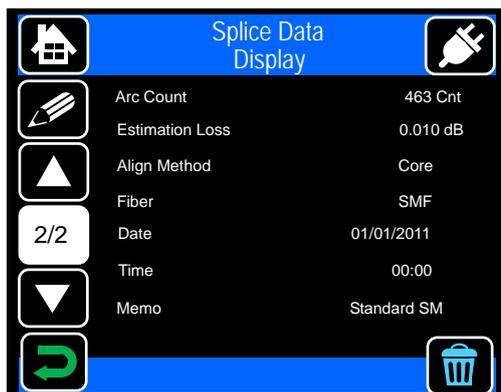

USB connection function

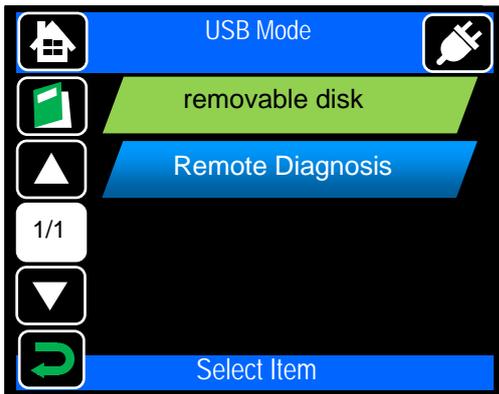

Touch USB icon () in the menu screen to go to the USB mode screen. The following functions can be used by connecting TYPE-Q101-CA with the PC via USB cable, and selecting each item.

<removable disk>:

The data of the SD card can be read and written from the PC by selecting this item with the SD card inserted in the SD card slot.

<Remote Diagnosis>:

Select this item when TYPE-Q101-CA is connected with the PC for the Internet maintenance.

Software download via internet

By accessing to the URL below and getting a maintenance application, customers can upgrade newest software via internet. For further information, please access to the URL and refer to the manual.

<http://www.rim-plus.sei.co.jp/>


Login function

By inputting the pass code, the expanded functions for the administrator can be used. Please refer to "Administrator menu operation instructions" for details.




Help function

TYPE-Q101-CA has a function to display the user training video such as the method of the preprocessing of the fiber, the daily checkup, and the cleaning in animation. It is possible to run the video, to stop temporarily, and to confirm the work procedure details.

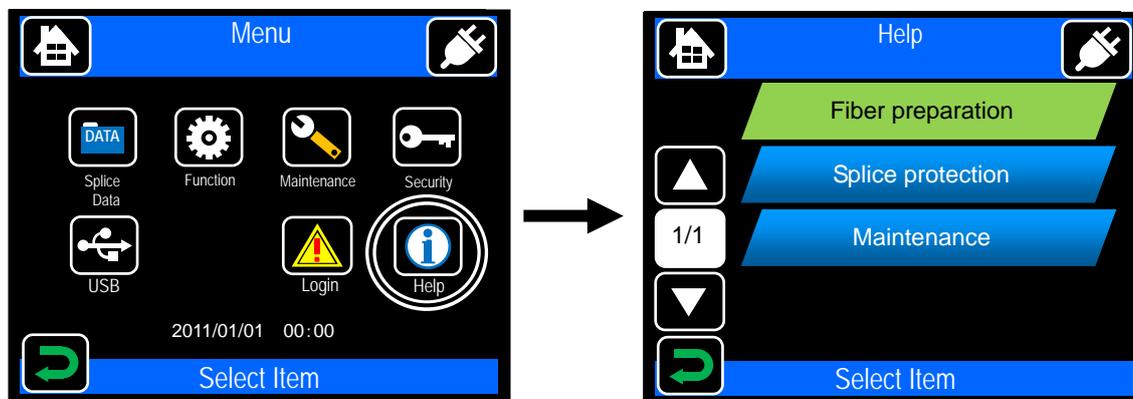

Touch the "Help" icon () in menu screen to go to movie screen.

Select the movie.

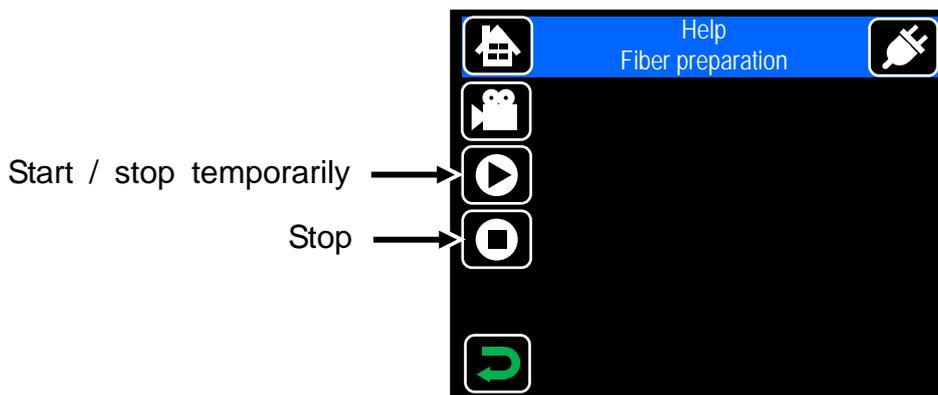


5. Other convenient functions

The TYPE-Q101-CA is provided with various functions. Set up the functions as necessary.


Back monitor type

The back monitor type is convenient when you would like to place the fiber to be spliced for installation closer to you.

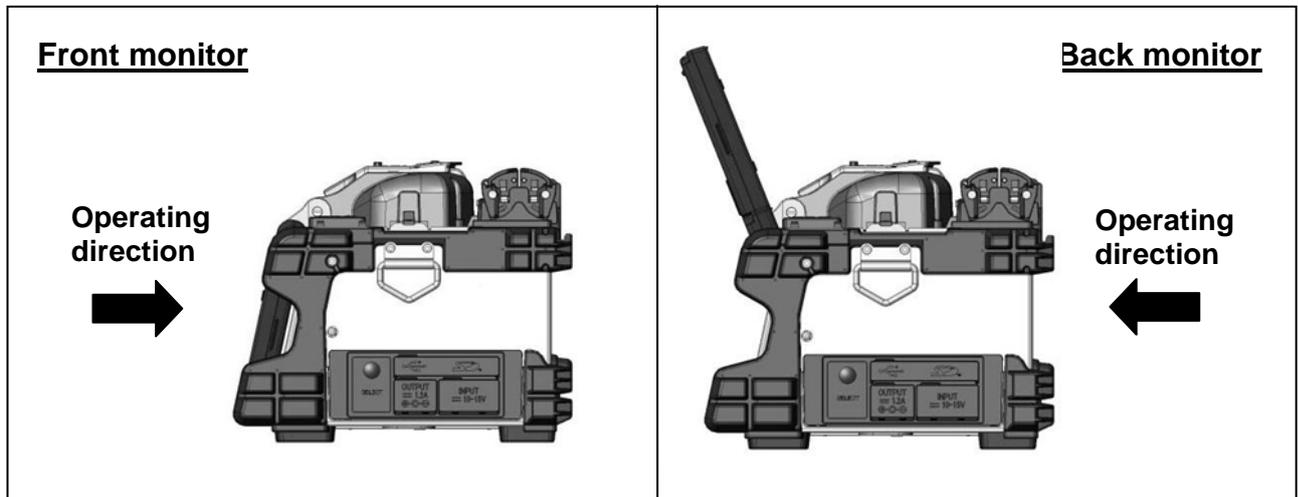


The monitor display reverses automatically when the monitor is moved to the position of the back monitor type. (Refer to the page 4-10)

When using the splicer by the back monitor type, it is easy to work if the right and left of the coating clamp is replaced according to the following procedures.

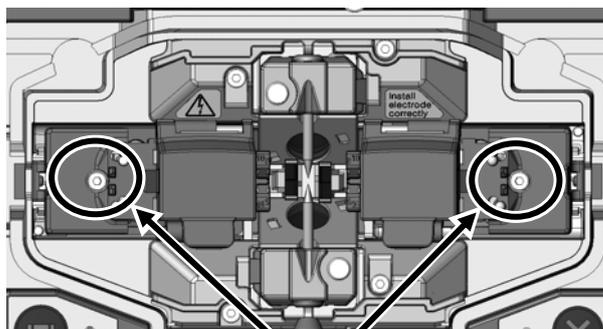


Coating clamp fixation screw

1. Loosen the right and left coating clamp fixation screw, and detach the coating clamp.

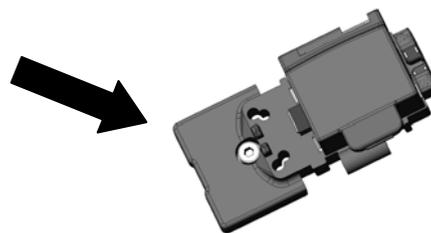


Coating clamp

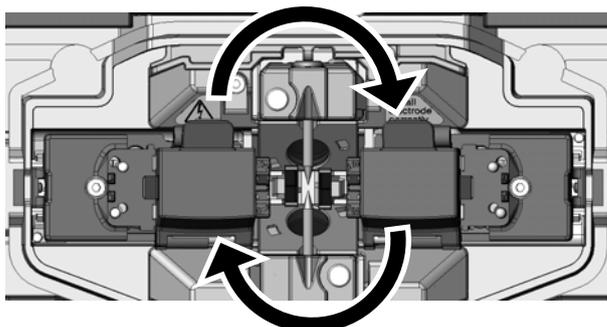

2. After replacing right and left coating clamp, tighten the coating clamp fixation screw. The lid of the coating clamp opens in the same direction as the front monitor type from the operator's position.


Universal clamp

TYPE-Q101-CA can clamp both a tight buffer and a loose buffer coating by the standard issue. Please change the position of the coating clamp lid as following procedures according to the kind of the coating.

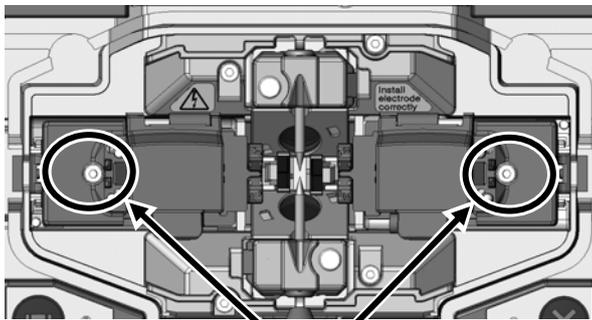


Coating clamp fixation screw

1. Loosen the coating clamp fixation screw, and detach the coating clamp.

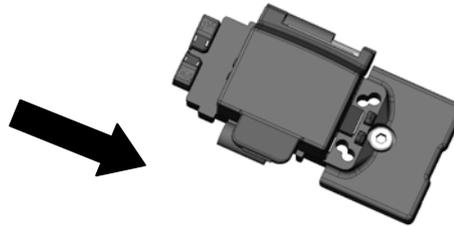


Coating clamp

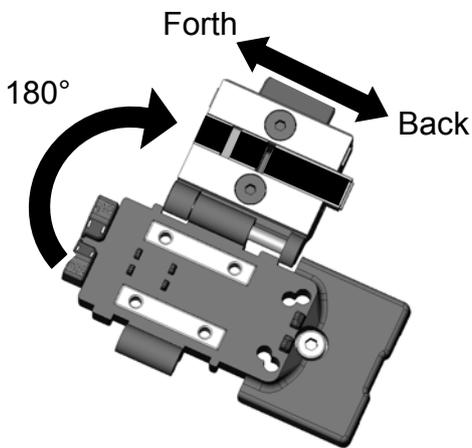

2. The lid can be moved back and forth by opening the coating clamp lid by 180°. Change the position of the lid according to the coating of the fiber, and the shut the lid.
 >>Tight buffer : back
 >>Loose buffer : forth

*Please prepare the loose buffer fiber as below.

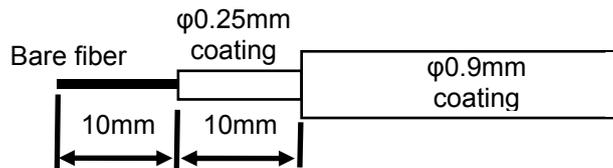


3. Fix the coating clamp back to the splicer.

Dual heat shrink oven

2 heat shrink ovens are equipped with the TYPE-Q101-CA. These ovens run individually and splicing operation can be improved more effectively.*

* Two ovens can be operated at the same time.

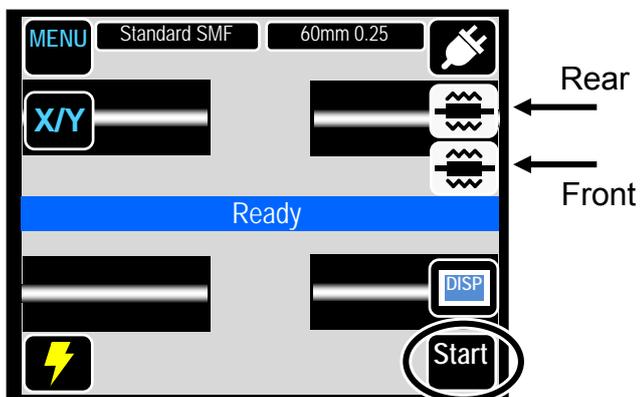


Heat cycle status indicator

The advancement of the heating cycle can be confirmed on the screen. The icon changes as the heating cycle advances.

(Refer to the page 2-13)


Fiber holder operation

By detaching the coating clamp, it is possible to splice by the fiber holder for a single fiber. Fiber holder FHS series made by Sumitomo can be applied.

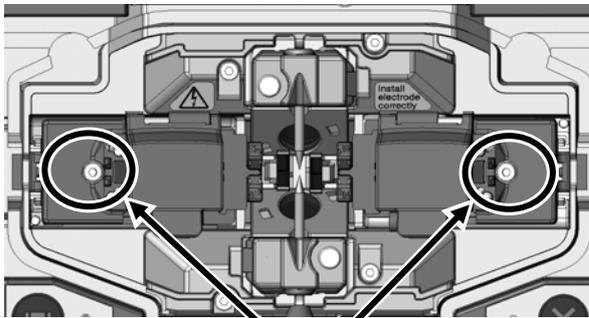


Coating clamp fixation screw

1. Loosen the coating clamp fixation screw, and detach the coating clamp.

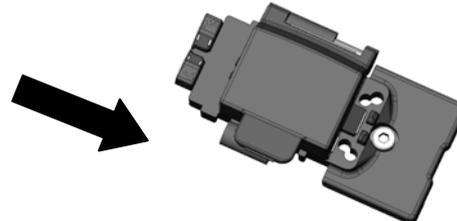


Coating clamp

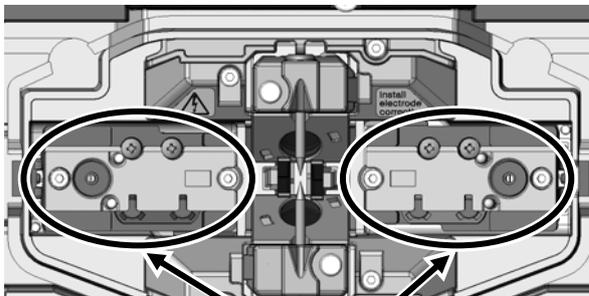

Holder stage


2. The holder stage appears. The fiber holder is set on the holder stage.

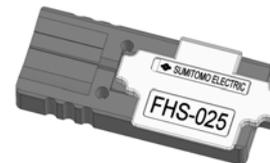

Fiber holder FHS-025

<Fiber holder operation with the back monitor type>

When the fiber holder is used by the back monitor type, change the direction that the fiber holder lid opens by the following procedures.

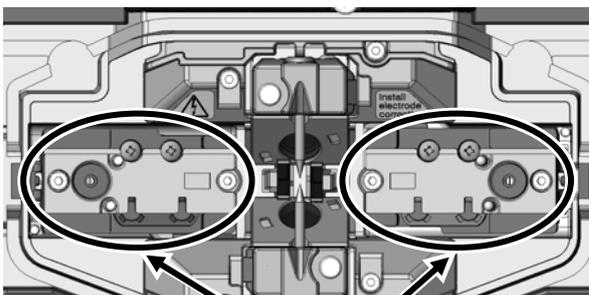


Holder stage

1. Loosen the holder stage fixation screw, and detach the holder stage.



Holder stage




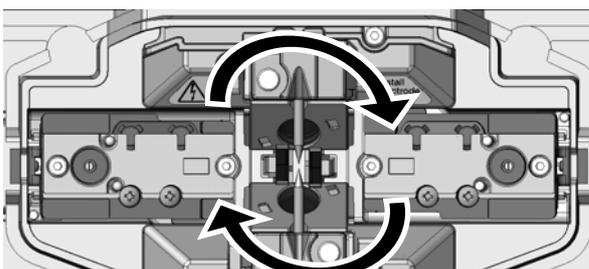


2. After replacing right and left holder stage, tighten the holder stage fixation screw. The lid of the fiber holder opens in the same direction as the front monitor type from the operator's position.

Detachable/attachable bare fiber pads


The bare fiber pad is moved in conjunction with the opening and closing of the hood. It can be separated from the hood to check to see if the fiber is clamped properly. The clamping condition can be corrected independently by moving clamp one by one.

Detaching and attaching bare fiber pads
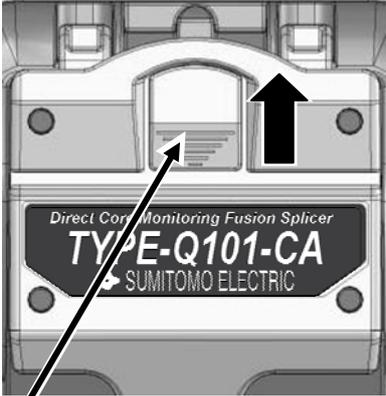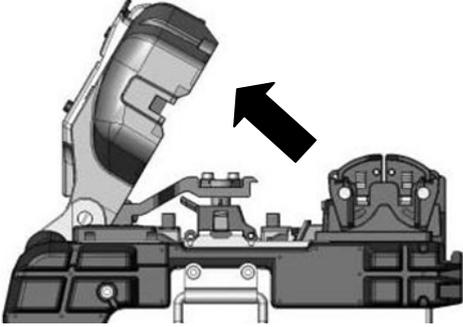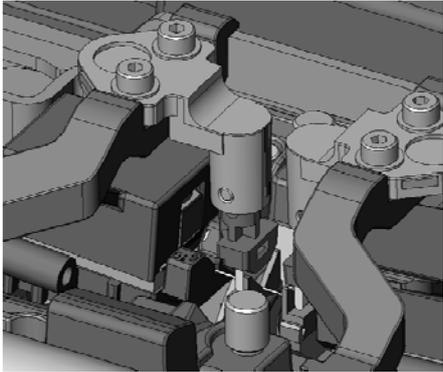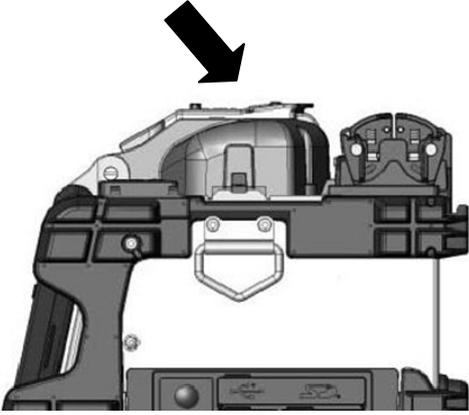
<p>1.</p>  <p>Bare fiber pad release button</p>	<p>2.</p> 
<p>Slide the bare fiber pad release button in the direction indicated by the arrow.</p>	<p>When the hood is opened, the bare fiber pad is removed from the hood.</p>
<p>3.</p> 	<p>4.</p> 
<p>You can check if the fiber is placed seated in the V-groove properly by the pad.</p>	<p>When the hood is closed, the hood catches the bare fiber pad. The hood and the pad are moved together.</p>

Heater clamp operation

Heater lid and heater clamp can be detached, or be synchronized by moving the lever of the heater clamp of both left and right.

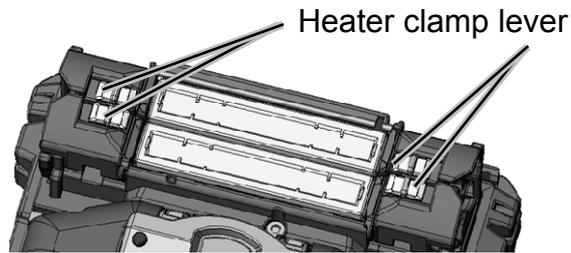

<Changing the operation>

<p>1.</p>	<p>2.</p>
<p>Move the heater clamp lever to the direction of the arrow. *Only right side lever is moved in this example.</p>	<p>The clamp lid and the heater lid move separately.</p>
<p>3.</p> <p>40mm sleeve end</p> <p>Protection sleeve</p>	<p>4.</p>
<p>The position of the protection sleeve can be adjusted by hand when the movement of the heater lid and heater clamp is separated. *40mm sleeve is appeared in this example.</p>	<p>The clamp lid and the heater lid move together by moving the heater clamp lever to the direction of the arrow.</p>

Auto start

The TYPE-Q101-CA is provided with Auto start function that automatically starts the splicing process and the heating operation.

Auto start splicing


When the fiber is inserted into the splicer and the hood is closed, the splicing process is automatically started. No need to press () or to touch “start” ().
(See also page 4-10.)

Auto start heating

When the fiber is placed into the heat shrink oven, the heating operation is automatically started. No need to press () or to touch “heat” ().
(See also page 4-10.)


Tripod fixing screws

The TYPE-Q101-CA has screw holes for M8 screw and 1/4-20UNC screw. In a high location, fix the splicer to a tripod to prevent it from dropping.

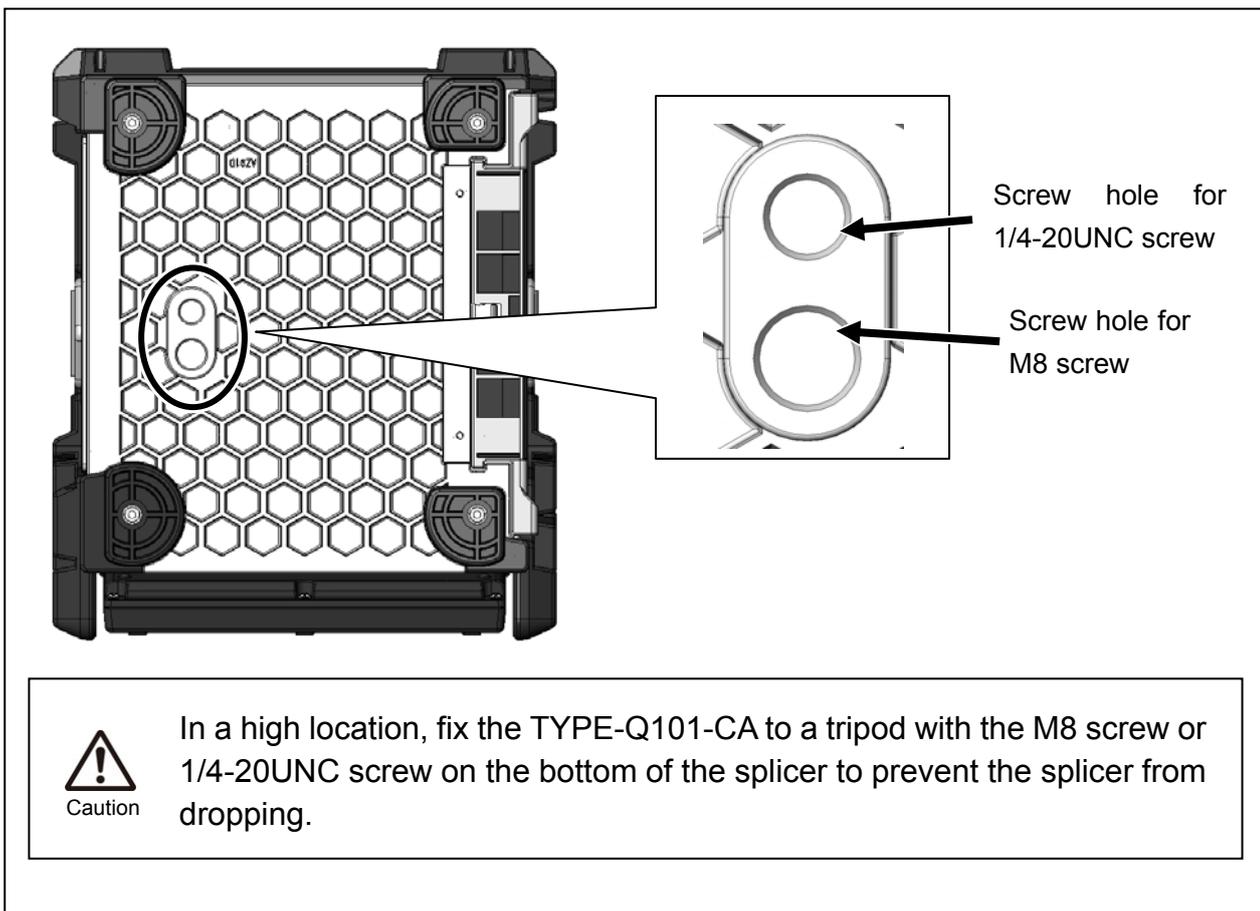

Hand strap

The strap is attached to TYPE-Q101-CA. Please install the strap surely according to the following procedure.

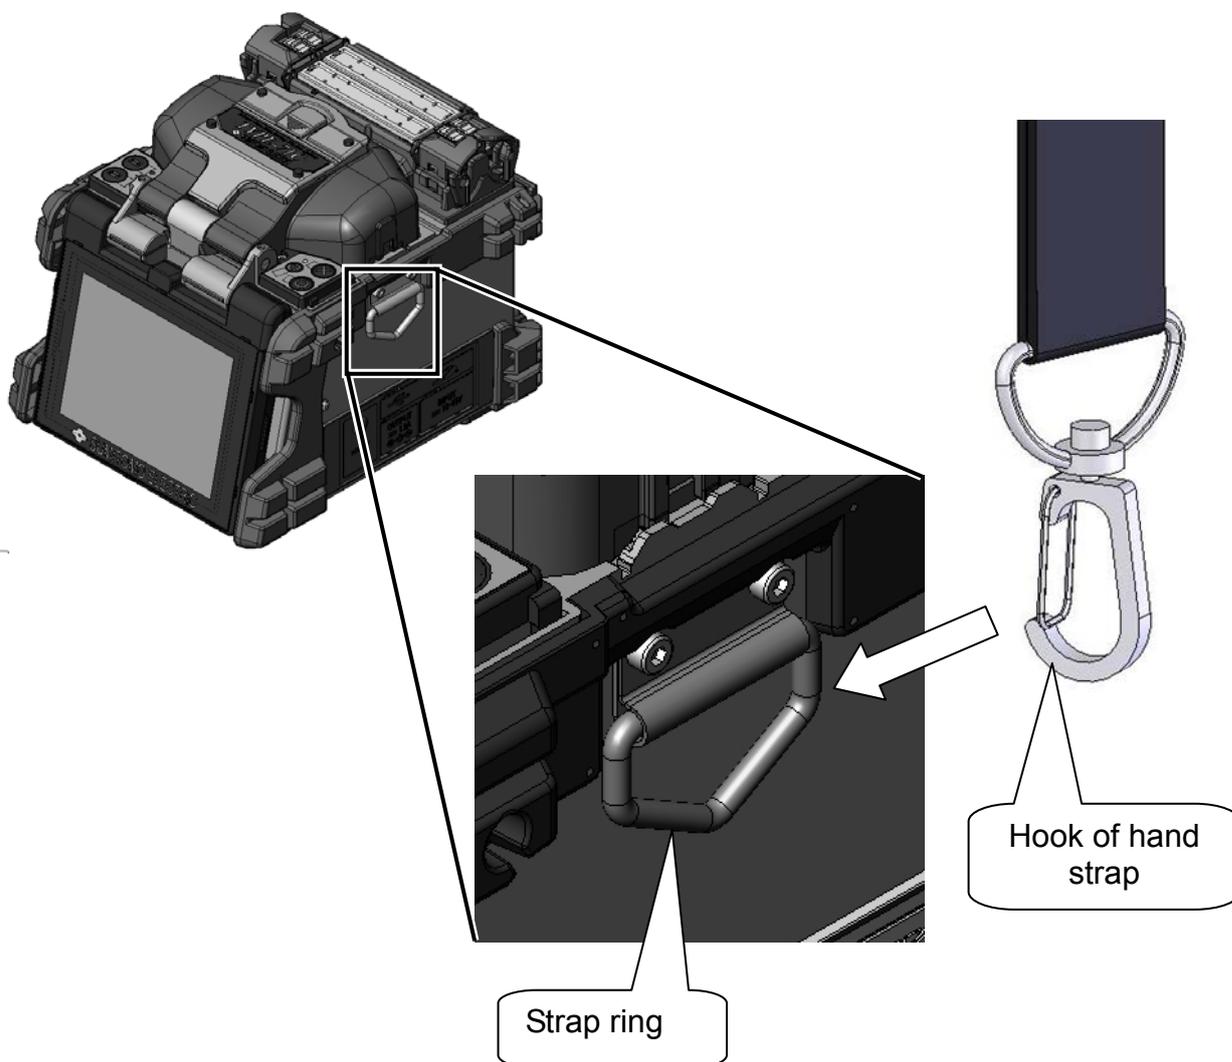

Please pass the hook at both ends of the hand strap through a right and left strap ring of TYPE-Q101-CA.



If the strap ring is not jointed surely with the hook of the hand strap, TYPE-Q101-CA might be dropped.

6. Troubleshooting

For repair and technical support, contact maintenance service center address described in the back cover.

Arc problems

The electrodes typically need replacement after **3000 splices**. Some common symptoms that indicate the electrodes need replacing are:

- High or inconsistent splice losses
- Bubbles in the fibers after splicing
- Diameter faults
- Fluttering or unstable arc observed on the monitor
- Fiber burned in half
- Sizzling noise while arcing

Refer to page 3-6, "Electrode replacement procedures".

If an electrode tip touches something, it will be deformed, causing poor arcing problems. Take care of the handling of electrodes.

Fiber breaking

When the splicing process is complete, a proof test may be performed on the fibers while in the fiber chucks. If the fibers are breaking when the proof test is performed, re-do an arc test. If the arc power level is too weak, the splice may be poor, resulting in fiber breaking.

If the fibers are breaking in spite of a good arc test result, clean the V-grooves and the bare fiber pads completely. Deterioration of a jacket remover/fiber cleaver may lead to fiber breaking. Clean the jacket remover/fiber cleaver completely.

Splicer does not power up

If the fusion splicer fails to turn on when the ON key is pressed, check the following:

- Verify that the battery pack is installed in the module bay properly
- Verify that the power plug is seated properly (the power cord is connected to the AC adaptor.)
- Verify that the LED of the AC adaptor lights up.
- If using battery operation, ensure that the battery is fully charged.

If the splicer still does not power up after checking the above, contact our maintenance service center.

Warranty and repair service

Before requesting a repair, try to locate the problem and identify the cause by referring to “6 Troubleshooting” at page 6-1. If you ensure that your machine is really in need of a repair, contact our maintenance service center.

Warranty period

1. About the warranty period of this product, please ask to the distributor that you purchased the product from.

Services after warranty period

After the warranty period expires, all products may be repaired for a reasonable service charge.

2. The following cases are the exception for repairing and replacing the product free of charge.
 - (1) Damage or malfunction caused by misuse, mishandling, non qualified repair, disassembly, modification, or any other irregular execution
 - (2) Damage or malfunction caused by drop, fall or any other faulty treatment such as to be explained in precautions on this manual.
 - (3) Damage or malfunction caused by actions that are beyond Sumitomo’s control including for example, fire, water flood, earthquake, lightening or similar disaster, or any other accident.
 - (4) Damage or malfunction caused by the use of Product in conjunction with accessories, products, or consumables not specified or approved by Sumitomo.
 - (5) Replacement of consumables
 - (6) Travel expense that is charged if a trip for repair is requested by the customer.
 - (7) Damage or malfunction caused by use of batteries and battery chargers not specified or approved by Sumitomo.
 - (8) Products founds corroded due to exposure to water or dew condensation, or cracked or deformed circuit board.
3. The customer shall bear the cost of returning the product to Sumitomo.

<Availability of spare parts>

The availability of spare parts for the splicer must be guaranteed for a period of 7 years from the end of the sale. However due to parts manufacturer’s reason, spare parts for repair might be impossible to get within such period.

○ Error message list

Please contact maintenance service center when it is not recovered if you take the measures below.

Error message	Countermeasure
The fibers are not placed correctly in the splicer.	Make sure that the right and left fibers are placed in the correct position of the splicer. >Refer to page 2-12
The splicer failed to adjust the LED brightness.	Clean the microscope lens and LED. >Refer to page 3-2 and 3-3
The splicer is unable to start splicing because the hood is open.	Close the hood. Very high voltage is generated with the splicing. The splicer never starts splicing with opening hood for safety.
The splicer could not detect the left (right) fiber.	Make sure that the left (right) fiber is placed in the correct position of the splicer. >Refer to page 2-12
The splicer failed to align the left (right) fiber.	Make sure that the left (right) fiber is placed in the correct position of the splicer. >Refer to page 2-12
The splicer failed to adjust the arc gap of the left (right) fiber.	There is a possibility that dust or dirt is on the V-groove and the fiber clamp when the error occurs repeatedly. Please execute the cleaning. >Refer to page 3-2 and 3-3
The splicer failed to inspect the right and left fibers.	Make sure that the right and left fibers are placed in the correct position of the splicer. >Refer to page 2-12
The cleave angle of the left (right) fiber exceeds the allowable limit.	Cleave the left (right) fiber again. >Refer to page 2-10
A lip is observed on the left (right) fiber end.	If the error occurs repeatedly, the cleaver blade might be deteriorated. Change the blade position or replace the blade. For further information, refer to the operation manual of the cleaver.
A chip is observed on the left (right) fiber end.	
The splicer failed to adjust the focus.	Make sure that the right and left fibers are placed in the correct position of the splicer. >Refer to page 2-12 Also, please confirm whether dust is on the fiber. There is a possibility that dust or dirt is on the V-groove and the fiber clamp when the error occurs repeatedly. Please execute the cleaning. >Refer to page 3-2 and 3-3
The splicer failed to splice the fibers.	Start the splice again.

[TYPE-Q101-CA specifications]

Optical fiber requirement	Material	Silica glass		
	Profile type	SMF (ITU-T G.652), MMF (ITU-T G.651) DSF (ITU-T G.653), NZDSF (ITU-T G.655) BIF (ITU-T G.657), EDF		
	Fiber diameter	80 – 150 μm		
	Fiber coating diameter	100 – 1,000 μm		
	Cleave length *1	<up to φ1,000 μm> 5 – 16 mm	<Drop cable / Indoor cable> 10mm	
	Fiber count	Single fiber		
Size and weight	Size (main body) *2	120W × 154D × 130H (mm)		
	Weight	Approx. 2.1 kg (with BU-11)		
	Monitor	4.1" touch screen color LCD display		
Standard performance	Typical splice loss *3	SMF : 0.02dB DSF : 0.04dB	MMF : 0.01dB NZDSF : 0.04dB	
	Typical splice cycle time *3	Approx. 7 seconds (Quick Mode) Approx. 7.5 seconds (SMF Standard Mode) Approx. 8 seconds (Automatic Mode)		
	Typical heating cycle time *1*4	40mm sleeve Approx. 28 seconds		
	Splicing/heating operation per fully charged battery *5	Approx. 200		
Functions	Loss Estimation	Provided		
	Splice data storage	10,000 splices		
	Splice image capture	64 splices		
	Proof test *6	1.96N (200gf)		
	Heat shrink oven	Dual automatic independent heaters (US patent 7,412,146)		
	Arc environment calibration	Automatically compensates for environmental condition changes		
	Arc test	Provided		
	V-groove white LED illumination	Provided		
	Interface	USB 2.0 mini-B type		
	Storage media	SD / SDHC memory card		
	Universal clamps for tight & loose buffer fiber	Provided		
	Reversible coating clamps	Provided		
	User-selectable heater clamp operation	Provided		
	Onboard user training video	Provided		
Remote interactive maintenance	Provided			
Programs	Splice programs	Max. 300		
	Heating programs	Max. 100		
Power supply	AC operation	With ADC-1430 Input: AC 100-240V 50/60Hz 1.1A		
	DC operation	Input: DC 10-15V, 4A		
	Battery operation	(With BU-11) 11.1V (4600mAh)		
	DC output	12V For Sumitomo's hot jacket remover		
Environmental conditions	Operation temperature *7	-10 °C ~ +50 °C		
	Storage temperature *7 *8	-40 °C ~ +80 °C		
	Altitude	0 to 6,000m		
	Windproof	Max. 15m/s		
	Water & Dust resistance	Equivalent to IP52 *9		
	Shock resistance	Drop from 76cm on 5 faces *10		
Electrode life	3,000 arc discharges *11			

- *1 The applicable fiber protection sleeves vary depending on the cleave length.
 - 60mm fiber protection sleeves •••• Cleave length 5-16mm
 - 40mm fiber protection sleeves •••• Cleave length 5-10mm
- *2 The protrusion part is not included.
- *3 With Sumitomo identical fiber (in room temperature. Varies depending on the condition of fiber.)
- *4 With the AC adaptor in room temperature (20°C). If the battery pack is used, the heating cycle time varies depending on the temperature and the remaining battery capacity.
 - With Sumitomo protection sleeve FPS-40 or FPS-1. Coating diameter 250µm.
- *5 With a new battery pack, 1 splice cycle time (splice + protection) completes in 90 seconds, in room temperature. Splice & heat cycles may vary depending on the operating environment.
- *6 Performed on the fiber stage after splicing.
- *7 Non-condensing
- *8 The Battery pack storage temperature range: -20°C ~ +50°C (if stored for less than 1 month),
-20°C ~ +40°C (if stored for less than 3 months), -20°C ~ +20°C (if stored for less than 1 year).
- *9 Water resistance: Operates normally after being exposed to water dripping at 3mm/min, for at least 2.5 min on each of 4 surfaces tilted at 15°. The test is held with the battery operation, carried out by Sumitomo, but does not guarantee that the product is free of faults or damage.
 - Dust resistance: Operates normally after 8 hours in a dust chamber containing dust of particle size 25µm or below. The test is held with the battery operation, carried out by Sumitomo, but does not guarantee that the product is free of faults or damage.
- *10 The machine spliced the fiber successfully after dropped from 76cm height on 5 faces (excluding top face) at free-fall. The test is held with the battery operation, carried out by Sumitomo, but does not guarantee that the product is free of faults or damage.
- *11 Electrode life is not guaranteed. This number may vary depending on the operating environment.

Tokyo (JAPAN)
Sumitomo Electric Industries, Ltd.
(Global Business Dept.)
3-9-1, Shibaura, Minato-ku, Tokyo 108-8539 JAPAN
Tel: +81-3-6722- 3246
<http://global-sei.com/ftb/>

North Carolina (U.S.A)
Sumitomo Electric Lightwave Corp.
78 Alexander Drive, P.O. Box 13445, Research Triangle park,
NC27709 U.S.A
Tel: +1(919) 541-8100
<http://www.sumitomoelectric.com>

London (U.K)
Sumitomo Electric Europe Ltd.
220 Centennial Park, Centennial Avenue, Elstree, Herts, WD6 3SL, U.K.
Tel: +44 (0)20- 8953- 8118
<http://www.sumielectric.com>

Hong Kong (China)
Sumitomo Electric Asia, Ltd.
Tel: +852-2576-0080
<http://www.seac-cn.com/>

Shenzhen (China)
SUMIDEN ASIA (SHENZHEN) Co.,LTD
Tel: +86-755-82706880
<http://www.seac-cn.com/>

Beijing (China)
SUMIDEN ASIA (SHENZHEN) Co., LTD.
(Beijing Branch)
Tel: +86 10 6590 8196
<http://www.seac-cn.com/>

Shanghai (China)
SUMIDEN ASIA (SHENZHEN) Co., LTD.
(Shanghai Branch)
Tel: +86 21 6235 1036
<http://www.seac-cn.com/>

Guangzhou (China)
SUMIDEN ASIA (SHENZHEN) Co., LTD.
(Guangzhou Branch)
Tel: +86 20 3877 2808
<http://www.seac-cn.com/>

Bangkok (Thailand)
Sumitomo Electric (Thailand) Limited
Tel: +66 (0)2 260 7231 to 5
<http://www.set-th.com/>

Singapore
Sumitomo Electric Interconnect Products
(Singapore) Pte Ltd.
Tel: +65 6261 3388
<http://www.seps.com.sg/>

Dubai (U.A.E.)
Middle east office
Tel: +971 4 701 7338 to 7341

New Delhi (India)
New Delhi Liason Office
Tel: +91 120 434 7701/7702

Manilla (Philippines)
SEI (PHILIPPINES) INCORPORATED
Tel: +63 2 811 2755/2756