


Directions for Quickly and Easily locating the RipCord for Sumitomo Freeform Ribon Fiber Bundles


P/N's: FP48PVS, FP72PVS, FP72PV3 & FP72PV4

SEL- QUIK-REF
PVS RIPCORDS


Note: Depending on the pressure applied, the fiber strands may break. If this occurs, please be sure to discard them safely.

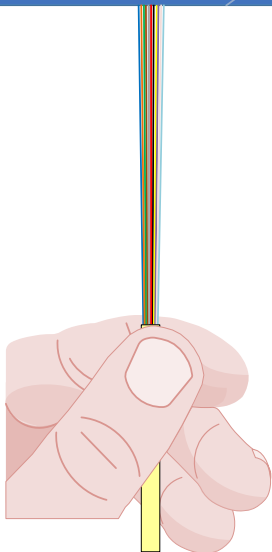


- 1). Peel the Jacket back to Expose 2"- 3" of the Ribbon Groups

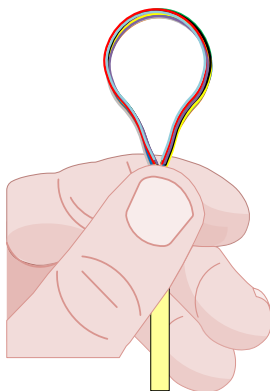

- 2). Fold the Ends of the Ribbons over to create a Loop

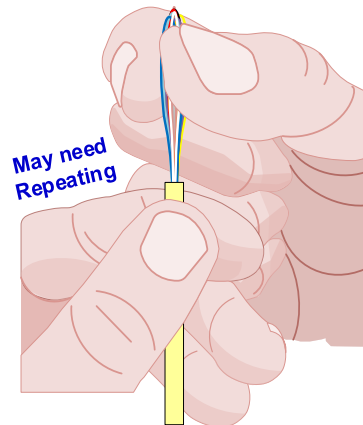


- 3). Now with your other hand, using your Index Finger & Thumb, Pinch All of the Fibers Tightly as if you were trying to Crease or Break them at the Apex of the Pinch

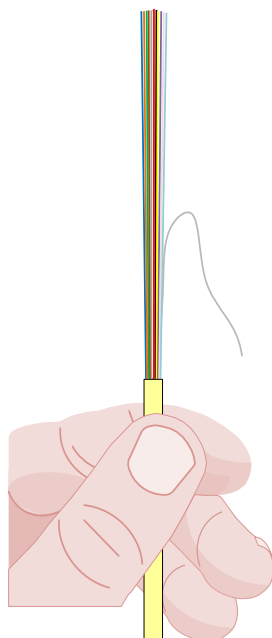

- 4). After Releasing your Pinch, the fibers will recover to a straight/vertical position while the polyester Rip-Cord will be bent to some degree and will be easy to identify

Note: In some instances it has been found that the Ripcord may require being repositioned more than once.

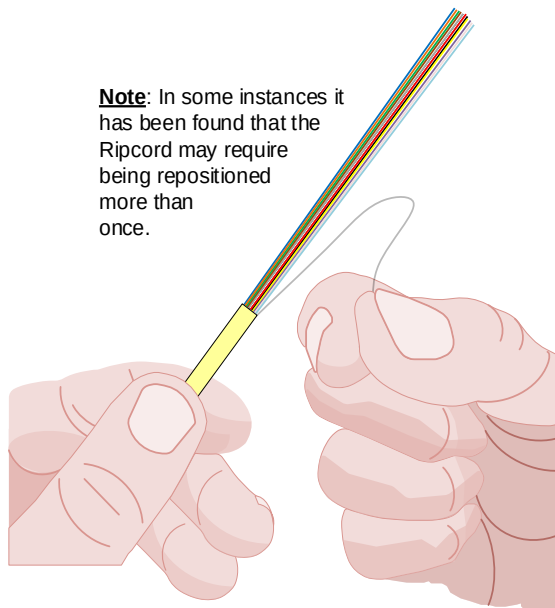

- 5). Before Pulling the Ripcord, make sure that its Positioned on the Outside of the Ribbons using extra precaution to not Cross-Over any of the Fibers. Carefully pull the Ripcord in case it begins to Bind, if it does, make sure to Reposition it back to the Outside of the Ribbons and carefully continue to strip it back to your mark.